

INSTRUCTION SHEET

**BIG BLUE INTERFACE**  
FOR  
**APPLE IIc or LASER 128**

**HARDWARE:** It is very easy to connect this interface. Simply plug the round end into the serial printer port on computer (the one next to the power connector). Then connect the serial cable on the printer to the other side. Don't worry, you *can't* plug it in upside down.

**SOFTWARE:** To set up the printer port for this printer simply insert the supplied disk in the built in disk drive (with the side labeled with your computer type up) and turn the power on. What could be easier. Only one catch, you have to use this disk to boot from everytime you will be using the printer.

Next, remove configuration disk. Put program in and type, PR#6. (This will boot your program)

**CAUTION:** Align pins on interface with pin holes on printer before connecting.