



# **SYNTOR X 9000**

## **High Band and UHF Radios**

NOTE: This supplement covers early Syntor X9000 radios, before the applicable manuals were published. It is intended to be used with Syntor X manuals, as follows:

VHF Syntor X radios, covered in manual 68P81060E05

UHF Syntor X radios, covered in manual 68P80100W45

Later Syntor X9000 radios are covered in the following manuals:

Low-Band Syntor X9000 radios: 68P80101W95

High-Band Syntor X9000 radios: 68P80102W05

UHF Syntor X9000 radios: 68P80102W04

### **Supplement to Instruction Manuals 68P80100W45 and 68P81060E05**

**Instruction Manual**

**68P80100W94-O**



**MOTOROLA INC.**

Communications  
Group

# **SYNTOR X 9000**

## **High Band and UHF Radios**

### **Contents**

<b>Model Charts</b> .....	iii
<b>Options Chart</b> .....	vii
<b>Performance Specification Charts</b> .....	viii
<b>Description and Operation</b> .....	W10001S38
1. Description .....	1
2. Operation .....	2
<b>Installation</b> .....	W10001S39
1. Service .....	1
2. FCC Requirements .....	1
3. Pre-Installation Tests .....	1
4. Installation Planning .....	1
5. Cable Routing .....	1
6. Radio Installation .....	2
7. Control Unit .....	3
8. Microphone Installation .....	3
9. Speaker Installation .....	4
10. Vehicle Interface Port (VIP) .....	4
11. Power Connections .....	4
12. Antenna Installation .....	4
13. Conclusion of Installation .....	4
<b>Cable Routing Detail and Radio Mounting Instructions</b> .....	PEW-2423
<b>Maintenance and Troubleshooting</b> .....	W10001S40
1. General .....	2
2. Oscillator Frequency .....	2
3. Compensation .....	2
4. General System Troubleshooting Guide .....	2
<b>Microcomputer System</b> .....	W10001S41
1. General .....	1
2. Theory of Operation .....	1
3. Detailed Circuit Description .....	2
<b>Schematic, Circuit Board Diagram, and Parts Lists for</b> <b>Personality Board</b> .....	PEW-2586

<b>Transmitter</b> .....	W10001S44
1. Transmitter (VHF/UHF) .....	1
<b>Common Circuits Board</b> .....	W10001S42
1. Description .....	1
2. Theory of Operation .....	1
3. Regulator Troubleshooting .....	2
Schematic, Circuit Board Diagram, and Parts List for Common Circuits Boards (UHF/VHF) .....	PEW-2587
<b>Control Unit, Cable Kits, and Accessories</b> .....	W10001S43
1. General .....	1
2. Theory of Operation .....	2
3. Control Unit Maintenance .....	4
4. Vehicle Interface Ports (VIP) .....	5
5. Power Connections .....	6
Troubleshooting Charts, Schematics, Circuit Board Diagrams, and Parts Lists for <i>SYNTOR X 9000</i> Control Unit .....	PEW-2584
Exploded View and Parts List for Control Head .....	PDW-2425
Negative-Ground Cable Wiring Diagrams .....	PBW-2043
Microphone, Speaker, and Accessories .....	PEW-2048

[illegible]

● = ONE ITEM SUPPLIED  
■ = INDICATES BREAKDOWN IN SEPARATE CHART

				ITEM	DESCRIPTION
●				■ HUD1675A	UNIFIED CHASSIS, NON-PREAMP, 150-174 MHz
	●			■ HUD1694A	UNIFIED CHASSIS, NON-PREAMP, RANGE 1
●	●			HCN1033A	CONTROL HEAD
●	●			HAD4002A	BROADBAND ANTENNA
●	●			HKN4241A	POWER CABLE, NEGATIVE-GROUND 17'
●	●			HKN4256A	POWER CABLE WITH KEYLOAD, NEGATIVE-GROUND 17'
●	●			HKN4051A	POWER CABLE AND FUSE
●	●			HLN4921A	TRUNNION
●	●			HLN4111A	INSTALLATION KIT
●	●			HLN4243A	BOTTOM COVER
●	●			HLN4262A	TUNING TOOL
●	●			HLN4263A	TOP COVER
●	●			HLN4666A	MOUNTING TRAY
●	●			HMN1031A	SYNTOR X 9000 MICROPHONE
●	●			HSN4018A	SYNTOR X 9000 SPEAKER
●	●			HLN4978A	NAMEPLATE
●	●			HBN4002A	PACKING
●	●			HLN4952A	FUSE KIT FOR GREEN AND ORANGE LEADS
●	●			HLN4963A	CHANNEL SCAN PUSHBUTTON
●	●			HLN4983A	SYNTOR X 9000 BASIC BUTTONS
●	●			HLN5027A	SYNTOR X 9000 SOFTWARE
●	●			HLN5028A	SYNTOR X 9000 EEPROM

iii

## Unified Chassis

● = ONE ITEM SUPPLIED

**MXW-2447-O**

# Model Chart for UHF *SYNTOR X 9000* Radio Range 1, 406-420 MHz Range 2, 450-470 MHz

## CODE:

- = ONE ITEM SUPPLIED
- = INDICATES BREAKDOWN IN SEPARATE CHART

MODEL	DESCRIPTION				ITEM	DESCRIPTION
	T74KEJ7J04AK	32-MODE, 406-420 MHz, RANGE 1	T74KEJ7J04AK	32-MODE, 450-470 MHz, RANGE 2		
	●				■HUE2025A	UNIFIED CHASSIS, NON-PREAMP, 450-470 MHz
	●				■HUE2029A	UNIFIED CHASSIS, NON-PREAMP, 406-420 MHz
	●	●			HCN1033A	CONTROL UNIT
	●	●			HKN4051A	POWER CABLE AND FUSE KIT
	●	●			HLN4921A	TRUNNION BREAKAWAY
	●	●			HLN4111A	INSTALLATION KIT
	●	●			HLN4243A	BOTTOM COVER
	●	●			HLN4262A	TUNING TOOL
	●	●			HLN4263A	TOP COVER
	●	●			HLN4666A	MOUNTING TRAY
	●	●			HMN1031A	SYNTOR X 9000 MICROPHONE
	●	●			HSN4018A	SYNTOR X 9000 SPEAKER
	●	●			HLN4979A	NAMEPLATE
	●	●			HBN4002A	PACKING
	●	●			HLN4952A	FUSE KIT FOR GREEN AND ORANGE LEADS
	●	●			HLN5066A	CHANNEL SCAN PUSHBUTTON
	●	●			HLN4983A	SYNTOR X 9000 BASIC BUTTONS
	●	●			HLN5027A	SYNTOR X 9000 SOFTWARE
	●	●			HLN5028A	SYNTOR X EEPROM
	●	●			HLN5105A	HANDLE AND SHIELD
	●				TAE6052A	ROOFTOP ANTENNA
	●				TAE6051A	ROOFTOP ANTENNA

MXW-2451-O

# **Model Chart for UHF SYNTOR X 9000 Radio Unified Chassis Range 1, 406-420 MHz Range 2, 450-470 MHz**

**CODE:**  
● = ONE ITEM SUPPLIED

MODEL	DESCRIPTION				ITEM	DESCRIPTION
	HUE2029A	HUE2031A	HUE2025A	HUE2027A		
	●				HLE1082A	INTERNAL CASTING ASSEMBLY
	●				HLE4192A	VCO
	●				HLE4182A	MIXER
	●				HLE1080B	VCO BUFFER
	●				HLN4467A	RECEIVE FILTER BOARD
	●				HLN4251A	VCO INTERCONNECT
	●				HLN4737A	INTERNAL CASTING HARDWARE
		●			HLE1087A	INTERNAL CASTING PREAMP HARDWARE
		●			HLE4192A	VCO
		●			HLN4182A	MIXER
		●			HLE1080B	VCO BUFFER
		●			HLE4187A	PREAMP
		●			HLN4251A	VCO INTERCONNECT
		●			HLN4468A	INTERNAL CASTING PREAMP HARDWARE
●					HLE1081A	INTERNAL CASTING ASSEMBLY
●					HLE4191B	VCO
●					HLE4181B	MIXER
●					HLE4467A	RECEIVE FILTER BOARD
●					HLE1080B	VCO BUFFER
●					HLN4251A	VCO INTERCONNECT
●					HLN4757A	INTERNAL CASTING HARDWARE
●					HLE1603A	INTERNAL CASTING PREAMP ASSEMBLY
●					HLE4191B	VCO
●					HLE4181B	MIXER
●					HLE1080B	VCO BUFFER
●					HLE4187A	PREAMP
●					HLN4251A	VCO INTERCONNECT
●					HLN4758A	INTERNAL CASTING PREAMP HARDWARE
● ● ● ●					HLN4925B	PERSONALITY BOARD
● ● ● ●					HLE4065A	COMBINER SUBSTRATE
● ●					HLE4155A	COMBINER SUBSTRATE
● ● ● ●					HKN4130A	INTERCONNECT CABLE
● ● ● ●					HLE4168A	PA POWER TRANSISTORS
● ● ● ●					HLE4345A	POWER DISTRIBUTION BOARD
● ● ● ●					HLN4046A	PA FEEDTHRU PLATE
● ● ● ●					HLN4462B	RF BOARD
● ● ● ●					HLN4905A	COMMON CIRCUITS BOARD
● ● ● ●					HLN4460B	ANTENNA SWITCH
● ● ● ●					HLE4175A	DIRECTIONAL COUPLER
● ●					HLN4465A	PA HARDWARE
● ●					HLN4770A	PA HARDWARE
● ● ● ●					HLN4459A	MODEL HARDWARE
● ●					HLE4070A	SPLITTER SUBSTRATE
●					HLE4357A	SPLITTER SUBSTRATE
● ● ● ●					TRN8857B	BUS WIRES
● ● ● ●					HLN4259A	FRONT HARDWARE
● ●					HLE4074A	DRIVER SUBSTRATE
● ●					HLE4355A	DRIVER SUBSTRATE
● ●					HLE4079A	PREDRIVER SUBSTRATE
●					HLE4356A	PREDRIVER SUBSTRATE
● ●					HLE4354A	LOW-LEVEL AMPLIFIER
● ●					HLE4189A	LOW-LEVEL AMPLIFIER
● ●					HLN4759A	LLA INTERFACE BOARD
● ●					HLN4466A	LLA INTERFACE BOARD
● ●					HFE4015A	HARMONIC FILTER
● ●					HFE4013A	HARMONIC FILTER
● ●					HLN4040A	CAPACITOR KIT
● ●					HLN4994A	TRANSFORMER BRACKET KIT

\*USED WITH W12

MXW-2452-O

## Options Chart

The options described below apply to all Conventional and *Securenet* models unless otherwise indicated. Options that have common suffixes with *SYNTOR X* are indicated with an asterisk (\*).

Options	Description
W11___*	Time-Out Timer (60 seconds)
W12___	RF Preamplifier, VHF
W12___	RF Preamplifier, UHF
W20___	DTMF Microphone
W54___	Positive-Ground cable, 22'
W54___	<i>Securenet</i> Positive-Ground Cable, 22'
W70___*	Omit Antenna, VHF
W70___	Omit Antenna, UHF
W70___	Omit Antenna, 800-MHz
W71___	Omit Microphone
W87___	Omit Speaker
W90___	Omit Accessories, VHF
W90___	Omit Accessories, UHF
W90___	Omit Accessories, 800-MHz
W90___	<i>Securenet</i> Omit Accessories, VHF
W90___	<i>Securenet</i> Omit Accessories, UHF
W101___	Negative-Ground Cable, 22'
W101___	<i>Securenet</i> Negative-Ground Cable, 22'
W123___*	3.5dB Gain UHF Antenna
W124___*	5.0dB Gain UHF Antenna
W268___	<i>Securenet</i> Code Storage Battery
W269___	Electronic Siren/PA (Negative-Ground)
W269___	Electronic Siren/PA (Positive-Ground)
W290___	Optional Select Coded Squelch (Hardware Only)
W290___	Optional Select Coded Squelch
W303___	<i>Securenet</i> Dual Code Select
W421___*	Dual Priority <i>Channel Scan</i>
W425___	Repeater Talkaround
W425___	Repeater Talkaround (Hardware Only)
W427___*	"AND" Squelch
W428___*	Variable Time-Out Timer
W452___	<i>MDC-600</i> ID and Emergency
W481___	Data Inhibit
W495___	Mode-Slaved <i>Channel Scan</i>
W496___	Negative-ground Cable, 10'
W496___	<i>Securenet</i> 10' Negative-Ground Cable
W544___*	Base Loaded Rooftop VHF Antenna
W577___*	Coax Bumper Mount VHF Antenna
W578___*	Coax Side Mount VHF Antenna
W589___	Public Address, Negative-Ground
W589___	Public Address, Positive-Ground
W591___	Auxiliary Switch Panel
W681___	<i>MDC-600</i> Selective Call
W688___	Hidden Emergency Pushbutton
W703___*	Talkback <i>Channel Scan</i>
W711___	Standard Mobile Voice Storage
W712___	Extended Mobile Voice Storage
W814___	<i>MDC-600</i> ID sent at end of transmission only
W824___	<i>MDC-600</i> Status
W825___	<i>MDC-600</i> Message
W844___*	Plant Programming
W873___	Emergency Button on Control Unit
W929___	Omit <i>Channel Scan</i>
W930___	64-Mode Operation
W940___	<i>Securenet</i> Spare Encryption Module

## VHF Systems 9000 Performance Specifications

### General

Number of Modes	Models available in 32-mode configuration. Standard 64 modes optional.				
Channel Resolution	Multiples of 5.0 kHz or 6.25 kHz				
Squelch Options	<i>Private-Line</i> and <i>Digital Private-Line</i> coded squelch are standard and available in the same radio unit. Carrier squelch and multiple coded squelch are optional.				
Primary Power	$\pm 12$ V dc with a dc isolated floating ground system. Radio supplied for operation with negative-ground vehicles. Optional cable kit permits operation with positive-ground vehicles.				
Radio Unit Dimensions	2.5" H $\times$ 11.5" W $\times$ 16.0" L (63.5mm $\times$ 292mm $\times$ 406mm)				
Radio Unit Weight	Approximately 22.5 lb (10.2 kg). Shipping weight approximately 37.5 lb (17 kg)				
Metering	A single-scale 0–50 microampere meter or Motorola portable test set can be used to measure all circuits essential to checking and adjustments.				
Model (Series)	Frequency (MHz)	Minimum RF Power Output	Maximum Battery Drain (inc. std. accessories)		
			Standby @ 13.8 V	Receive at Rated Audio @ 13.8 V	Transmit @ Rated Power
T73KEJ	150–174	100 W Variable to 55 W	1.2A	3.5A	27A
T43KEJ	150–174	40 W Variable to 20 W	1.2A	3.5A	14A

### Transmitter

Output Impedance	50 ohms
Spurious and Harmonic Emissions	More than 70 dB below carrier (for EIA spec. RS152B)
Frequency Stability	$\pm .0002\%$ of reference frequency from $-30^{\circ}$ to $+60^{\circ}$ C ambient ( $+30^{\circ}$ C reference)
Maximum Frequency Separation	24 MHz without degradation
Modulation	15F2 and 16F3, $\pm 5$ kHz for 100% @ 1000 Hz
Audio Sensitivity	0.080 V $\pm 3$ dB for 60% maximum deviation @ 1000 Hz
FM Hum and Noise EIA Method	
Companion Receiver Response	– 60 dB
RS152B Response	– 50 dB
Audio Response	+ 1, – 3 dB of 6 dB/octave pre-emphasis characteristic from 300 to 3000 Hz
Audio Distortion	Less than 2% @ 1000 Hz, 60% maximum deviation
FCC Designation	CC3372—Licensable under FCC rules Parts 22, 74, and 90 for 15F2, 16F3, and 16F9 emission

### Control Unit

Dimensions (excluding mounting bracket):	6½" W $\times$ 3¾" H $\times$ 11¼" D (166mm $\times$ 87mm $\times$ 42mm)
Weight	1 lb (456 g)
Current Drain	300 mA

### Speaker

Dimensions (excluding mounting bracket)	5" $\times$ 5" $\times$ 2½" (127mm $\times$ 127mm $\times$ 63mm)
Weight	1.5 lb (680 g)

## VHF Systems 9000 Performance Specifications (continued)

### Receiver

Input Impedance	50 ohms			
EIA Modulation Acceptance	$\pm 6.5$ kHz minimum			
Frequency Stability	$\pm .0002\%$ of reference frequency from $-30^{\circ}\text{C}$ to $+60^{\circ}\text{C}$ ambient ( $\pm 30^{\circ}\text{C}$ reference)			
Maximum Frequency Separation	24 MHz without degradation			
Sensitivity	<b>With Pre-Amp</b>		<b>Without Pre-Amp</b>	
20 dB quieting	0.25 $\mu\text{V}$		0.50 $\mu\text{V}$	
EIA SINAD	0.175 $\mu\text{V}$		0.35 $\mu\text{V}$	
Intermodulation				
EIA SINAD	80 dB		85 dB	
Spurious & Image Rejection	85 dB		90 dB	
<b>Selectivity EIA SINAD</b>	<b>Adjacent Channel</b>	<b>Alternate Channel</b>	<b>4th Channel</b>	<b><math>\pm 400</math> kHz</b>
30 kHz Ch.	90 dB	95 dB	100 dB	110 dB
25 kHz Ch.	85 dB	90 dB	95 dB	110 dB
Squelch Sensitivity	Carrier squelch (at threshold setting), tone-coded squelch (fixed), digital-coded squelch (fixed), are all 8 dB SINAD (0.25 $\mu\text{V}$ maximum without preamp; 0.13 $\mu\text{V}$ with preamp).			
Audio Output	15 watts @ less than 3% distortion into an 8-ohm load			
FCC Designation	RC0291			

## UHF Systems 9000 Performance Specifications

### General

Number of Modes	Models available in 32-mode configuration. Standard 64-mode optional.				
Channel Resolution	Multiples of 5.0 kHz or 6.25 kHz				
Squelch Options	<i>Private-Line</i> and <i>Digital Private-Line</i> coded squelch are standard and available in the same radio unit. Carrier squelch and multiple coded squelch are optional.				
Primary Power	± 12 V dc with a dc-isolated floating ground system. Radio supplied for operation with negative-ground vehicles. Optional cable kit permits operation with positive-ground vehicles.				
Radio Unit Dimensions	2.65" H × 11.5" W × 16.0" L (63.5mm × 292mm × 406mm)				
Radio Unit Weight	Approximately 22.5 lb (10.2 kg). Shipping weight approximately 37.5 lb (17 kg)				
Metering	A single-scale 0–50 microampere meter or Motorola portable test set can be used to measure all circuits essential to checking and adjustments.				
Model (Series)	Frequency (MHz)	Minimum RF Power Output	Maximum Battery Drain (inc. std. accessories)		
			Standby @ 13.8 V	Receive at Rated Audio @ 13.8 V	Transmit @ Rated Power
T74KEJ	450–470	100 W Variable to 50 W	1.2A	3.5A	31A
T74KEJ	406–420	100 W	1.2A	3.5A	31A

### Transmitter

Output Impedance	50 ohms
Spurious and Harmonic Emissions	More than 70 dB below carrier (for EIA spec. RS152B)
Frequency Stability	± .0002% of reference frequency from – 30° to + 60°C ambient (+ 30°C reference)
Maximum Frequency Separation	20 MHz without degradation for 450–470 radios, 14 MHz without degradation for 406–420 radios.
Modulation	15F2 and 16F3, ± 5 kHz for 100% @ 1000 Hz
Audio Sensitivity	0.080 V ± 3 dB for 60% maximum deviation @ 1000 Hz
FM Hum and Noise EIA Method Companion Receiver Response	– 60 dB
RS152B Response	– 50 dB
Audio Response	+ 1, – 3 dB of 6 dB/octave pre-emphasis characteristic from 300 to 3000 Hz
Audio Distortion	Less than 2% @ 1000 Hz, 60% maximum deviation
FCC Designation	ABZ89FT4633—Licensable under FCC rules Parts 22, 74, and 90 for 15F2, 16F3, and 16F9 emission

### Control Unit

Dimensions (excluding mounting bracket)	6½" W × 3⅜" H × 1⅞" D (166mm × 87mm × 43mm)
Weight	1 lb (456 g)
Current Drain	300 mA

### Speaker

Dimensions (excluding mounting bracket)	5" × 5" × 2½" (127mm × 127mm × 63mm)
Weight	1.5 lb (680 g)

## UHF Systems 9000 Performance Specifications (continued)

### Receiver

Input Impedance	50 ohms			
EIA Modulation Acceptance	$\pm 7.0$ kHz minimum			
Frequency Stability	$\pm .0002\%$ of reference frequency from $-30^{\circ}\text{C}$ to $+60^{\circ}\text{C}$ ambient ( $\pm 30^{\circ}\text{C}$ reference)			
Maximum Frequency Separation	Range 1: 14 MHz without degradation Range 2: 20 MHz without degradation			
Sensitivity	With Pre-Amp		Without Pre-Amp	
20 dB quieting	0.25 $\mu\text{V}$		0.50 $\mu\text{V}$	
EIA SINAD	0.20 $\mu\text{V}$		0.35 $\mu\text{V}$	
Intermodulation				
EIA SINAD	80 dB		85 dB	
Spurious and Image Rejection	90 dB		95 dB	
<b>Selectivity EIA SINAD</b>	<b>Adjacent Channel</b>	<b>Alternate Channel</b>	<b>4th Channel</b>	<b><math>\pm 400</math> kHz</b>
25 kHz Ch.	85 dB	90 dB	100 dB	110 dB
Audio Output	15 watts @ less than 3% distortion into an 8-ohm load			
FCC Designation	ABZ89FT4633			



## 1. Description

This supplement affects the UHF/VHF *SYNTHOR X 9000* radios. In some cases, references in each section are to your existing Instruction Manuals. The information either replaces or adds to your manuals.

### 1.1 ALTERNATE MEMORY MODULE

This section follows section 2.1.7 in the Description and Operation section of your Instruction Manual.

The alternate memory module (HLN1125A) is used in *SYNTHOR X 9000* radios and is designed around a five-volt programmable 2k × 8 bit electrically erasable programmable read only memory (EEPROM). When installed in a *SYNTHOR X 9000* radio, the EEPROM is in a read only mode and operates exactly as the fusible link PROM memory modules (HLN1087 and 1088) do.

The EEPROM can be reprogrammed in excess of 10,000 times. The Epson HX-20 (Y1069) or IBM PC/XT/AT with the correct software may be used to reprogram part or all of the EEPROM. Modes and options are added or changed any time without purchasing a new memory module. The 2K EEPROM handles up to 32 modes. An optional 8k EEPROM is available for 64-mode operation (W930).

The Epson or IBM programmers interface to the radio through a remote interface box (RIB). This box does the level shifting necessary to communicate to the radio over the RS-422 serial bus. The bus connects to the radio front connector through a T-connector.

### 1.2 DIRECT ENTRY SWITCH PANEL

This section replaces section 2.2.8 in the Description and Operation section of your Instruction Manual.

The optional direct entry switch panel allows direct selection of certain features, eliminating scrolling through choices while in the configuration state. These features include selection of modes, operator-select PL codes, and status/message. The switch panel contains eight momentary pushbuttons and mounts with the control unit.

### 1.3 AUXILIARY SWITCH PANEL


This section is in addition to your Instruction Manual and should be added after section 2.2.8 within Description and Operation.

The optional auxiliary switch panel is a supplemental bank of eight switches used to control any electrical functions in your vehicle.

### 1.4 RECEIVER

This paragraph replaces the second paragraph of section 3.2.3 in the Description and Operation section of your Instruction Manual.

The squelch circuit gives the microcomputer two signals (channel activity and squelch tail). Channel activity and squelch tail signals are normally in high and low states respectively. When an RF carrier appears, both signals switch states telling the microcomputer to enable the audio stages. The channel activity line is the preliminary indicator during channel scan operation, while the squelch tail line protects the audio signals against fading.

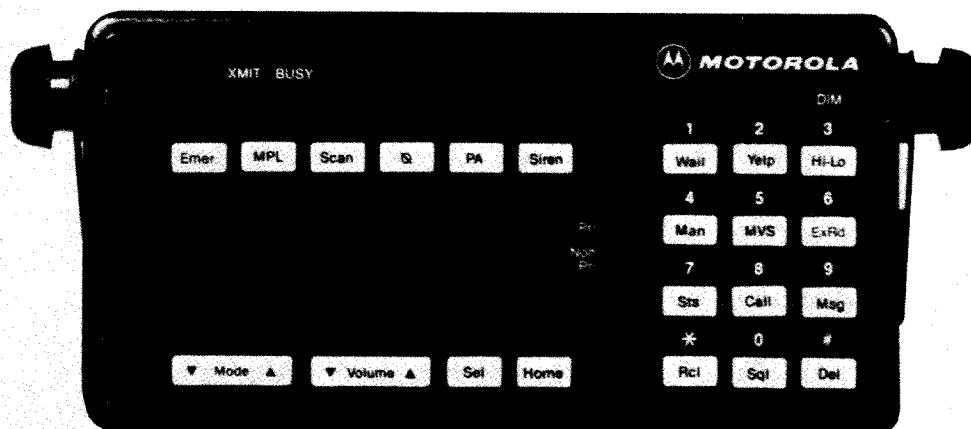

GBW-2538-0

### *Typical SYNTOR X 9000 Control Unit*

## 2. Operation

### 2.1 INTRODUCTION

The *SYNTOR X 9000* Control Unit has the following controls and indicators:

- Power on/off slide switch
- DIM button for display brightness
- Rocker switch volume control
- Rocker and keypad mode-select control
- Channel BUSY indicator light
- Transmit indicator light
- Priority channel indicator light
- Non-priority channel indicator light
- Squelch button to set volume and monitor channel activity
- Control buttons for Scan, Operator-Select MPL, and other radio options

(3) For modes with PL/DPL turn squelch on.

(4) Adjust the volume level to a comfortable listening level during an incoming signal.

(5) To transmit, follow the steps in the next section. To turn off the power, slide the power ON/OFF switch to the right until it locks. The display goes off.

### 2.3. *SYNTOR X 9000* MODES

The following replaces section 4.1 of the Operation section in your Instruction Manual.

The *SYNTOR X 9000* modes are preprogrammed into the radio's memory at the factory in accordance with the user's requirements. Programming for up to 32 modes is standard. A 64-mode option (W930) is available. For example, a mode (depending on options used) may be programmed as follows:

### 2.2 TO RECEIVE

(1) Slide the power ON/OFF switch to the left until it locks in position. The Control Unit display comes on showing "SELF CHECK" for two to three seconds, then displays the current selected mode. If the radio system fails its diagnostics on power up, an error code displays. See the Maintenance and Troubleshooting section. If the failure is critical, the radio ceases operation.

(2) Select a mode on which to operate.

- Mode: 1
- Receive frequency: XXXXXX
- Transmit frequency: XXXXXX
- Receive code: PL code 1A
- Transmit code: PL code 1A
- Time-out timer: one minute
- Opening squelch: AND
- Channel Scan: ON
- Internal list: Modes 7 and 8
- Highest-priority mode: Mode 1
- Second-highest-priority mode: Mode 4



**MOTOROLA INC.**

Communications  
Group

# Installation

## 1. Service

Should you wish to purchase a service contract for your Motorola equipment, contact your Motorola Service Representative, or write to:

National Service Manager  
Motorola Communications Sector  
1301 E. Algonquin Rd.  
Schaumburg, IL 60196

## 2. FCC Requirements

See the FCC Requirements section in the *SYNTOR X 9000 Two-Way Radio Instruction Manual*.

## 3. Pre-Installation Tests

Perform pre-installation tests according to the instructions detailed in your Instruction Manual.

## 4. Installation Planning

Perform installation planning procedures according to the instructions detailed in your Instruction Manual, with one exception: the *SYNTOR X 9000* control unit does not have microphone hangup clip holes on the control unit as outlined in the OPERATOR'S CONTROLS paragraph.

## 5. Cable Routing

(See Figures 1 and 2.)

(1) Determine the position that the radio will occupy in the trunk compartment and leave enough slack cable to permit the plug to be easily connected or disconnected from the radio.

(2) Work from the trunk space forward. In some cars there is enough room below the fiberboard trunk partition to admit the cables. If this is not the case, make an opening through the partition. Remove the back seat.

(3) If the vehicle is so equipped, run the cables in the wire troughs. Otherwise, route the cables under the floor covering alongside the drive shaft hump. Pull the cables into the back seat area, under the floor mats, under the front seat, and under the front mats, exiting up under the dash at the firewall. Pull the control unit end of the multi-conductor cable to the approximate location of the control unit. Route the red power cable into the engine compartment through any convenient hole in the firewall. If necessary, drill a 1/2-inch diameter hole elsewhere in the firewall, install a grommet, and route the cable through the hole.

(4) Pull the red power cable into the engine compartment. A cable fuse kit is supplied with a ring tongue lug on one end and an in-line fuseholder on the other. A small section of heat-shrinkable tubing is supplied with each cable. Trim any excess length of red cable. Slide the heat-shrinkable tubing over the red power lead from the radio. Slide the strapped portion of the red cable into the end of the in-line fuseholder and crimp the joint using a Burndy Model Y10B (indent "U" crimp). If this tool is not available, solder the joint.

(5) Slide the heat-shrinkable tubing over the connection and shrink the tubing with a Motorola Model ST697 Heat Gun or equivalent heated air source. Remove the fuse from the fuseholder and reconnect the holder. Fasten the ring-tongue lug on the end of the cable to the battery's ungrounded terminal or to some point directly connected to the ungrounded terminal of the battery (such as the starter solenoid). Move the in-line fuseholder to a convenient location on one of the sheet metal parts of the engine compartment. Center punch and drill a 5/64" (.140") hole through the mounting surface. Then

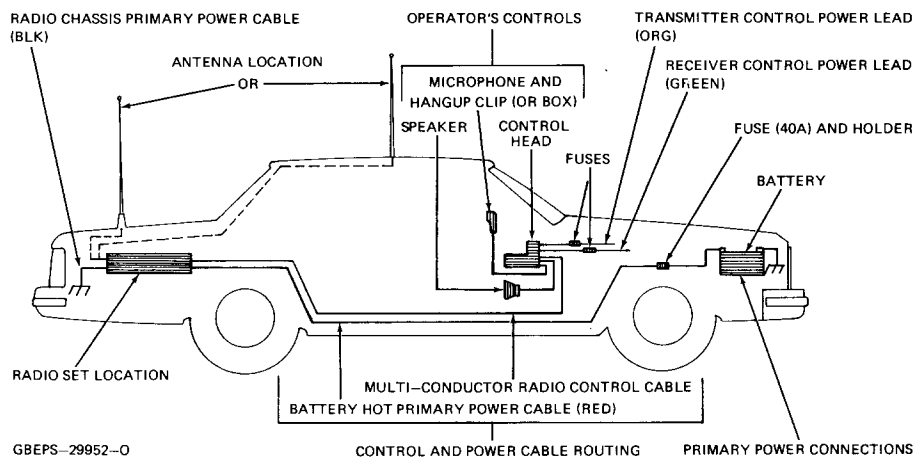


Figure 1. Installation Planning

mount the bracket with the #10-16  $\times$   $\frac{3}{4}$  " self-tapping sheet metal screws. Do not install the fuse until the entire radio installation is complete.

(6) The control unit power cable kit contains two separate wires, one orange and the other green. The orange wire is 66 inches long and the green wire is 106 inches long. A fuse kit hardware bag is supplied with the radio. This bag contains crimp-on type ring tongue lugs and crimp-on type spade lugs. The spade lugs allow connection to hot leads at the fuse block of the vehicle and the ring tongue lugs permit attachment to screws of terminals. Determine from Table 1 which radio functions are to be switched through the vehicle ignition switch. A typical system is hooked up to allow the receiver to operate with the radio switched on while the ignition is off, but the transmitter will not operate unless the ignition is on. In this case, connect the orange wire to the accessory terminal of the ignition switch and the green wire to the ungrounded terminal of the battery or starter solenoid.

### CAUTION

Do NOT connect either lead to the ungrounded terminal of the battery at this time.

(7) If either wire is to be connected in the engine compartment, pass the end of the wire through the same firewall hole that the red power cable uses. At this point, install a fuse in both wires.

(8) The following procedures apply to both the green and orange wires. (See Figure 8 for more information.) Cut the wires about 10 inches from the end. Strip the insulator from both sides so that about  $\frac{1}{8}$ -inch of the wire is exposed. On the end still connected to the cable kit install the plastic insulator fuse holder cap. On the same wire, crimp one of the metal fuse clips onto the exposed wire and apply solder for a good connection.

On the 10-inch loose wire, crimp another metal fuse clip onto the exposed wire and apply solder. Install the fuse (both are three-amp) into the fuse clips on both sides. Slide the spring on the wire to the fuse. Then slide the plastic insulated fuse-holder over the loose end of the wire so that the spring is inside the fuseholder. Now, screw the fuseholders until they lock together.

(9) On the loose ends of the green and orange wires, strip the insulator and crimp either the spade or ring tongue lug on the wire. Solder the crimped connection.

(10) Do not dress the wires at this time, but go to the next procedure.

## 6. Radio Installation

(See Figures 3 and 4.)

(1) Choose a location where the mounting screws are not directly above the fuel tank, fuel line, or other vital parts. The mounting tray of the radio must be installed permanently to a flat surface with a four-point mounting scheme or, if on an uneven surface, with a three-point mounting scheme. (Four-point mounting is strongly recommended over three-point, especially in vehicles subject to extreme vibrations.) The raised shelf in some car trunk compartments makes a good mounting place. Place the radio at one side to allow space for luggage. Leave at least eight inches in front of the radio so that the handle can be opened and the programming cable can be plugged into the radio. Locate the radio so that the black ground lead in the trunk can reach a good chassis ground point in the trunk. When the final position is determined, unlock the radio, open the handle and lift the radio assembly away from the mounting tray (pull forward and upward release the radio assembly). Use the mounting tray as a template to mark the location for drilling four mounting holes in the trunk floor. Use a #11 drill (.191). Mount the mounting tray as illustrated in Figures 3 and 4.

(2) When the radio is securely mounted to the trunk floor in some vehicles, the front panel may be pressing against the floor or floor cushioning. Also, in some vehicles where it is necessary to mount the radio directly over the fuel tank, the mounting screws could penetrate the tank. Always make a preliminary check to see how far the screws will extend below the trunk floor. If either condition exists, insert one of the thick spacer washers between the bottom of the mounting tray and the thin spacer washer at each of the four mounting holes. The washers help to keep the radio level, especially when the floor is covered with a "spongy" mat such as soft rubber. Replace the radio assembly by sliding the radio onto the tray at about the halfway point. Push straight back until the tray tabs enter the two window areas on the radio front and engage the handle tabs. Close by pushing the handle until it locks. The handle locks the radio to the mounting tray and conceals the top cover release button. Push the multi-conductor plug onto the male connector and rotate the thumbscrew clockwise to fully seat the connector. Reverse the procedure for removing the radio.

(3) Connect the black ground cable lug to a convenient location on the trunk floor. Thoroughly clean the trunk floor surface before proceeding. Center punch and drill a  $\frac{3}{16}$ " (.187") hole through the mounting surface. Use the supplied #14  $\times$   $\frac{3}{4}$ " self-tapping screw and  $\frac{1}{4}$ " lock-washer to mount the cable lug.

---

### CAUTION

A good ground connection of the black cable is essential for radio operation and to prevent damage to the radio and cable kit. Grounding to the vehicle frame is desirable. On some late-model automobiles, the ground connection between the vehicle chassis and engine block is inadequate for good mobile radio operation. DO NOT compensate for this problem by connecting the radio ground directly to the battery. Connect a flexible metal ground strap between the engine block and a vehicle chassis point common to the radio ground. Be sure the strap is heavy enough to carry maximum transmitter supply current.

---

(4) All cables (including the antenna lead-in) should be dressed out of the way as much as possible to prevent damage, and the radio heatsink should be placed to have the largest available supply of air possible for cooling.

## 7. Control Unit

### 7.1 MOUNTING CONSIDERATIONS

Examine the vehicle to find a suitable mounting location within the operator's reach. Although the

trunnion mounting bracket can be mounted to a plastic dashboard, all four trunnion mounting screws should penetrate the dashboard's supporting metal frame. If that is not possible, use a metal backing plate (not supplied) to strengthen the installation. The location should be convenient to the operator for viewing the display and operating the buttons and on-off switch, but vehicle operation should not be impaired and the driver's vision must not be obstructed.

The Model HLN4921A Trunnion Bracket Kit consists of two trunnions. The long trunnion is for hump mount applications and the short trunnion is for on-dash or under-dash applications.

If necessary, pull more cable into the dashboard area. Be sure all wires are clear of the instrument panel where holes are to be drilled.

## 7.2 INSTALLATION

(1) Mark the mounting location (see Figure 5) using the selected trunnion bracket as a template; drill four  $\frac{5}{32}$ " holes. If mounting into a plastic surface, use a metal backing plate.

(2) Attach the trunnion bracket using *all* four #10-16  $\times$   $\frac{5}{8}$ " self-tapping screws supplied in the mounting kit.

### Note

When the control unit is installed, it must not wobble or feel "spongy" when you press buttons. Use *all* four mounting screws and be sure they are tightly screwed into metal—either a dashboard support bracket or a backing plate.

(3) Plug in the radio cable connector and microphone cable connector in the proper location on the back of the control unit (see Figure 5). A "click" sounds when the connector snaps into place. Now connect the microphone cable "S" hook into the hole in the cable strain relief bracket on the back of the control unit.

(4) Plug in the Vehicle Interface Port (VIP) connector (see Figure 5) into the remaining location on the back of the control unit.

(5) Install the control unit to the trunnion bracket using the two wing screws. Rotate the control unit to the desired vertical position and tighten the wing screws.

## 8. Microphone Installation

### 8.1 GENERAL

The microphone bracket must be within arm's reach of the operator. Measure this distance before actually mounting the microphone bracket. Since the bracket has a positive detent action, the microphone can

be mounted in almost any position. After installation, connect the microphone plug to the receptacle on the control unit. Make sure that the clip on the control unit firmly engages the plug. Connect the microphone cable "S" hook to the proper hole in the strain relief clip on the rear of the control unit.

## 8.2 INSTALLATION PROCEDURE

(See Figure 6)

- (1) Remove the hangup clip from its taped position on the microphone.
- (2) Remove the two paper retainers and screws from the clip.
- (3) Determine the location for installation.
- (4) Using the clip as a template, mark the location of the two mounting holes.
- (5) Center punch and drill a 0.144" diameter hole at each location.
- (6) Mount the clip securely.

## 9. Speaker Installation

Install the speaker as instructed in your Instruction Manual. Details are illustrated in Figure 7.

## 10. Vehicle Interface Port (VIP)

### 10.1 GENERAL

The Vehicle Interface Port (VIP) allows the control unit to control outside circuits and to receive inputs from outside the control unit. There are three VIP outputs which are used for relay control. There are also three VIP inputs which accept inputs from switches. See the cable kit section for typical connections of VIP input switches and VIP output relays.

### 10.2 OUTPUT CONNECTIONS

The VIP output pins are located on the back of the control unit below the area labeled "VIP." These connections can be used to control relays. One end of the relay should be connected to switched B+, while the other side is connected to a software controlled ON/OFF switch inside the control unit. The relay can be normally-on or normally-off depending on how the VIP outputs are configured. The control unit provides for three of these VIP output connections. The following is a list of proper connections for relays:

VIP OUTPUT NUMBER	SWITCHED B+ PIN NO.	ON/OFF SWITCH PIN NO.
1	18	2
2	19	1
3	35	34

The function of these VIP outputs can be defined by field programming the control unit. Typical applications for VIP outputs are external horn/lights alarm and horn ring transfer relay control. For further information on VIP outputs, see the control unit programming manual. For information on installing relay connectors in the VIP connector, see Figure 5.

### 10.3 INPUT CONNECTIONS

The VIP input pins are located on the back of the control unit below the area labeled "VIP." These connections are used to accept inputs from switches. One side of the switch is connected to ground while the other side is connected to a buffered input to the control unit. The switch can be normally-closed or normally-open depending on how the VIP inputs are configured. The control unit permits three of these VIP input connections. The following is a list of proper connections for the switches:

VIP INPUT NUMBER	GROUND PIN NO.	ON/OFF SWITCH PIN NO.
1	20	4
2	21	3
3	36	37

The function of the VIP inputs can be defined by field programming the control unit. Typical applications for the VIP inputs are for a foot switch of a horn ring switch. For further information on VIP inputs, see the control unit programming manual. For information on installing switch connectors into the VIP connector (see Figure 5).

## 11. Power Connections

(See Figures 1 and 2.)

(1) Replace the fuse in the in-line fuseholder of the red power cable coming from the radio in the trunk. Connect the green (and/or orange) fused wire(s) coming from the control unit to the ungrounded terminal (or source) of the battery.

(2) Pull all excess cabling into the trunk. Clamp the cables to the vehicle body or chassis with the cable clamps supplied. Drill 1/8" mounting holes and then attach the clamps with four #8 x 3/8" tapping screws and four 1/4" lockwashers. Finally, be sure all in-line fuses are installed.

## 12. Antenna Installation

A diagram and complete installation instructions are supplied with each antenna ordered. See those installation instructions for pertinent information.

## 13. Conclusion of Installation

(1) Be sure the control unit and microphone PTT switches are off. Install the 40-amp fuse in the red primary power cable in-line holder. Install the

three-amp fuse in the orange cable in-line holder. Install the 3-amp fuse in the green cable in-line holder.

#### Note

If alternator or other noise is present in the received signal or in the transmission, see Motorola publications Number 68P81109E33 "Reducing Noise Interference in Mobile Two-Way Radio Installations."


(2) Turn the radio on at the control unit and verify proper operation of all controls and indicators. (Radio operation in some installations requires turning on the ignition. See Table 1.) Perform a complete operational check of the radio.

(3) Dress the control and power cables out of the way to prevent damage (pull any excess cable into the trunk area) and secure them where necessary with the clamps and screws supplied. Replace the rear seat if it was removed for installing the cables.

Table 1. Radio Functions Connections

Conductor	Green	Orange	Green	Orange	Green	Orange
Connected to battery	•	•	•			
Connected to ignition switch				•	Note 1	•
Ignition switch controls	No ignition switch control		Xmtr ignition switch controlled		Complete radio ignition switch controlled	
In any application, trim and strip wires. Crimp on ring lug for battery connections. For ignition switch connections, crimp on ring or spade lug (whichever is required).						

**Note:** In cases where alternator whine or other interference is a problem, the green lead can be isolated with a relay (Motorola Part No. 59-813674).

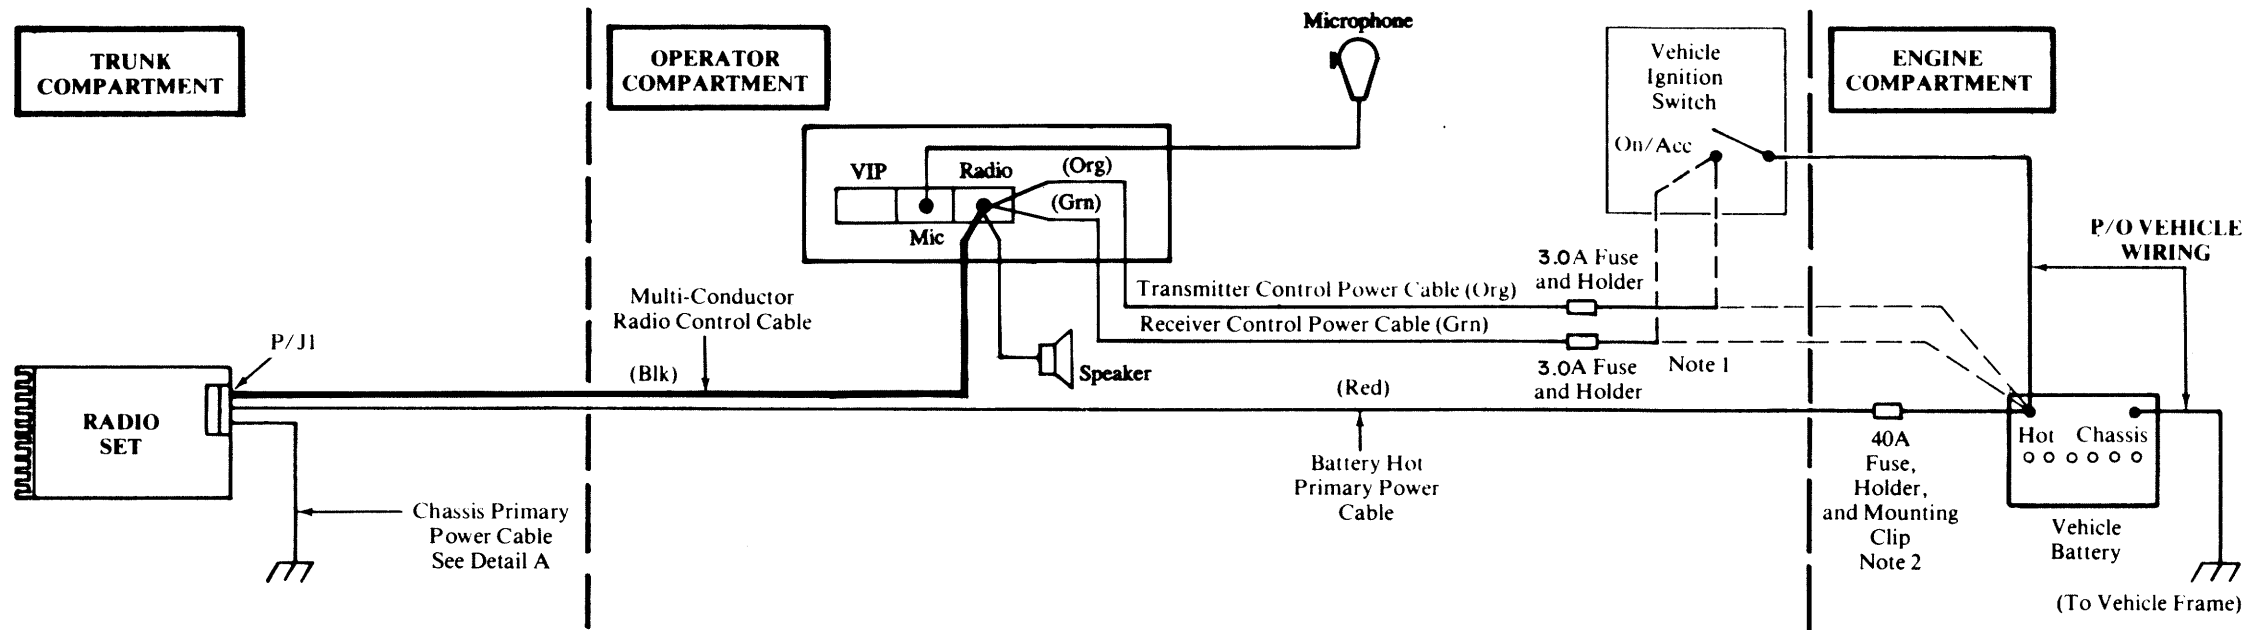

**CAUTION**

A good chassis connection via the black primary power cable is essential for radio operation and to prevent damage to the radio and cable kit. Connection to the vehicle frame is desirable.

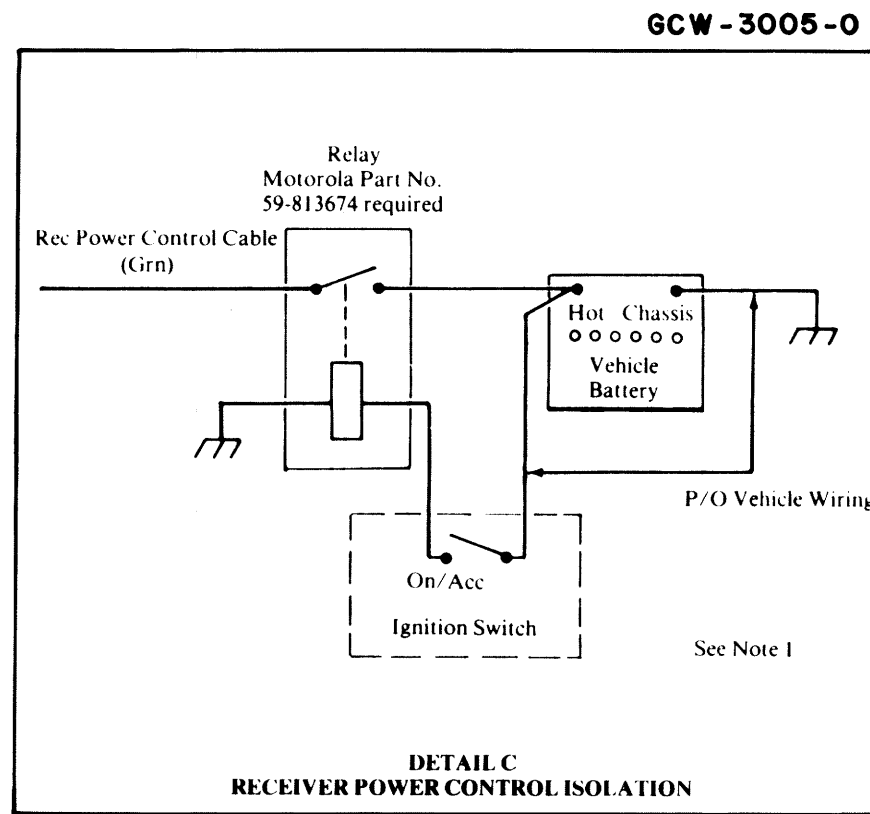
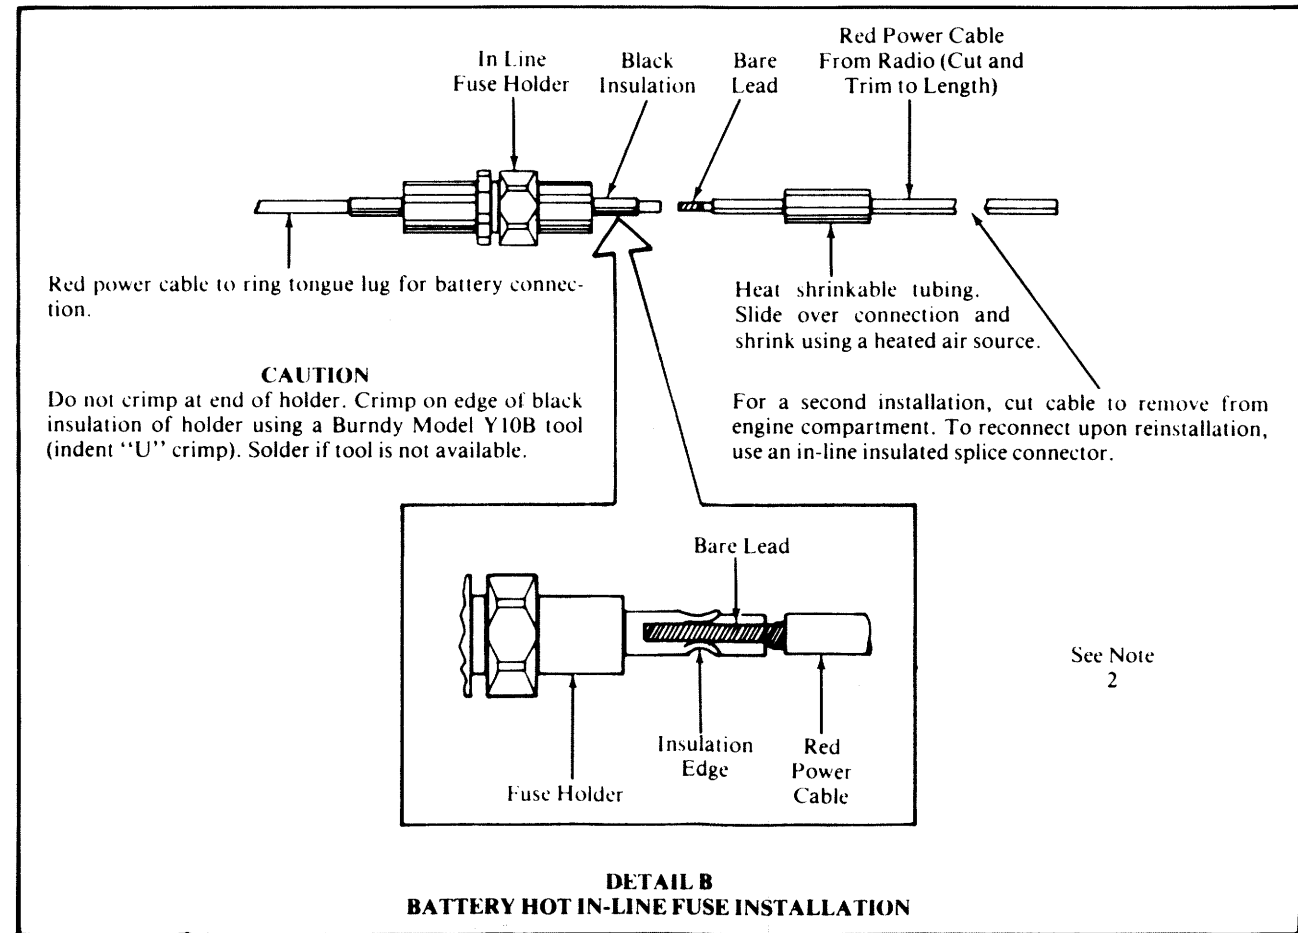
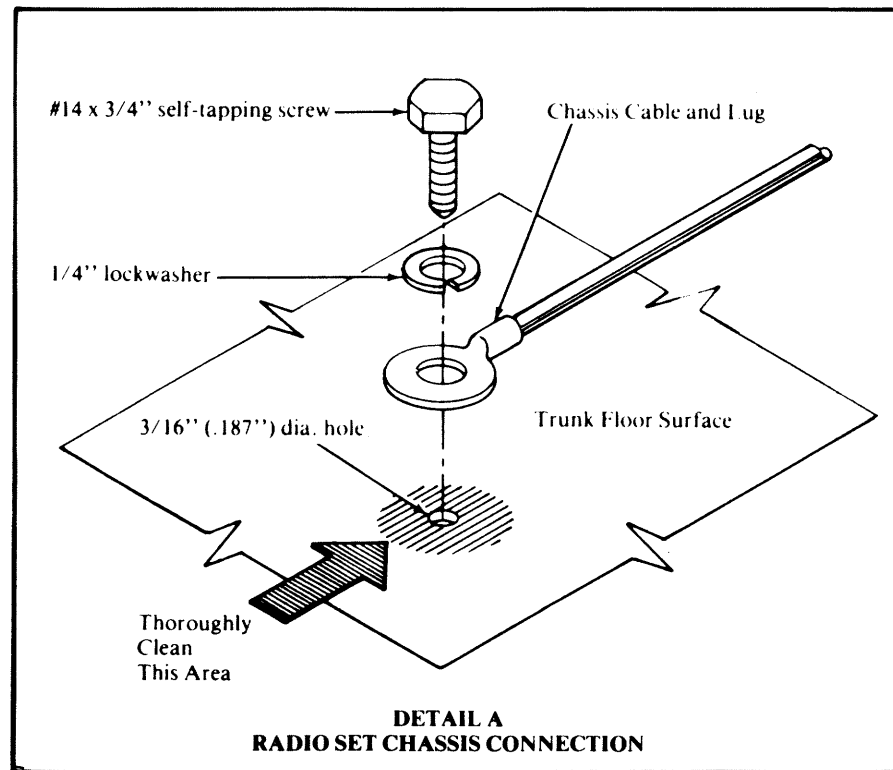
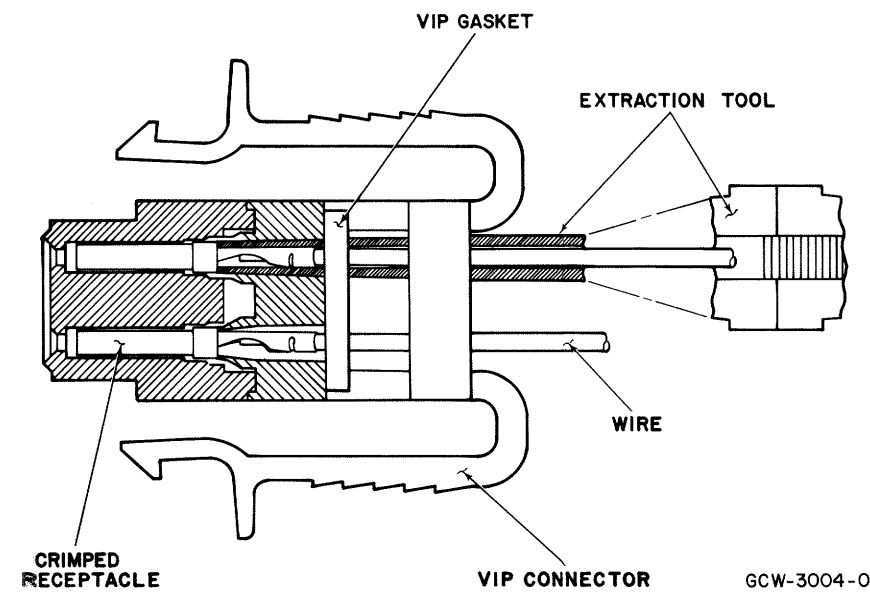
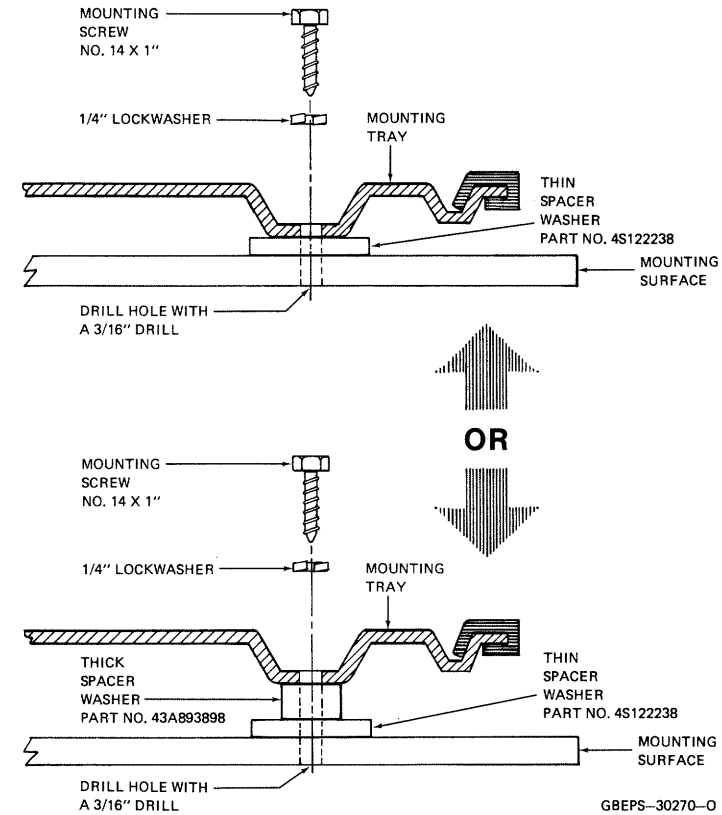
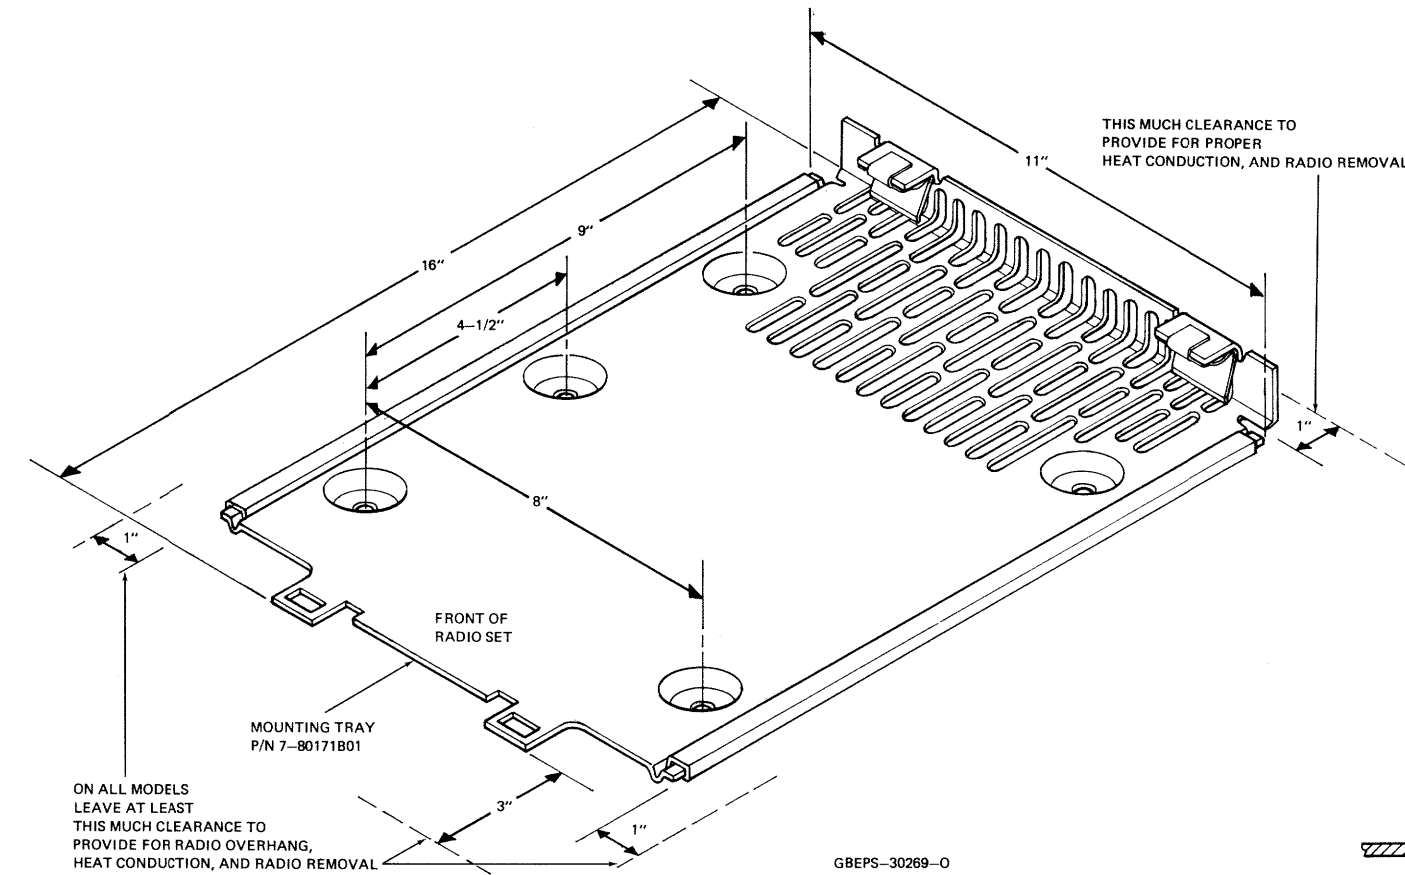


Figure 2. Cable Routing Details



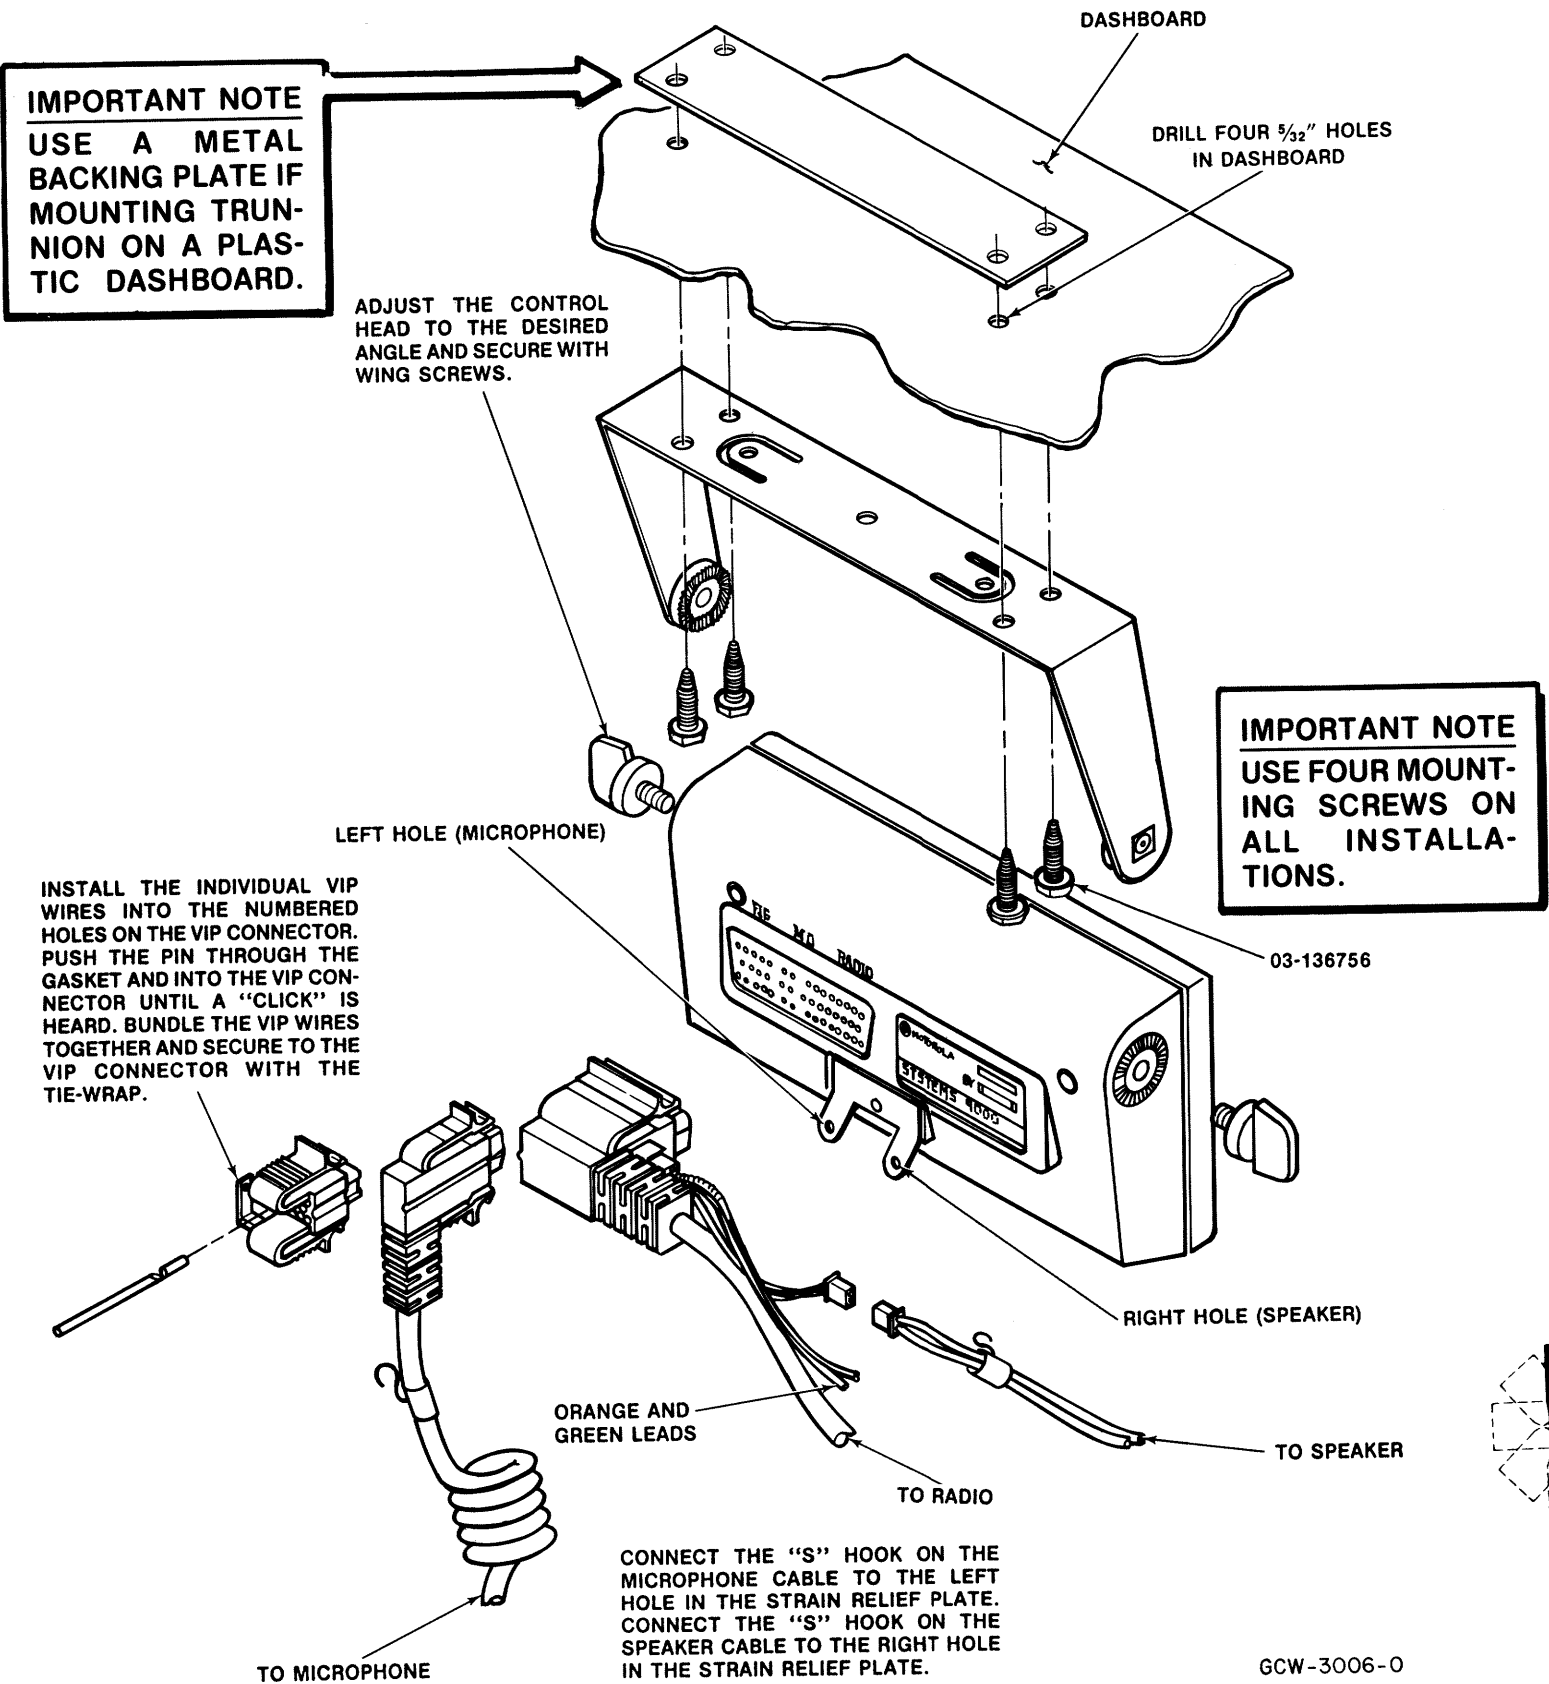


Figure 5. Control Head Installation Exploded View

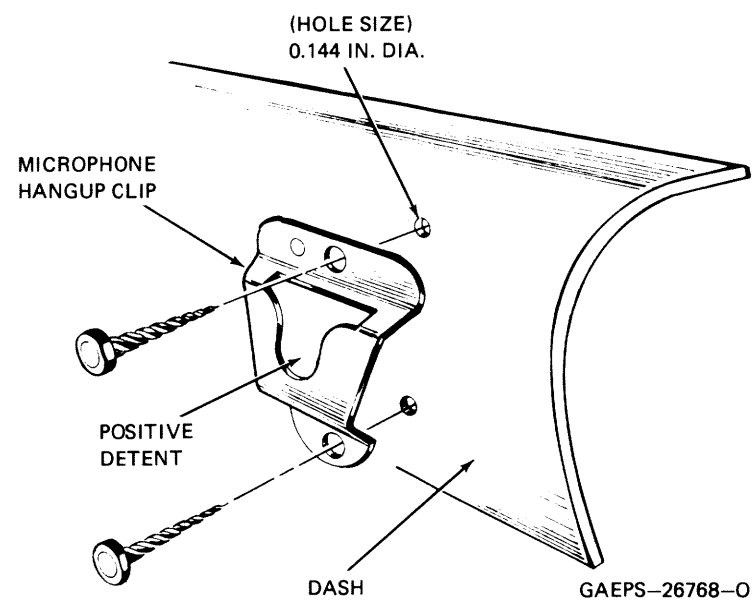


Figure 6. Microphone Accessory Installation

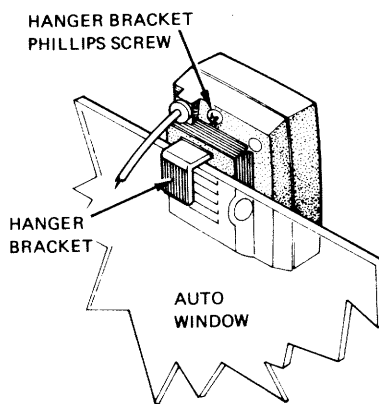
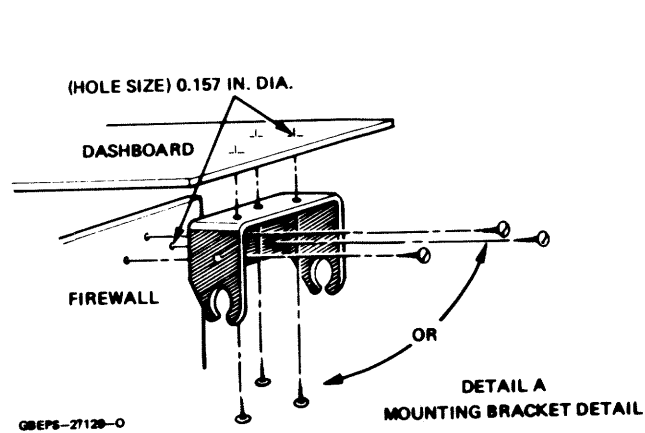


Figure 7. Speaker Installation Detail

## parts list

HLN4952A Fuse Kit for Green and Orange Leads MXW-2273-0

REFERENCE SYMBOL	MOTOROLA PART NO.	DESCRIPTION
	14-82882A01	insulator, fuse holder body
	14-82883A01	insulator, fuse holder cap
	29-00136968	lug
	29-00824456	ring tongue lug
	29-00865065	ring tongue lug
	41-82885A01	compression fuse spring
	42-82884A01	fuse clip
	65-00020404	3 amp fuse, 250V, 2 used

FUSE HOLDER ORANGE/GREEN


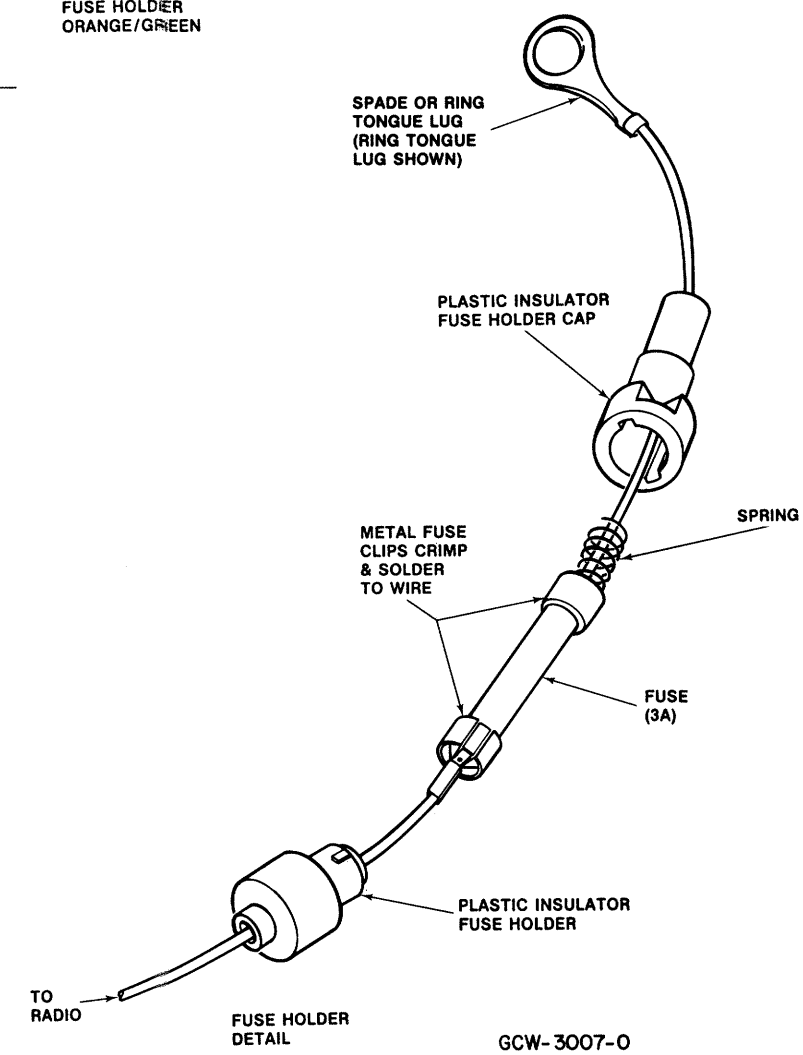


Figure 8. Fuse Assembly

NOTE  
OPTIONAL BRACKETS ARE PART OF THE TRN8588A WINDOW / WALL MOUNTING KIT.




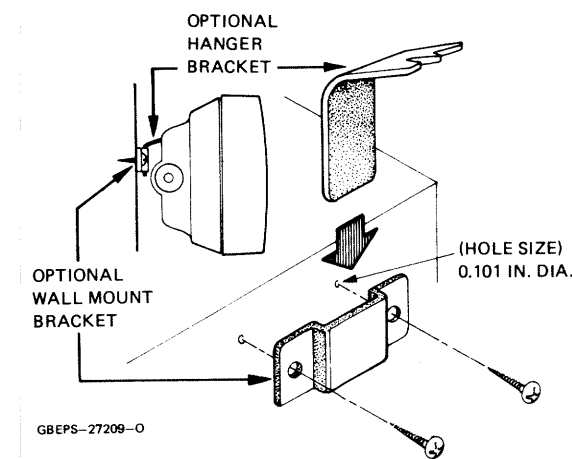

**MOTOROLA INC.**

Communications  
Group

# Maintenance and Troubleshooting

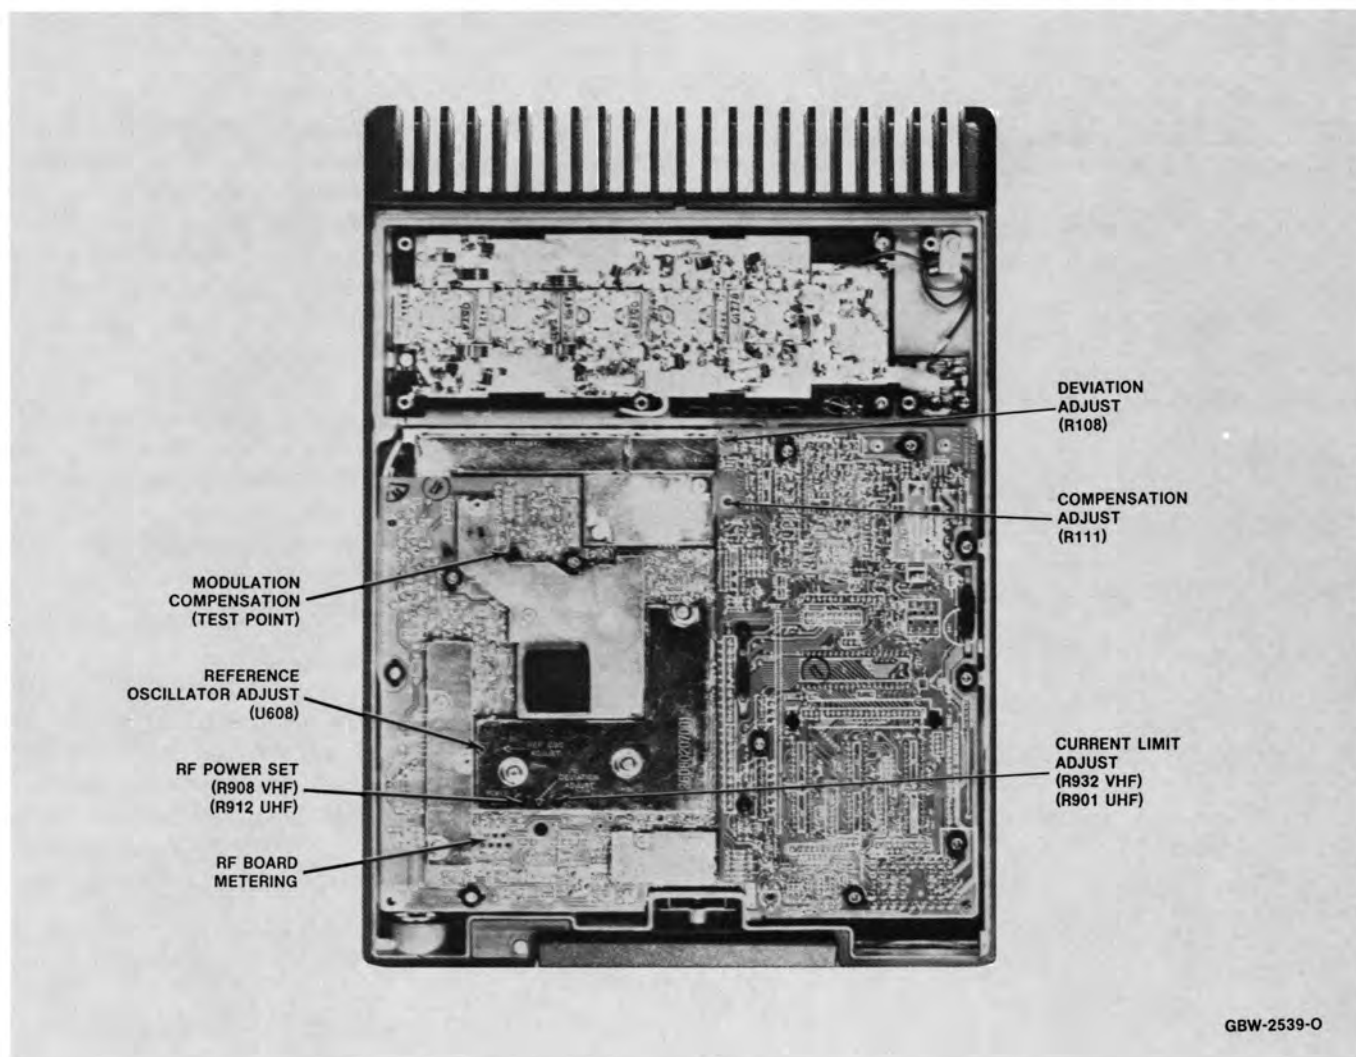

*Typical SYNTOR X 9000 Radio (Top View)*

## 1. General

All radio adjustments are accomplished from the TOP of the radio. See preceding figure.

## 2. Oscillator Frequency

This replaces steps 1 and 2 in the Maintenance and Troubleshooting section of your Instruction Manual.

(1) When adjusting the oscillator frequency, it is necessary to use the mode rocker to set the radio on a carrier squelch transmit mode.

(2) Use the portable test set to key the transmitter without modulation.

## 3. Compensation

The following refers to changes in the Maintenance and Troubleshooting section, 2.4 Compensation, in your Instruction Manual.

Reference designators for UHF and VHF radios are changed. The following is for VHF radios only:

Change TO	FROM
R516	R111
R517	R108
R911	R908
R939	R932

The following are changes in sections 2.3 Deviation and 2.4 Compensation for UHF radios only:

Change FROM	TO
R517	R108
R516	R111
R908	R912
R917	R901

## 4. General System Troubleshooting Guide

The following is in addition to the Maintenance and Troubleshooting section, 4. General System Troubleshooting Guide, of your Instruction Manual.

## 4.1 SYSTEM SELF CHECK

When the radio system is turned on it displays "SELF CHECK." During this time each processor does a diagnostic check. This includes checking ROM, RAM, EEPROMs, and serial bus circuitry. If no errors are detected, the display shows the selected mode. If there are any errors, they are displayed for two seconds each, after the self check display.

There are two types of errors. The first type does not stop the system from operating. This error occurs if an option board is not communicating on the serial bus. In this case the display indicates "ERROR WX/YZ." WX/YZ specifies the error. When this display appears, the operator is alerted by a beep. The system continues to operate without the option.

The second type of error inhibits the operation of the system. This occurs if the radio's EEPROM is corrupted. Since the data needed to operate the radio is stored in the EEPROM (frequencies and PL codes) the system cannot work if that data is invalid. This type of error is indicated by a display of "FAIL WX/YZ." WX/YZ specifies the type of error. If there is a single error of this type, the display shows it indefinitely. If there are multiple errors, and at least one of them is of this type, each error display is shown for two seconds and the display cycles through them. A special case exists for error "FAIL 01/90." This error indicates the control unit did not receive a message from the radio. If this error occurs, the control unit resets the system after all the error displays are shown in an effort to correct the failure.

The error code is divided into two parts. The first part, "WX," indicates the location of the error. The second part, "YZ," indicates the type of error. While the problem is not necessarily located on the board indicated by the location code, the troubleshooting guide for that board should be used to initially locate the problem. See Table 1 for interpretation of these codes.

*Table 1. General System Troubleshooting Guide*

Display Shows:	Replace U500	Replace U501	Reprogram EEPROM or check J501/502	Action to be taken
FAIL 01/81		X		*Check jumpers. If FAIL after reprogramming, replace U502. *
FAIL 01/82			X	
FAIL 01/83		X	X	
FAIL 01/84			X	
FAIL 01/85		X	X	
FAIL 01/88	X			*
FAIL 01/89	X	X		*
FAIL 01/8A	X		X	*
FAIL 01/8B	X	X	X	*
FAIL 01/8C	X		X	*
FAIL 01/8D	X	X	X	*
FAIL 01/90		Serial Bus Failure		Check cable kit. See Personality, Control Unit trouble charts.
FAIL WX/90		Option #WX Serial Bus Failure		See option trouble chart.
ERROR WX/90		Option #WX Serial Bus Error		See option trouble chart.
ERROR WX/YZ		Option #WX Error		See option trouble chart.

\*Jumper J501 must be in place for 2K EEPROM or Jumper J502 must be in place for 8K EEPROM.

#WX CODE	Option
08	Siren/PA
09	Securenet
0A	MDC-600
0B	MDC-600
0D	MVS



## 1. General

This section replaces the Microcomputer System Section of your Instruction Manual beginning with section 2. Theory of Operation, and continues to the end of Microcomputer System.

## 2. Theory of Operation

### 2.1 INTRODUCTION

The *SYNTOR X 9000* personality board consists of two major sections; the digital section, and the analog section. The digital section is notated by the 500 series part designators. The analog section is notated by the 100, 200, 300, and 400 series part designators.

### 2.2 DIGITAL SECTION

The digital section communicates with the control head and the options over a serial bus link to receive and transmit information. This section also monitors parallel inputs from the radio. The digital section microprocessor uses both serial bus inputs and radio parallel inputs, to decide response to and control of the system. The digital section controls the radio since it controls the parallel outputs.

The outputs are controlled to perform various functions including:

1. audio routing
2. synthesizer programming
3. transmitter enables
4. audio volume level control
5. PL and DPL detection
6. PL and DPL generation
7. squelch level control
8. alert tone generation

The major blocks in the digital section are:

1. U500—microprocessor
2. U501—program ROM
3. U502—customer system/mode EEPROM
4. U503—synthesizer programming latch
5. U504—audio control latch
6. U506—address decoder
7. HY500—watchdog timer hybrid
8. U505 and supporting circuitry—serial bus transceiver

### 2.3 ANALOG SECTION

The personality board analog section contains all the non-RF analog circuitry in the radio, with the exception of the voltage regulators and the RF power control. The analog section circuitry is grouped by circuit designators as follows:

- |            |  |
|------------|--|
| 100 series | transmit audio circuitry                 |
| 200 series | receive audio circuitry                  |
| 300 series | circuitry common to receive and transmit |
| 400 series | audio power amplifier                    |

The analog section provides various audio and sub-audio filtering, summing, and amplifying functions that include:

1. receive audio switching
2. transmit audio switching
3. microphone pre-emphasis and deviation limiting
4. VCO compensation adjustment
5. discriminator de-emphasis filtering
6. received PL/DPL filtering and detection
7. PL/DPL D/A converter and filtering (PL/DPL generation)
8. RF carrier detect/undetected (squelch)
9. digitally controlled audio attenuator
10. audio power amplifier
11. option receive and transmit summing/buffering

The major blocks of the analog section are:

1. U300—custom switched capacitor filter IC
2. 4 MHz crystal controlled oscillator (clocks U300)
3. U301—quad op-amp; microphone pre-emphasis/limiter; option RX and TX summer/buffer; bias voltage buffer
4. HY300—audio switching hybrid
5. HY301—squellch hybrid
6. U302—pre-amplifier (digitally controlled attenuator)
7. 400 series designator parts—audio power amplifier
8. jumper selections

### 3. Detailed Circuit Description

#### 3.1 DIGITAL SECTION

##### 3.1.1 Microprocessor System

The microprocessor (U500) with the program ROM (U501), the programmable EEPROM (U502), address decoder (U507), and output latches (U503 and U504) make up the microprocessor system. The heart of the system is the high-speed CMOS microprocessor that runs at 1.2288 MHz. The processor uses Y500, a 4.9152 MHz crystal, for its time base. This oscillator is internally divided by four at the processor to obtain its operating frequency of 1.2288 MHz.

##### 3.1.2 Address Decoding (U506)

The microprocessor controls the address lines, A14 and A15 output WR, to gain access to U501, U502, U503, and U504. The processor does this through the address decoder U506. The three inputs to U506 on Pins 2, 14, 3, 13, and 15 control U506 outputs to Pins 6, 7, 9, and 11. These signals, zero to five volt logic levels, are active low. When U506-6 is low, the processor is accessing U502 (EEPROM). When U506-7 is low, the processor is accessing U501 (program PROM). When U506-9 is low, U504 is accessed, and with U506-11 low, U503 is accessed.

##### 3.1.3 Program Memory (U501)

The program that the processor executes is contained in the 16k by 8 UV-EEPROM. By manipulating the remaining 14 address lines (A13-A0), the processor can read the instructions stored permanently in the EEPROM. The address lines A14 and A15 are used for address decoding.

##### 3.1.4 Customer Mode EEPROM (U502)

All radio mode information is stored in U502 (EEPROM). The standard EEPROM is 2k by 8 in a 24-pin package. This package is inserted in the rear 24 pins of the IC socket (Pins 1, 2, 27, and 28 are left open). The board design accepts an optional 8k by 8 EEPROM that is a 28-pin part. The EEPROM is reprogrammable, and is read from like the program memory IC (U501). It is also written to by the EEPROM programming mode, described later.

##### 3.1.5 Synthesizer Programming Latch (U503)

The synthesizer programming latch is an eight-bit static latch whose outputs store the digital value (high or low) of its inputs when a low to high transition occurs on U503-11. To load data into the synthesizer, the latch stores correct data (D3-D0) from the customer mode EEPROM, and the corresponding address (A2-A0) with the strobe output high (U503-19). Then the latch stores the same address and data with the strobe output low. This clocks the four bits of data into the synthesizer. For valid programming to occur, this process is repeated for five sets of data with five different addresses. The synthesizer is continually updated to avoid corrupted data passing on a power supply transient condition. The update rate is approximately every 20 milliseconds.

##### 3.1.6 Audio Control Latch (U504)

The audio control latch operates in the same manner as the synthesizer programming latch (U503). In addition, the audio control latch provides signals for five audio routing paths, both squellch level controls, and a control line for audio volume programming.

##### 3.1.7 Watchdog Timer Hybrid (HY501)

The watchdog timer hybrid performs three functions. This hybrid circuit controls the system reset line, monitors the internal microprocessor reset line, and senses the system reset line. The first function is performed on power-up of the radio system. The hybrid outputs a reset pulse approximately 30 milliseconds long to allow the crystal oscillators in the system to stabilize. The pulse is high on system reset (HY500-10). Secondly, the watchdog timer monitors its input. The synthesizer strobe from U503-19 should toggle every 20 milliseconds. If the strobe pulse fails to toggle, the watchdog timer times out and initiates a 30-millisecond reset pulse. This is a failsafe in the event the radio's microprocessor gets lost due to a power supply transient. The third function performed by the watchdog timer hybrid is its sensing of the system reset line. This line is bi-directional. If another processor in the system gets lost due to a transient, that processor initiates a reset pulse to recover. If the system reset line is pulsed, the watchdog timer stretches the pulse to a 30-millisecond reset pulse.

### 3.1.8 Serial Bus Transceiver (U505 and supporting circuitry)

Communication between processors in the system is handled by the serial bus at a data rate of 9600 bits per second. The signals generated are bus +, bus -, and busy. Bus + and bus - carry the same serial data. Bus - is bus + inverted (bus + high, bus - low). In using this pair of signals, the comparator U505 can differentiate between noise and valid data. In normal radio transmission, the radio microprocessor reads the line busy in (U500-9). If found to be HI, the processor pulls busy out high (busy in active LO, busy out active HI), and transmits as message out of TX data (U500-13). To further avoid a collision on the serial bus, the radio processor reads serial RX data (U500-12) as it transmits. If the processor does not read back the same data that it sent out, some error occurred and the radio processor attempts to re-transmit the message. When receiving a transmission, (example: control head transmitting), the radio processor would sense busy in (U500-9) going LO and process the incoming message from serial RX data (U500-12).

### 3.1.9 EEPROM Programming

The EEPROM (radio mode information) is programmed by communication over the serial bus. Special commands are sent to and from the radio microprocessor from the Epson serial bus programmer or the IBM PC programmer interface. The EEPROM is equipped with an input called "write-enable" that is active LO (LO writes to the EEPROM). This input is at U502-23 for a 2k by 8 EEPROM or at U502-27 for an 8k by 8 EEPROM. To protect the contents of the EEPROM from being inadvertently written over, the write-enable line is held inactive by the microphone HI audio input. The line is protected to eliminate the possibility of corrupting the EEPROM data during power supply transients or other temporary battery supply conditions that could possibly alter the data. The microphone HI audio input is normally biased up to 9.6 volts while receiving, and pulled to approximately 4 volts when transmitting to power the active element microphone cartridge. When connected to either of the programmers, the microphone input is shorted to ground and allows access to the EEPROM write-enable line. The microphone line is input to the digital section by R530 pulling the base of Q513 HI and forcing Q513 to pull the base of Q514 LO. With Q514 conducting, the input write-enable (U502-23 for 2k by 8 and U502-28 for 8k by 8) is held HI by Q514. Note that CR502 and CR503 protect the write-enable line in the same manner. The diode CR502 protects the EEPROM write line the instant the radio loses power (switched off) since this signal senses when the 9.6 volt supply falls off. The diode CR503 protects the EEPROM when the system is being reset due to power supply transients.

### 3.1.10 Power Down Sequence

With the power off, the radio microprocessor is put in its sleep mode. This mode requires to cut back the current drain on the unswitched five-volt regulator from 15 milli-amps to a few micro-amps. The unswitched five-volt regulator remains powered up while the radio is off so that the radio microprocessor retains its memory and powers up in the last mode used. The radio processor retains the last mode, volume level, squelch level, and other operator-selected functions. This eliminates the need for resetting all the controls every time the radio is turned on. For the radio processor to remember its last configuration, inputs are required that allow the processor to store this information before power is shut off to its memory and supporting circuitry (switched five volts turning off). The inputs NMI and STBY are generated to tell the processor that power is coming down. The signals NMI and STBY are generated by the transistor circuits involving Q516 and Q517. Both signals are active LO, so when NMI is LO, the processor is put in the sleep mode (standby). The transistor Q516 remains off while the 9.6-volt supply is powered up. This is done through R542 that pulls the base of Q516 HI. When the 9.6 volt supply begins to fall off (radio is turned off), Q516 begins to conduct, since its emitter is connected to the unswitched five-volt supply (this supply remains powered). As Q516 begins to conduct, the base of Q517 is pulled HI, and the collector is pulled LO. The collector is connected to U500-8, the NMI input to the processor. The signal STBY is generated by the R-C circuit made by R547 and C521. This signal goes LO approximately 500 microseconds after the NMI signal goes LO. The STBY input is at U500-7.

### 3.1.11 Test Mode

The radio test mode allows finer audio volume steps to be input to the audio preamp. In standard operation, you can set volume in 30 discrete steps. These steps increment the audio level by approximately 3.2 dB. In the test mode, increments are approximately .4 dB. This allows setting the volume closer to rated audio, more accurately setting the audio volume level, and measuring receive parameters such as RX audio distortion, received FM hum and noise, squelch sensitivity, and other receive parameters. Enter the test mode by shorting the two pins of jumper J500, and turn the radio on. The radio processor reads this input (U500-21). By shorting this input, the processor reads this port LO, enters the test mode, and enables the finer volume increments. Jumper J500 also disables the watchdog timer. This is useful for troubleshooting. If a malfunction causes the watchdog timer to time out, the timer sends out reset pulses until the system recovers. By shorting J500, the reset pulses stop and the system resumes operation. This allows you to troubleshoot and find the source of a problem without resetting the system.

## 3.2 ANALOG SECTION

The analog section of the personality board consists of four groups of circuitry. They are transmit audio, receive audio, common circuitry, and the audio power amplifier.

### 3.2.1 Transmit Audio Circuitry

To handle hardware options more efficiently, there are three possible paths for audio to pass through while transmitting. The first, the normal microphone path, follows the standard pre-emphasis curve of +20 dB per decade from 300 Hz to 3 KHz, and rolls off sharply at frequencies above 3 KHz. The second two transmit-audio routing paths are available for hardware options. Both of these paths are accessed through the option TX buffer at J301-12 or J1-3. The input at J301-12 provides for options internal to the radio, and J1-3 provides for options in the external options box. This input is the null port of the op-amp U301-1. The input allows summing of multiple option outputs without interference. The first transmit audio route is TX splatter. This port, when enabled, displays a flat response from 300 Hz to 3 KHz, and rolls off sharply at frequencies above 3 KHz. The other transmit route available to the options is TX flat. This port shows a flat response from approximately 2 Hz to above 6 KHz, and does not roll off sharply.

#### 3.2.1.1 Microphone Transmit Audio

The microphone path enters the radio through J1-27. The resistors R101 and R102 with the capacitor C108 provide DC bias for the active microphone element. This signal is available as an input to the options at J301-11. Microphone HI, after entering the radio, goes to C100. This capacitor blocks DC, and sets the pre-emphasis required to an 18-KHz high-pass corner. The high-pass filter provides the required +20 dB/decade pre-emphasis response. The microphone path is switched in or out by the transmission gate on HY300. The signal is input at HY300-6 and output at HY300-4. The control line to turn the microphone path on is at HY300-11, and microphone mute is active HI. HY300-6 and HY300-4 are the summing node of the op-amp U300-14 with the path closed, so no signal can be measured at HY300-6 unless the path is open (HY300-11 HI). The microphone signal is amplified by U301 by a factor of 24 (at 1 kHz), so the nominal 80 mV input from the microphone almost sends the op-amp output into clip. A slightly stronger signal causes the output to clip. The signal can never be greater than the output swing of the op-amp. The output of the op-amp is attenuated by the deviation potentiometer R108. This adjustment is used to set deviation of the overall system to below 5 KHz. After the microphone signal has been pre-emphasized, limited, and the level set through

R108, the signal enters the splatter filter at U300-11. The splatter filter provides the sharp roll-off required to frequencies above 3 KHz. The output of the splatter filter (at U300-13) travels to the compensation potentiometer R111. The compensation potentiometer is used to adjust the sensitivity of the VCO modulation port to equal the reference modulation port. The VCO modulation port response has a high-pass response, and the reference modulation port has a low-pass response. The compensation potentiometer sets the sensitivity of the VCO modulation port so that the overall response of the VCO is flat. The correct tuneup procedure is to set the compensation potentiometer (R111) first, and then set the deviation potentiometer (R108).

#### 3.2.1.2 Option Transmit through Splatter

This option path is one of two paths that a hardware option is able to route audio to be transmitted. The path is enabled by the latch U504 from Pin 6. In normal operation, the port is enabled when the option sends a command over the serial bus. The radio processor then enables the port and keys the radio. The option (for example PTT-ID) enables its audio port to send an audio signal into TX audio. This audio signal is amplified by the op-amp U301-A. The output of U301-A at U301-3 appears at the switch input on U300-9. The switch on U300 functions as an analog transmission gate. The switch control is at U300-10, and closes the switch when this input is low. The output of this switch is at U300-14. Once routed through this switch, the signal is input to the same limiter op-amp used by the microphone path (U301-D). The signal is amplified to almost clip the output at nominal levels (just as the microphone path), but it is not pre-emphasized. The output of the op-amp follows the same path as the microphone path: through the deviation limit potentiometer, through the splatter filter, and then to the VCO modulation port through the compensation potentiometer.

#### 3.2.1.3 Option Transmit Flat

This is the second of the TX audio paths available to the hardware options. It is enabled by commands over the serial bus in the same manner as the option transmit through splatter path. This port is enabled by the output of the latch U504-5. This audio port is named the flat TX port due to the extended response it provides. The flat TX port displays a flat frequency response from approximately 2 Hz to above 6 KHz. This response is required for digital signaling schemes such as the *Securenet* option. The audio for this path is input from the option the same as the TX splatter path (through U301-A). In this case, the splatter port is not enabled (the switch on U300-14 is open), and the flat port is enabled. The switch enables when the control at U300-22 is high. The audio input to the switch is at U300-21, and the output is at U300-15. The IC

provides +7.5 dB of gain from input to output, and also sums with the IC's internal D/A converter. The D/A converter is used to generate PL and DPL transmit signals with the data lines D3 through D0 at Pins 32, 31, 30 and 29 of U500. These outputs of the processor drive the inputs of the D/A on U300 at Pins 25, 26, 27, and 28. The D/A on U300 requires the reference voltage at U300-1 to function properly. The reference voltage is a resistive divider, formed by R307 and R308, and provides the required 1.3 volts DC to this input. The output of the D/A is at U300-15. As discussed in the option TX flat section, the D/A is summed with the TX flat path.

PL and DPL are used only when the microphone path or the option TX through the splatter path are enabled. The only signal present at U300-15 is a TX flat signal or a PL/DPL, but not both. The output of U300-16 is normally 500 mV above the analog ground voltage ( $V_{ag}$ ) at U300-7. The output, when generating PL or DPL, swings symmetrically about this normal voltage ( $V_{ag} + 500$  mV). The output at U300-15 follows the same paths as those described in the TX flat path section, and the signal is input to both the VCO modulation input and the reference modulation input to the RF board.

The output of the TX flat switch (U300-15) is routed to two different inputs to the VCO. The first is the VCO modulation port, and the second is the reference modulation port. The TX flat signal routing to the VCO modulation port is from the output of the TX flat switch (U300-15). The signal is attenuated by R116 and R117. The attenuated signal is input to U300-8. The input is summed internally with the splatter filter input, and is output at U300-13. This summing node allows PL or DPL to be summed with normal audio from the microphone path, and, in this case, allows the TX flat audio to reach the VCO modulation port. The output of U300-13 travels to the VCO modulation port via the compensation adjust potentiometer. The TX flat signal routing to the reference modulation port is through resistive attenuators. The jumpers JU101, JU102, JU103, and JU104 select the proper attenuation required for low-band, VHF, UHF, and 800-MHz bands respectively. The TX flat signal passes through the DC blocking capacitor C105, and then to the reference modulation port. The transistor Q100 shunts the reference modulation port to ground when the radio is powered up, and allows the VCO to lock more quickly when first powered up. Due to the high deviation required by *Securenet*, the transistor Q100 is removed from the circuit by removing JU100 on *Securenet* model radios. If not removed from the circuit, the transistor Q100 begins to conduct, and distorts the signal.

### 3.2.2 Receive Audio Circuitry

There are four paths in the receive audio circuitry for audio output through the speaker. These paths are the discriminator path, the option through receive audio filter path, the option through flat response path, and the alert tone path. The discriminator path is the recovered audio output from an RF signal at the antenna input. This path exhibits a  $-20$  dB/decade response from 300 Hz to 3 KHz. The response falls off sharply with frequencies below 300 Hz and above 3 KHz. The Personality Board provides two inputs in the receive audio path for hardware options for the receive audio string. First is RX through received audio shaping that follows the same response as the discriminator path,  $-20$  dB/decade from 300 Hz to 3 KHz. Second is the RX flat that displays frequency response from 200 Hz to 10 KHz. The final path in the receive audio string is the alert tone path. This path allows the radio microprocessor to sound alert tones through the speaker.

#### 3.2.2.1 Discriminator Audio

The discriminator audio path is input to the personality board from the RF board via P601-3. The discriminator path is then input to the transmission gate hybrid (HY300) through C201. C201 provides DC blocking. The input to HY300 is at HY300-7, and the output is at HY300-8. The control line for disc mute is controlled by the output of U500-26. The control line is input to HY300-11, and is active HI (HI mutes the audio). The output of HY300-8 inputs to the receive audio shaping filter on U300. The receive audio shaping filter input is at U300-20, and is not switched. An input between 300 and 3 KHz always causes an output at U300-17. The filter provides the standard deemphasis response of  $-20$  dB/decade from 300 to 3 KHz. The received audio shaping filter provides band-pass filtering. The pass band is approximately 270 Hz to 3.5 KHz. The filter exhibits a loss of  $-3$  dB at 1 KHz.

The radio microprocessor decodes received PL or DPL, and determines if the proper code is present. The radio bases this decision on its input from the comparator on U300. The discriminator output from the RF board (P601-3) is input to the PL/DPL filter on U300 through C200. Input to the PL input filter is at U300-19. The PL filter has a low pass response, and changes its response when the selected mode is a PL mode or a DPL mode. The PL filter, when input PL/DPL is low (PL response), rolls off at approximately 250 Hz. When on a DPL mode (U300-23 is high), the PL filter rolls off at approximately 150 Hz. The output of the PL filter (U300-16) is averaged by R205 and C209 for PL, and R205 and C210 for DPL. The DC averaged signal is input to the negative input of the comparator on U300.

The negative input is at U300-4 and the positive input is at U300-5. The PL filter output connects to the positive input of the comparator. This causes the output of the comparator (U300-3) to swing high when a positive going signal is output from the discriminator. The comparator output swings low when the discriminator output has a negative going signal. The output of the comparator attenuates by R208 and R209, and is read by the processor input at U500-24.

The output of the receive audio shaping filter inputs to the audio preamp (U302) through the audio summing node via R200. The audio summing node consists of R200, R201, R202, R203, and C202. The summing node provides attenuation for the receive audio shaping path, RX flat path, and the alert tone input. The summing node inputs to the audio preamplifier U302-15. The preamp is a digitally-controlled, variable gain buffer whose gain can vary from  $-70$  to  $+18$  dB. The gain is controlled by U500 and U503 through the control lines, UCS data, UCS write-enable, and UCS clock. The preamp gain is programmed with a serial data stream that controls the volume. The serial data appears on the UCS data line, and is clocked in bit by bit by the UCS clock when write-enable is low. The preamp has another control to force its output to mute at U302-13. The mute line is an output of U500-25, and is active LO (LO mutes the preamp). The output of U302 next feeds into the audio power amplifier through C400 that blocks DC. The audio power amplifier is a class A/B amplifier stage, and runs approximately 200 milli-amps of bias to the collectors of final output transistors (Q400 and Q401) while idling with no audio input. The audio power amplifier provides  $+34$  dB of gain and presents an output impedance of 8 ohms to drive an 8-ohm speaker. At the nominal battery voltage of 13.8 volts, the power amp delivers over 15 watts of power with total harmonic distortion below 3%.

### 3.2.2.2 Option Play through Receive Audio Shaping

The first option path available to the hardware options is RX through receive audio shaping filter or RX-RAS. The internal options access the RX audio ports through J301-10, and the options residing in the external options box access the RX audio ports through J1-33. Both RX audio ports, RX-RAS and RX flat, are enabled in the same manner as TX audio ports, by commands over the serial bus. The RX audio signals are input through J301-10 and/or J1-33, and are summed and buffered by the option RX buffer op-amp U301-C. The input is the null port at U301-8, and allows options access without interference. The output of the option RX buffer is connected to two inputs to HY300. The input at HY300-9 is the input for RX-RAS. The control input for RX-RAS is at HY300-2, and comes

from the output of U504-2. The control is active low (HI when the switch is open). With the control low, the RX-RAS enables, and the signal output drives the input of the receive audio shaping filter. The signal path follows the same path as the discriminator audio path discussed earlier.

### 3.2.2.3 Option Play Flat Response

The option play flat response is input to the option RX buffer, the same as the option play through RAS. The option RX buffer output (U301-10) connects to the RX flat switch (HY300-9). This switch is controlled by U504-5, and is active low (HI when the switch is open). The control line input to the hybrid is at HY300-13. When enabled (closed), the RX option buffer connects directly to the audio summing node by R201. The summing node sets the correct attenuation for the input to the audio preamplifier. The remainder of the path is the same for the discriminator audio path.

### 3.2.2.4 Alert Tones

The alert tones are generated by the radio microprocessor by toggling its output at U500-15. This output is AC coupled by C208, and is summed directly into the audio summing node through R202.

### 3.2.3 Power Amplifier

The power amplifier is biased to 5.0 volts at its positive input by resistors R400 and R401. The dual output op-amp U400 drives the pre-driver transistors (Q403 and Q402). The outputs of the op-amp are approximately 2.1 volts apart, and U400-4 is higher than U400-1. The banded transistor pairs, Q403 and Q402, are graded NPN pairs and graded PNP pairs respectively. The pairs are graded to match base to emitter voltage drops. The transistors Q403-A and Q402-A form a current mirror into transistors Q403-B and Q402-B. The current is fixed through Q403-A and Q402-A by resistor R406. When unmuted transistor Q404 is conducting, the bias current is higher than when muted. The mirrored current through Q403-B and Q402-B provides the base drive for the final output 6 transistors. The DC feedback for the op-amp U400 comes from the tap between R407 and R408. The feedback DC biases the entire feedback winding of the transformer (Pins 7, 8 of T400). The transformer input windings (Pins 1, 6; Pins 2, 5) are driven by the final output transistors Q401 and Q400 respectively. The output winding of the transformer is routed from J1-37 and J1-22 in the radio, through the cable kit, into the control head, and finally to the speaker.

### 3.3 SUPPORT CIRCUITRY COMMON TO RECEIVE AND TRANSMIT

Supporting circuitry appears throughout the analog section of the personality board. All of the 300 series designators provide functions such as supply by-passing, etc. Two of the supporting sections are worthy of special note, the 4-MHz oscillator and the analog ground buffer op-amp.

#### 3.3.1 4-MHz Oscillator


The linear crystal oscillator provides the switched capacitor filter IC (U300) with its clocking rate. The oscillator provides a 4-MHz sine wave (distorted) at an amplitude of approximately 700 mV peak-to-peak to

the clock input (U300-24). The oscillator uses Q300 and Y300 to produce the signal.

#### 3.3.2 Analog Ground Voltage Buffer


The op-amp U301-B is a unity gain voltage follower. The op-amp output buffers the output of the Vag reference output (U300-7). IC U300 biases internally to approximately half of its 9.6-volt supply. To reduce audio transients when switching an audio path in or out, the buffered analog ground voltage biases all audio circuitry except the audio power amplifier. The analog ground voltage is presented to the internal hardware options via J301-8, so the options can use this DC potential to bias their analog circuitry.

# U300 BLOCK DIAGRAM

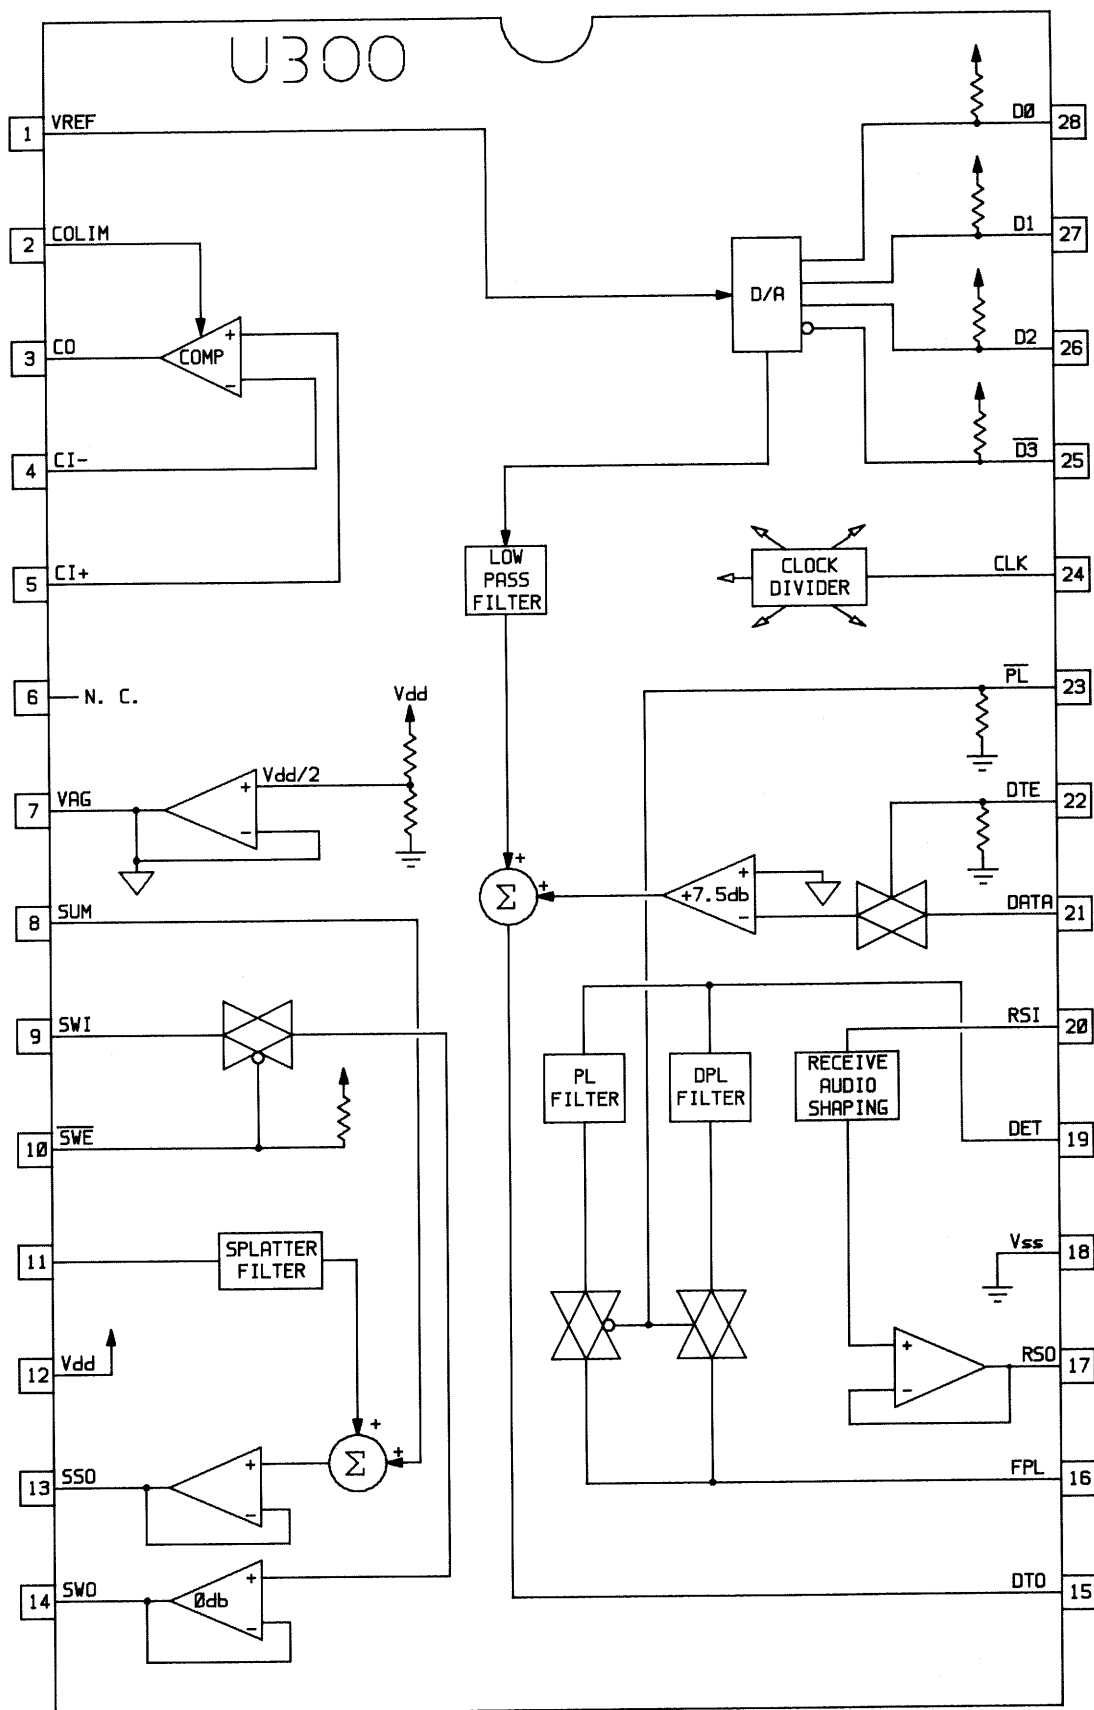

GCW-2585-0

Schematic, Circuit Board Diagram, and  
Parts Lists for Personality Board  
**PEW-2586-0**  
(Sheet 1 of 4)  
2/17/86

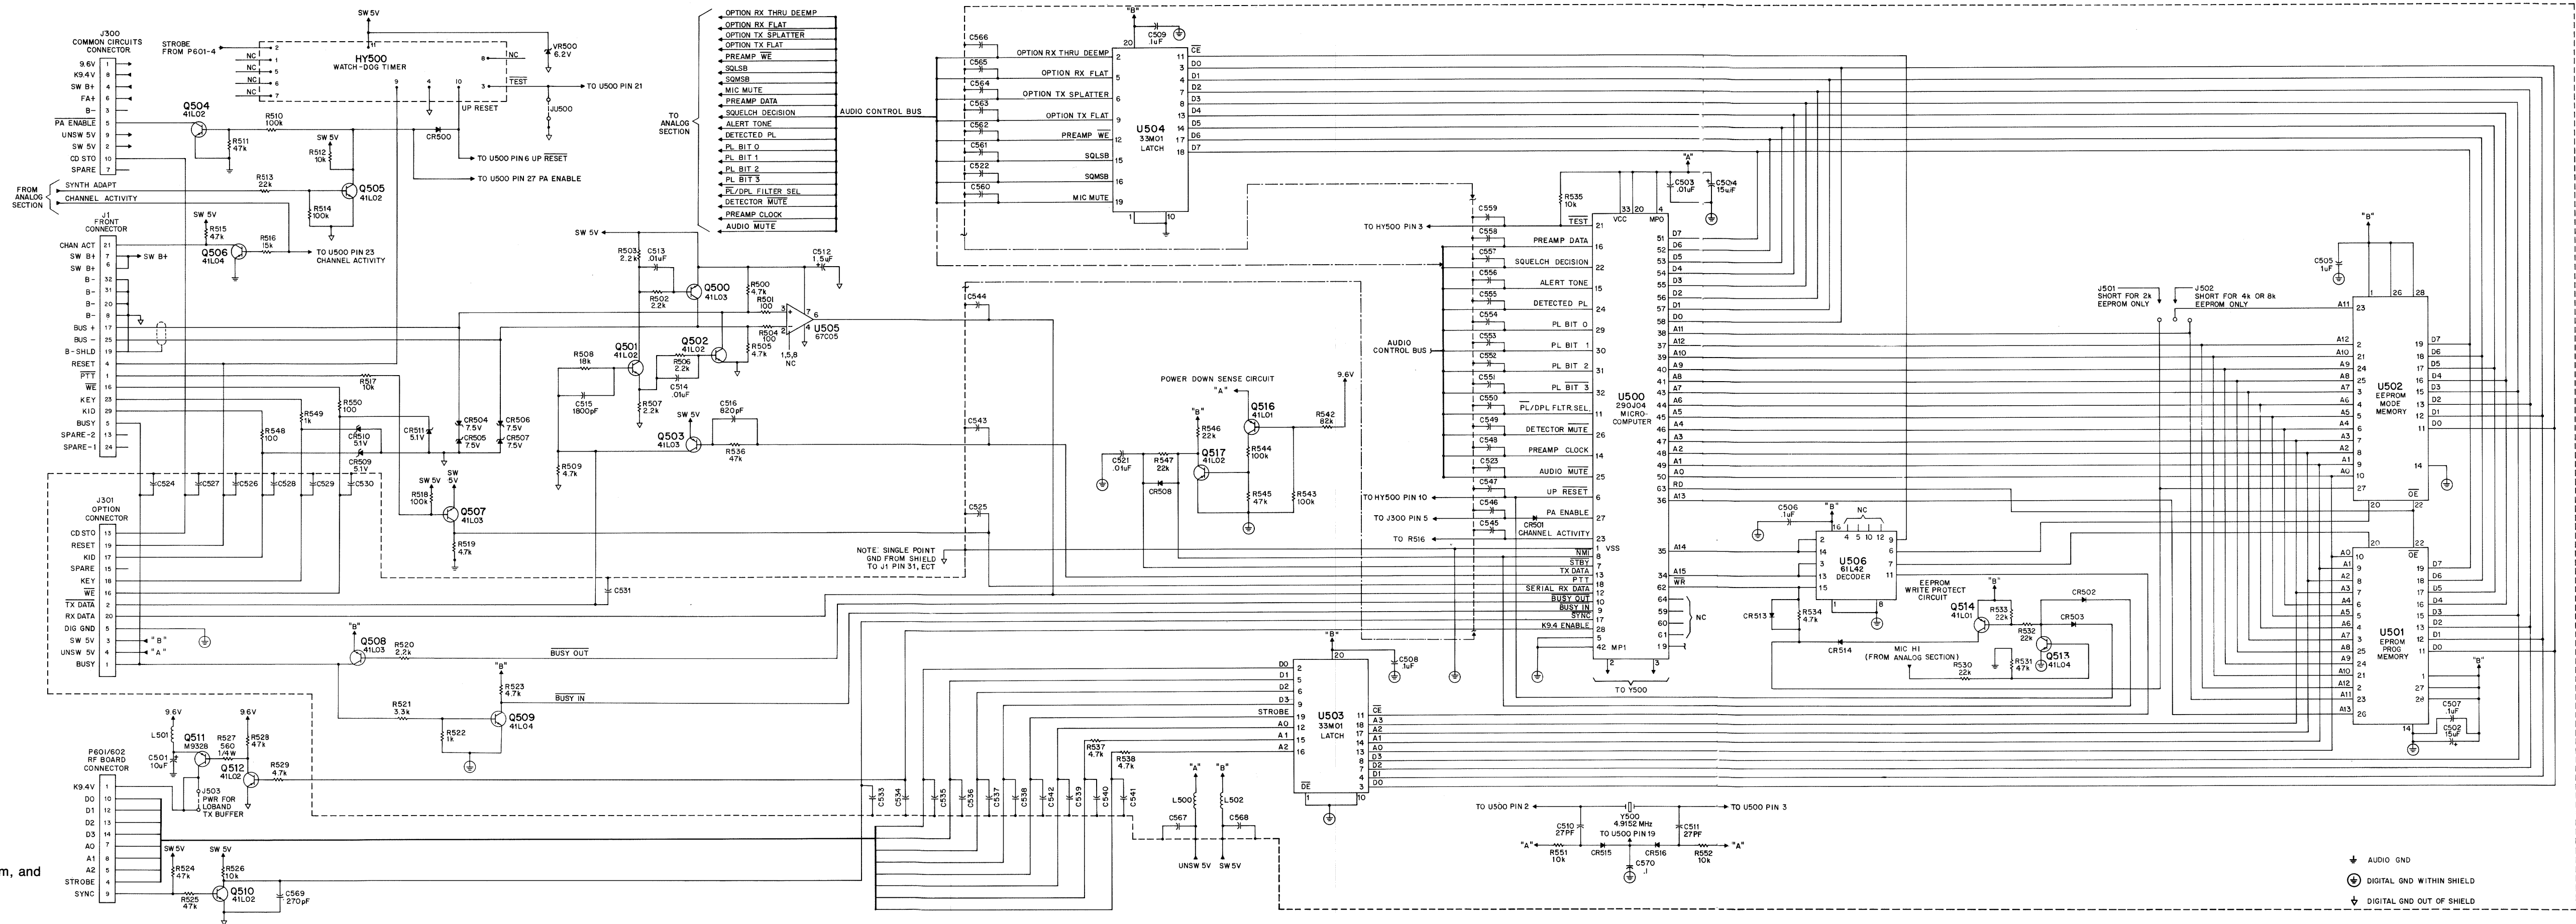


parts list


HLN4925A Personality Board			MXW-2486-O		
REFERENCE SYMBOL	MOTOROLA PART NO.	DESCRIPTION	REFERENCE SYMBOL	MOTOROLA PART NO.	DESCRIPTION
		capacitor, fixed, $\mu\text{F} \pm 10\%$ , 50V unless otherwise stated			
C	21-84874K01				
C1	21-11031A61				
C1	21-11032A21	.01			
C2	21-84547A24	.1 $\pm 20\%$ , 25V			
C3	21-11031A47	220 pF $\pm 5\%$			
C3	21-11031A37	82 pF $\pm 5\%$			
C3	21-11032B13	.1 + 80, -20%			
C4	21-84547A24	.1 $\pm 20\%$ , 25V			
C4	21-11032A21	.01			
C5	21-11032A13	.0022			
C5	21-84547A24	.1 $\pm 20\%$ , 25V			
C6	21-11032A21	.01			
C6	21-11031A47	220 pF 5%			
C7	21-11032A17	.0047			
C8	21-11032A21	.01			
C100	08-11051A07	.01 pF $\pm 5\%$ , 63V			
C101	21-11031A49	270 pF $\pm 5\%$			
C102	21-11031A31	47 pF $\pm 5\%$			
C103	21-11032A21	.01			
C104	08-11051A02	.0015 $\pm 5\%$ , 63V			
C105	23-11048C11	10 pF $\pm 20\%$ , 35V, electrolytic			
C106	21-11031A31	47 pF $\pm 5\%$			
C107	21-11031A47	220 pF $\pm 5\%$			
C108	23-11048C11	10 $\pm 20\%$ , 35V, electrolytic			
C109	21-11031A64	.0015 $\pm 5\%$			
C200	21-11032B15	47 pF $\pm 5\%$			
C201	08-11051A15	22 $\pm 5\%$ , 63V			
C202	08-11051A04	.0033 $\pm 5\%$ , 63V			
C203	08-11051A15	22 $\pm 5\%$ , 63V			
C204	23-11013D55	4.7 $\pm 20\%$ , 20V, tantalum			
C205	21-11031A31	47 pF $\pm 5\%$			
C206	21-11031A57	560 pF $\pm 5\%$			
C207	08-11051A17	.47 $\pm 5\%$ , 63V			
C208	21-11032A21	.01			
C209	21-11032A27	.033			
C210	08-11051A17	4.7 $\pm 5\%$ , 63V			
C211	23-11048C11	10 $\pm 20\%$ , 35V, electrolytic			
C212	23-11048C05	1 $\pm 20\%$ , 50V, electrolytic			
C213	23-11048C06	2.2 $\pm 20\%$ , 50V, electrolytic			
C214	21-11032A21	.01, 50V			
C215	21-11031A31	47 pF $\pm 5\%$			
C216	08-11051A13	.1 $\pm 5\%$ , 63V			
C217	23-11013C01	1.5, 5V, tantalum			
C300	21-11032A09	.001			
C301	21-11031A43	150 pF $\pm 5\%$			
C302	21-11032A09	.001			
C303	21-11032B13	.1 + 80, -20%			
C304	21-11031A31	47 pF $\pm 5\%$			
C305	21-11032A27	.033			
C306	21-11032A21	.01			
C307	23-11013D55	4.7 $\pm 20\%$ , 20V, tantalum			
C308	23-83210A08	100 $\pm 15\%$ , -10%, 25V, electrolytic			
C309-316	21-11031A39	100 pF $\pm 5\%$			
C317	21-11031A47	220 pF $\pm 5\%$			
C400	08-11051A17	.47 $\pm 5\%$ , 63V			
C401,402	21-11031A47	220 pF $\pm 5\%$			
C403	21-11031A64	.0015 $\pm 5\%$			
C404-409	21-11031A47	220 pF $\pm 5\%$			
C410	08-11051A15	22 $\pm 5\%$ , 63V			
C411	23-82747L01	330 $\pm 10\%$ , -10%, 20V, electrolytic			
C412	08-11051A15	22 pF $\pm 5\%$ , 63V			
C414	23-11013C56	22 $\pm 20\%$ , 15V, tantalum			
C415,416	21-11031A47	220 pF $\pm 5\%$			
C501	23-11048C11	10 $\pm 20\%$ , 35V, electrolytic			
C502	23-11013C55	15 $\pm 20\%$ , 15V, tantalum			
C503	21-11032A21	.01			
C504	23-11013C55	15 $\pm 20\%$ , 15V, tantalum			
C505-509	21-11032B13	.1 + 80, -20%			
C510,511	21-11031A25	27 pF $\pm 5\%$			
C512	23-11013C01	1.5 pF, 15V, tantalum			
C513	21-11032A21	.01, 50V			
C514	21-11032A21	.01			
C515	21-11031A65	.0018 $\pm 5\%$			
C516	21-11031G61	820 pF $\pm 5\%$			
C521	21-11032A21	.01			
C522-569	21-11032A02	270 pF			
C570	21-11032B13	.1 + 80, -20%			
		diode (see note)			
CR1-6	48-80236E08	silicon			
CR100, 101	48-80007E02	zener $\pm 5\%$ , 12V, 400mW			
CR200, 201	48-83654H01				
CR202, 203	48-80007E02	zener $\pm 5\%$ , 12V, 400mW			
CR300	48-80236E07				
CR301	48-82178A01	germanium			
CR400	48-83654H01				
CR500-503	48-83654H01				
CR504-507	48-80140L11	zener, 7.5V			
CR508	48-83654H01				
CR509-511	48-80140L06	zener, 5.1V			
CR513, 514	48-83654H01				
CR515, 516	48-80013E02	contact			

REFERENCE SYMBOL	MOTOROLA PART NO.	DESCRIPTION	REFERENCE SYMBOL	MOTOROLA PART NO.	DESCRIPTION
		hybrid (see note)			
HY300	01-80739T59	transmission gate hybrid			
HY301	01-80740T15	squelch hybrid			
HY500	01-80739T60	watchdog timer hybrid			
		connector receptacle			
J1	01-80708T31	front connector and feedthru plate			
J100	28-84318M06	2-contact			
J101	28-80085E24	8-contact			
J200	28-84318M07	3-contact			
J301	09-80269B05	20-contact socket			
J500, 501	28-84318M06	2-contact			
JU1	06-11024B23	jumper			
JU100, 101	09-80080L01	jumper			
JU200	09-80080L01	jumper			
JU501	09-80080L01	jumper			
		coil			
L300	24-80293D02	ferrite, $\frac{1}{2}$ turn			
L400-402	24-80036A01	ferrite, $\frac{1}{2}$ turn			
L403	01-80741T98	standup ferrite with heat shrink			
L500-502	24-80138G04	5.6 $\mu\text{H} \pm 5\%$ , axial			
		connector plug			
P300	28-80264K01	10-contact			
P601, 602	28-82647K02	10-contact			
		transistor (see note)			
Q1	48-82233P13	NPN, type 33P13			
Q1	48-80141L02	NPN			
Q1, 2	48-80141L04	NPN			
Q2	48-80141L03	PNP			
Q2	48-80141L02	NPN			
Q2, 3	48-82233P13	NPN, type 33P13			
Q3	48-80141L02	NPN			
Q3	48-80141L01	PNP			
Q3	48-82233P14	PNP, type 33P14 SW			
Q4	48-80141L02	NPN			
Q4	48-82233P13	NPN, type 33P13			
Q100	48-80089660	P-Chan, JFET			
Q200	48-80141L02	NPN			
Q201	48-80141L03	PNP			
Q202, 203	48-80141L02	NPN			
Q204	48-80141L02	NPN			
Q400	48-84413L06	NPN			
Q401	48-84413L07	PNP			
Q402	01-80734T95	PNP, transistors and clip			
Q403	01-80734T96	NPN, transistors and clip			
Q404	48-80141L02	NPN			
Q500	48-80141L03	PNP			
Q501, 502	48-80141L04	NPN			
Q503	48-80141L03	PNP			
Q504, 505	48-80141L02	NPN			
Q506	48-80141L04	NPN			
Q507, 508	48-80141L03	PNP			
Q509	48-80141L07	NPN			
Q510	48-80141L02	NPN			
Q511	48-80089328	PNP, type M9328			
Q512, 513	48-80141L04	NPN			
Q514, 516	48-80141L01	PNP			
Q517	48-80141L02	NPN			
		resistor, fixed, $\Omega \pm 5\%$ , $\frac{1}{4}$ W unless otherwise stated			
R6	06-11024A33	220 $\Omega \pm 5\%$			
R7	06-11024A91	56k			
R9	06-11024A89	47k			
R12, 16	06-11024A31	220, $\frac{1}{4}$ W			
R25	06-11024B20	820k			
R31	06-11024A73	10k			
R100	06-11024A01	10			
R101	06-11024A43	560			
R102	06-11024A49	1k			
R103	06-11024A87	39k			
R104	06-11049B94	1k $\pm 1\%$ , $\frac{1}{4}$ W			
R105	06-11049B97	820 $\Omega \pm 1\%$ , $\frac{1}{4}$ W			
R106	06-11024A87	39k			
R107	06-11024A67	5.6k			
R108	18-80087E08	10k potentiometer			
R109	06-11024A67	5.6k			
R110	06-11024A67	39k			
R111	18-80087E08	10k potentiometer			
R112	06-11024A82	24k			
R113	06-11024A73	10k			
R114	06-11024A62	3.6k			
R115	06-11024A79	16k			
R116	06-11024A84	30k			
R117	06-11024A77	15k			
R118	06-11024A25	100			
R119	06-11024A81	22k			
R120	06-11024A65	4.7k			
R121	06-11024B02	150k			
R122	06-11024A89	47k			
R123	06-11024A72	9.1k			

REFERENCE SYMBOL	MOTOROLA PART NO.	DESCRIPTION
R124	06-11024A89	47k
R125	06-11024A92	62k
R126	06-11024A71	8.2k
R200	06-11024A71	8.2k
R201	06-11024A78	16k
R202	06-11024B04	180k
R203	06-11024A59	2.7k
R204	06-11024A73	10k
R205	06-11024A80	180k
R206	06-11024A83	27k
R208, 209	06-11024A89	47k
R210	06-11024A25	100
R211	06-11024A78	16k
R212	06-11024A61	3.3k
R213	18-05500L17	1.5k $\pm 20\%$ , 100V, potentiometer
R214	06-11024A65	4.7k
R215-217	06-11024A89	47k
R218	06-11024A73	10k
R300	06-11024A71	8.2k
R301	06-11024A60	3k
R302	06-11024A93	68k
R303	06-11024A73	10k
R304	06-11024A65	4.7k
R305	06-11024A66	5.1k
R306	06-11024A73	10k
R307	06-11024A92	62k
R308	06-11024A73	10k
R400	06-11024A87	100k
R401	06-11024A98	110k
R402	06-11024A59	2.7k
R403, 404	06-11024A89	47k
R405	06-11024A83	27k
R406	06-11024A77	15k
R407, 408	06-11009E01	10, ¼ W
R409	06-11024A65	4.7k
R410	06-11009E15	39, ¼ W
R411	06-11024A65	4.7k
R412	06-11024A73	10k
R413	06-11024A33	22k
R414, 415	06-11009E01	10, ¼ W
R417	06-11024A49	1k
R418	06-11024A73	10k
R419	17-82350A14	.08 $\pm 20\%$ , 1 W
R500	06-11024A65	4.7k
R501	06-11024A25	100
R502, 503	06-11024A57	2.2k
R504	06-11024A25	100
R505	06-11024A65	4.7k
R506, 507	06-11024A57	2.2k
R508	06-11024A79	18k
R509	06-11024A65	4.7k
R510	06-11024A97	100k
R511	06-11024A89	47k
R512	06-11024A73	10k
R513	06-11024A81	22k
R514	06-11024A97	100k
R515	06-11024A65	4.7k
R516	06-11024A77	15k
R517	06-11024A73	10k
R518	06-11024A97	100k
R519	06-11024A65	4.7k
R520	06-11024A57	2.2k
R521	06-11024A61	3.3k
R522	06-11024A49	1k
R523	06-11024A65	4.7k
R524, 525	06-11024A89	47k
R526	06-11024A73	10k
R527	06-11009A43	560, ¼ W
R528	06-11024A89	47k
R529	06-11024A65	4.7k
R530	06-11024A81	22k
R531	06-11024A89	47k
R532, 533	06-11024A81	22k
R534	06-11024A65	4.7k
R535	06-11024A73	10k
R536	06-11024A89	47k
R537, 538	06-11024A65	4.7k
R542	06-11024A95	82k
R543	06-11024A98	110k
R544	06-11024A97	100k
R545	06-11024A89	47k
R546, 547	06-11024A81	22k
R548	06-11024A25	100
R549	06-11024A49	1k
R550	06-11024A25	100k
R551, 552	06-11024A73	10k
		<b>thermistor</b>
RT100	06-80176D03	thermistor
		<b>transformer</b>
T400	25-84083B03	audio transformer

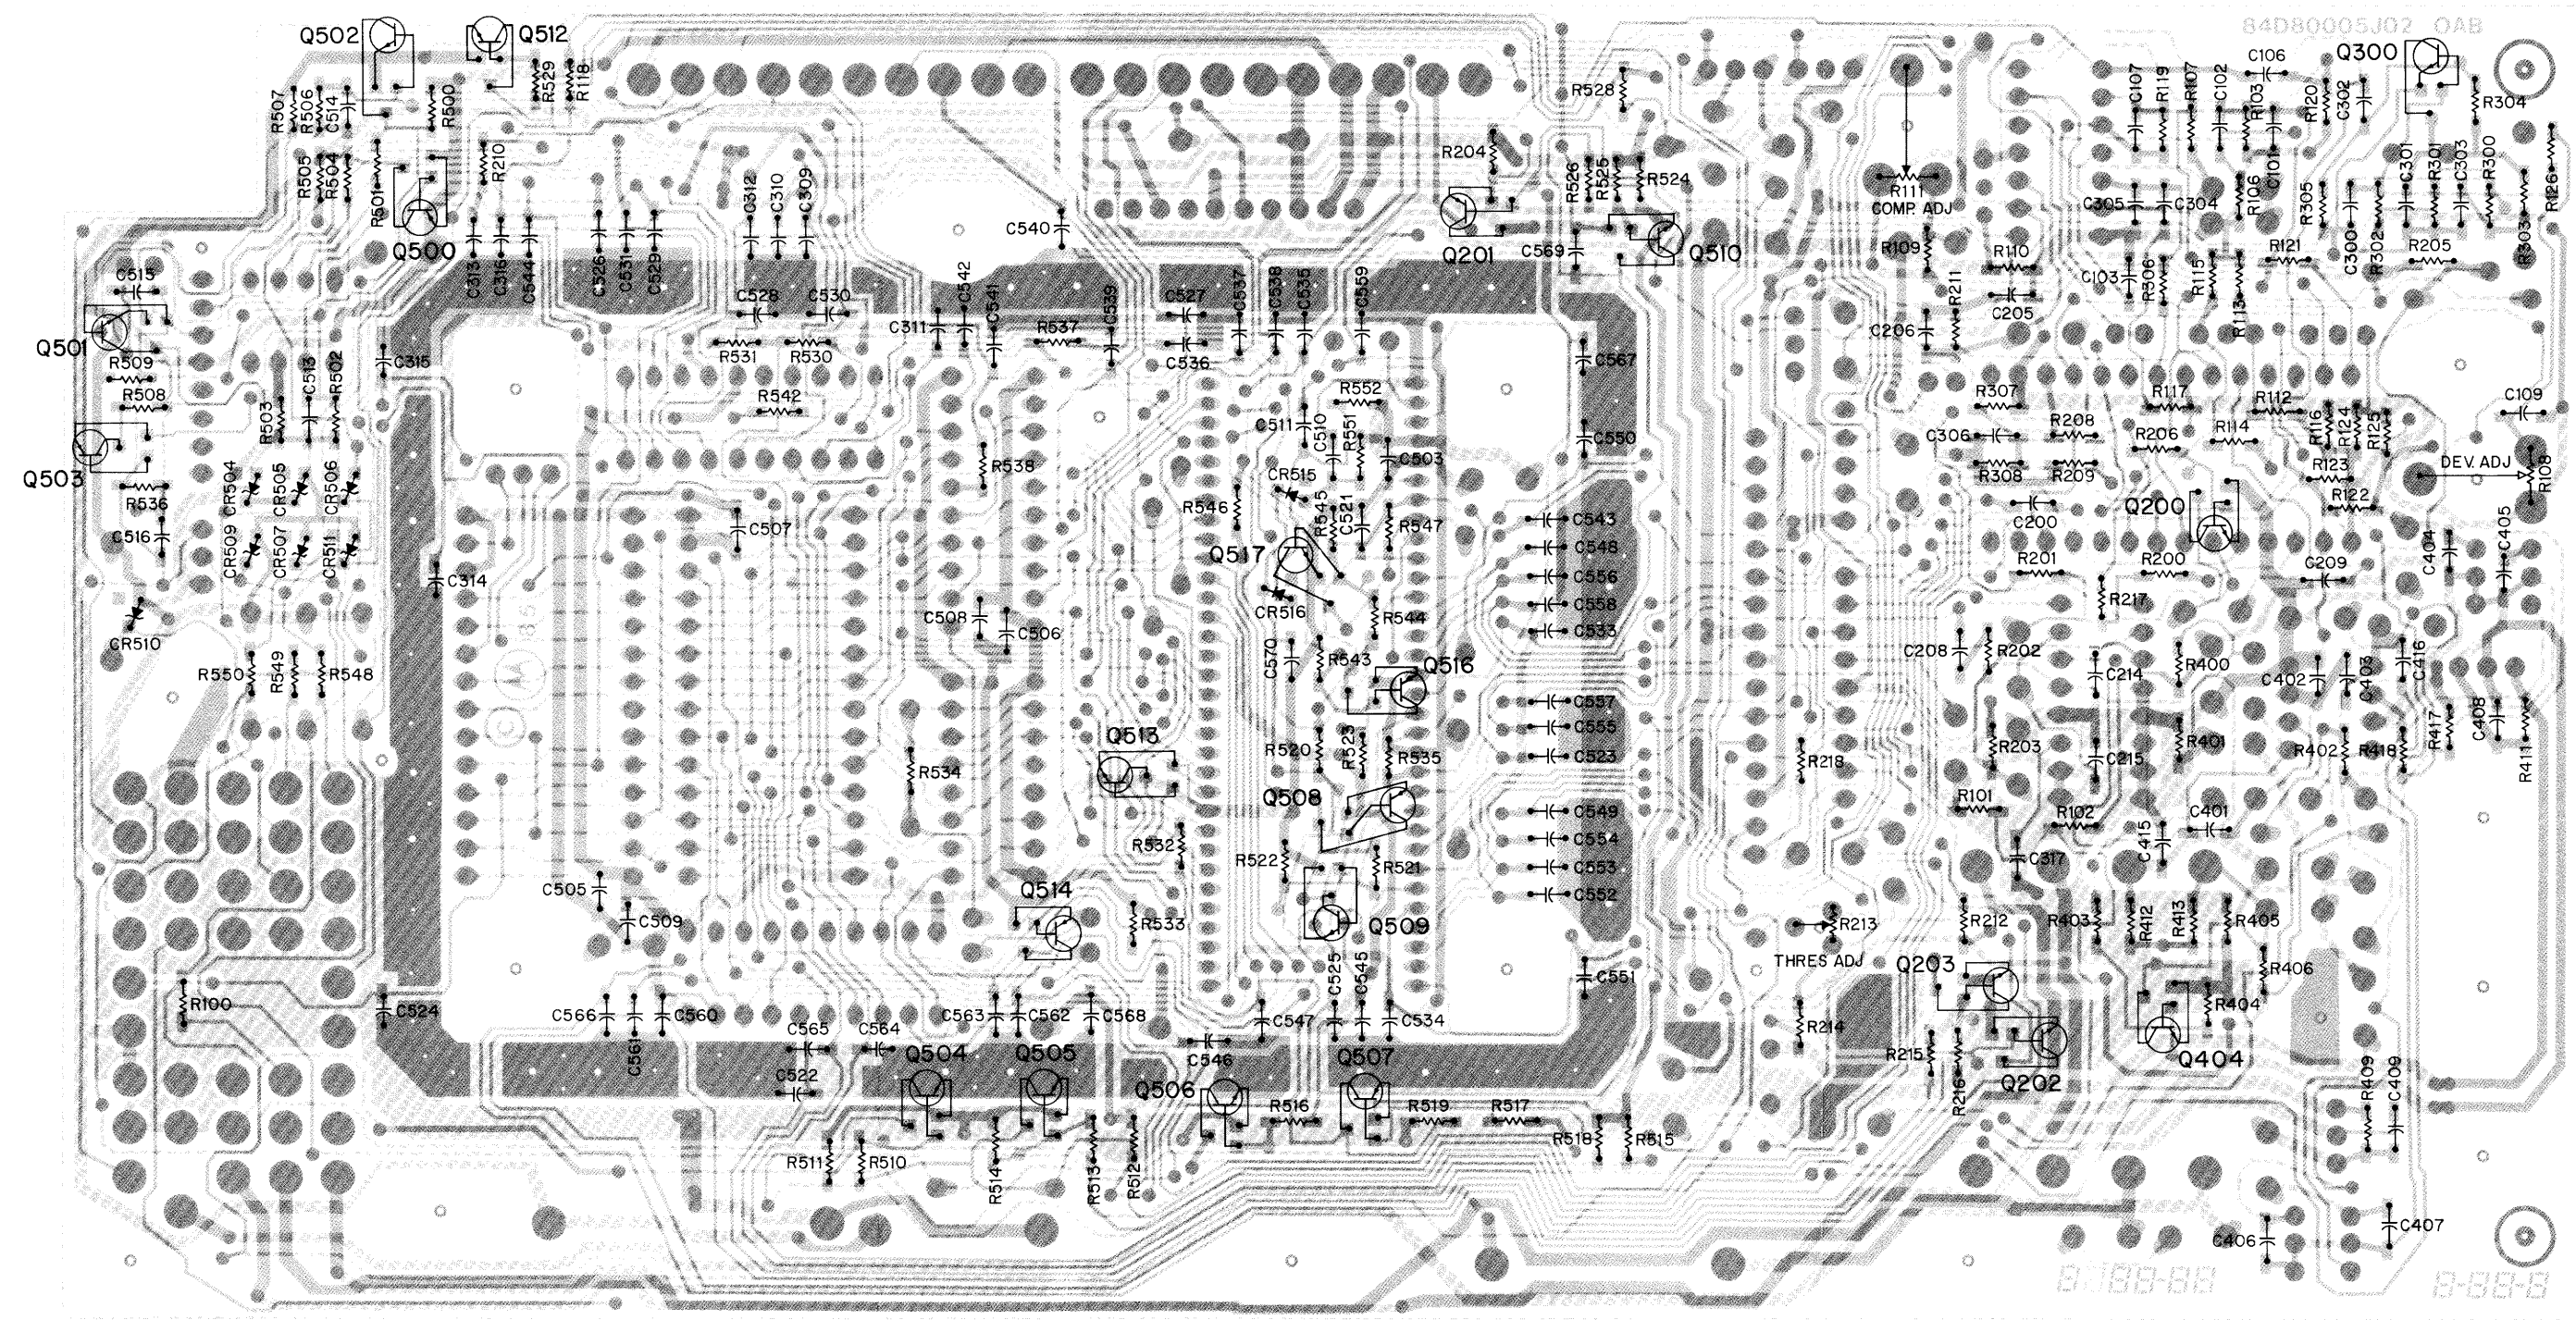

Schematic, Circuit Board Diagram, and Parts Lists for Personality Board  
**PEW-2586-O**  
 (Sheet 4 of 4)  
 2/17/86

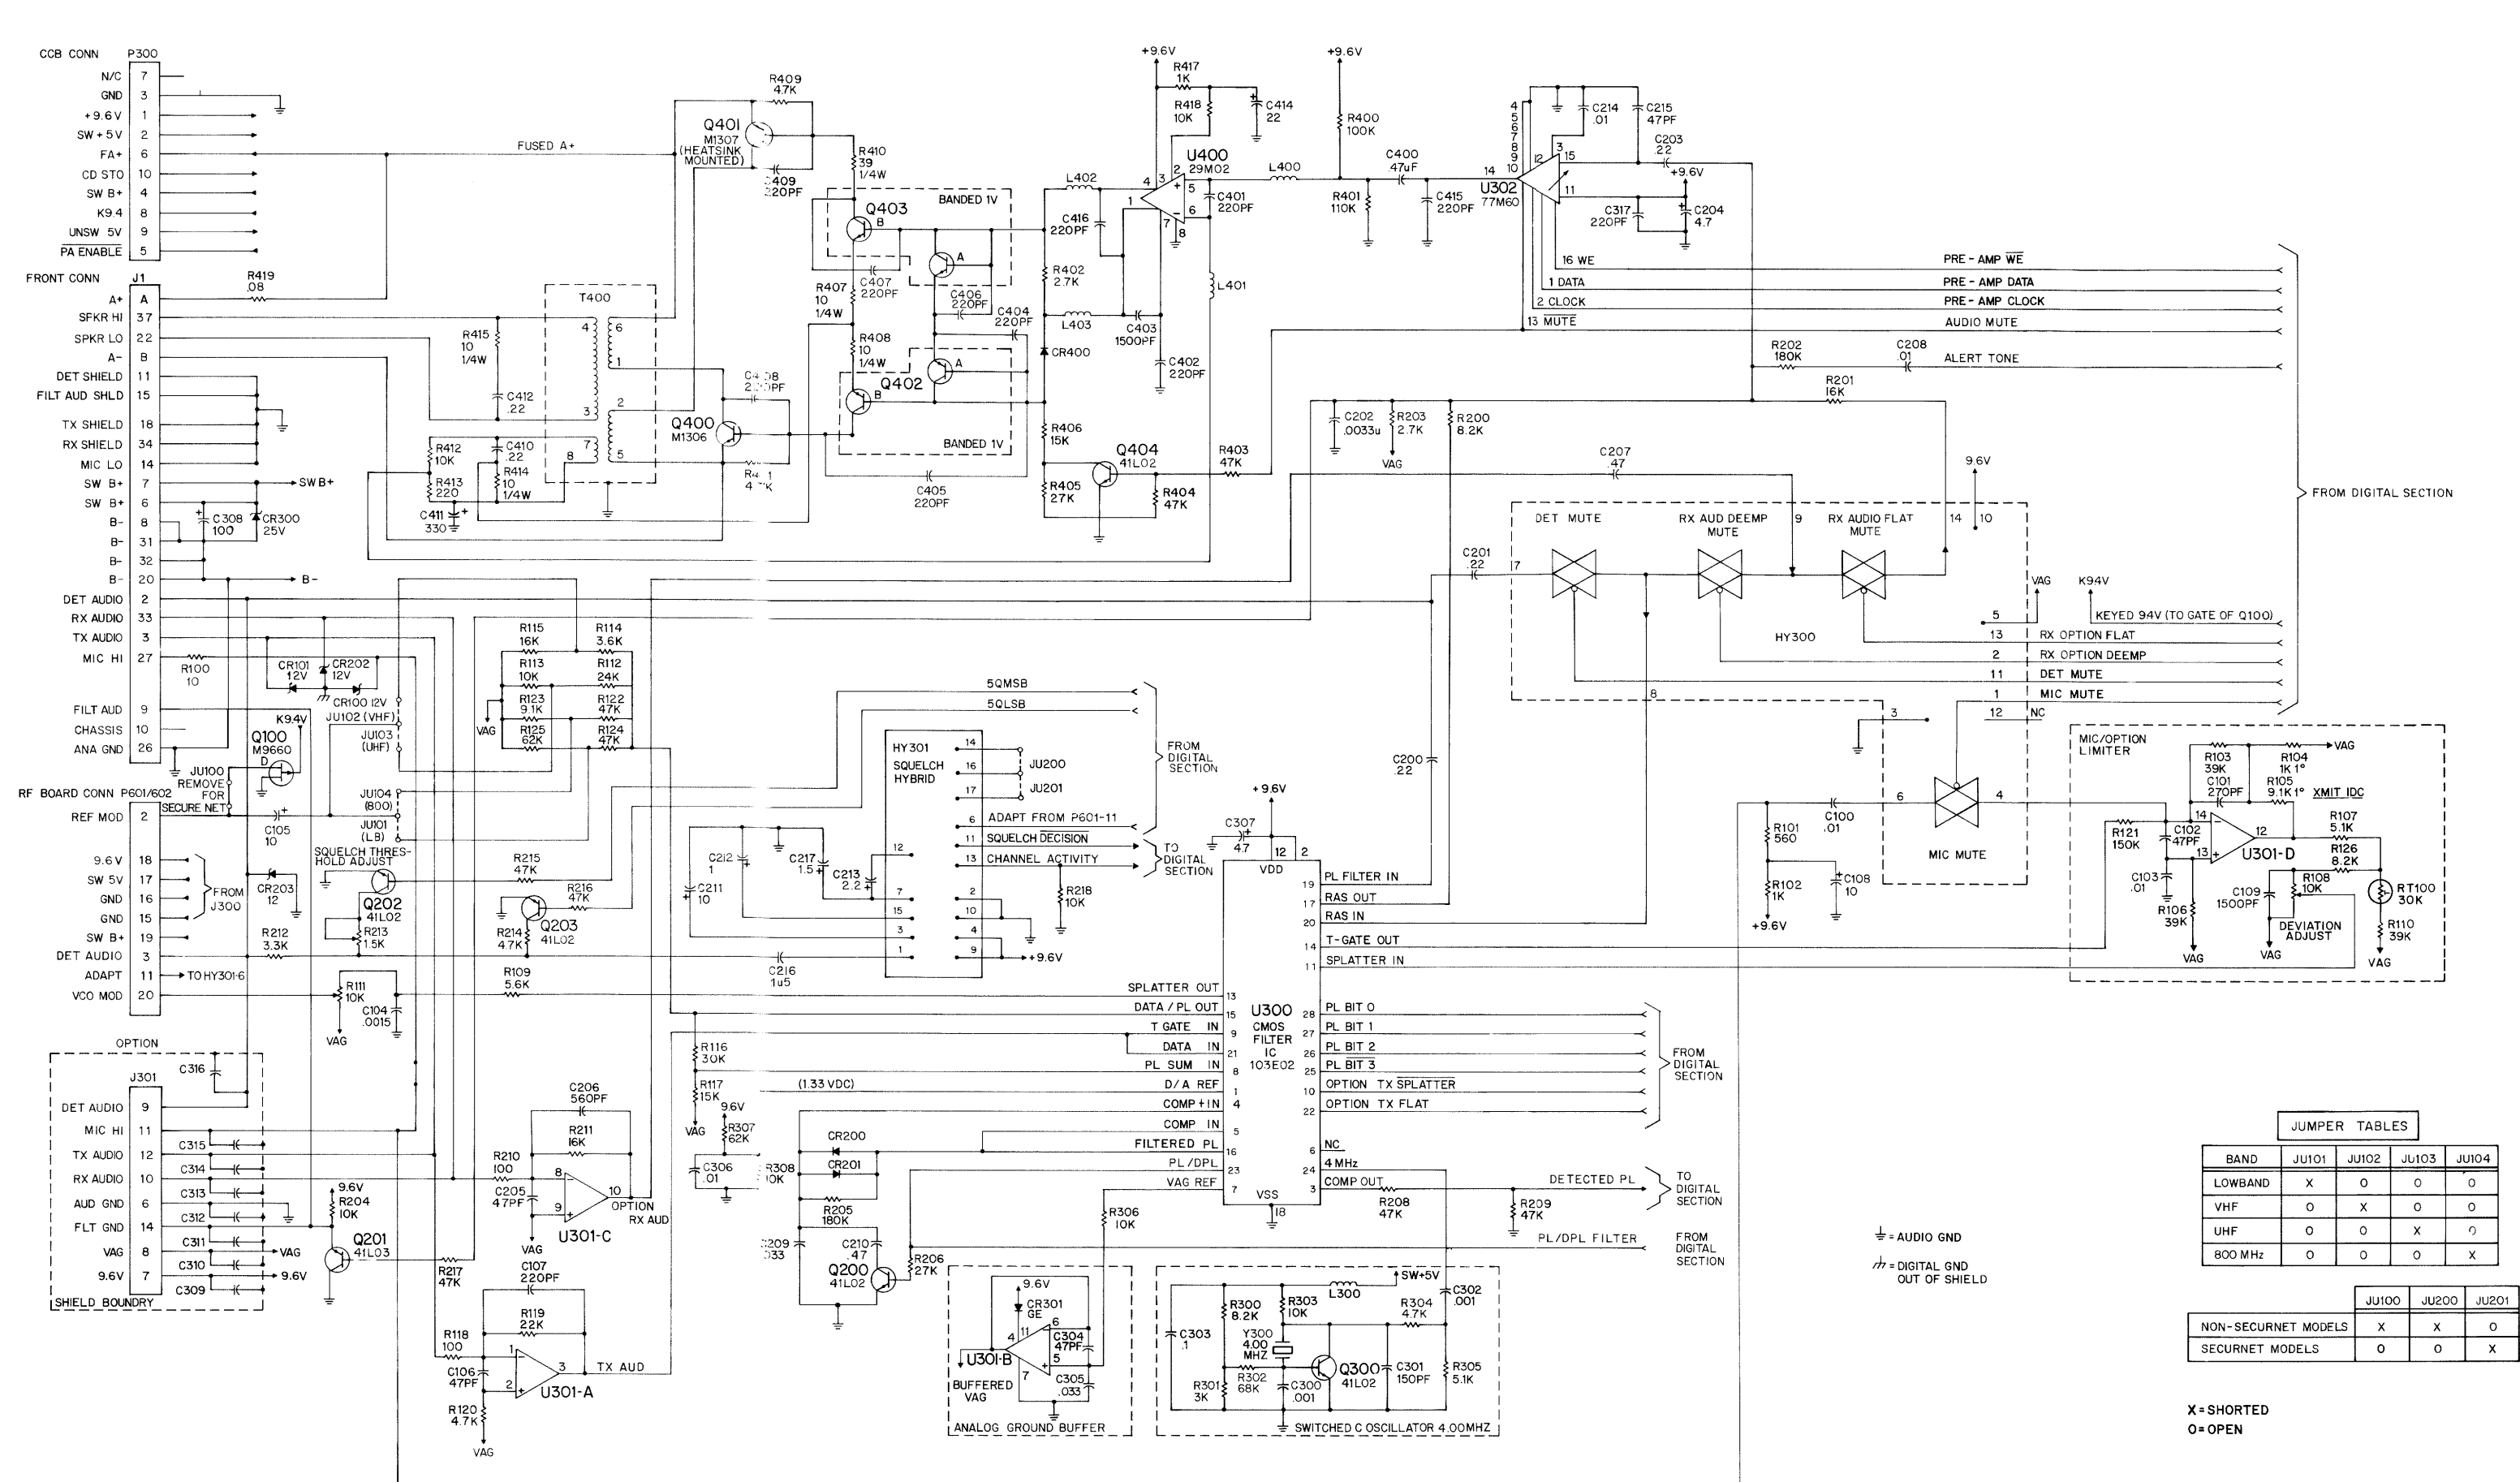

**1. Transmitter (VHF/UHF)**

This chart replaces Table 4 in your VHF Instruction Manual, Transmitter Section.

**1.1 DESIGNATOR CHANGES**

The following changes must be made to the text in your Instruction Manual to accurately adjust and troubleshoot the VHF/UHF power controls.

The text changes are as follows:

**1.1.1 VHF Radios Only**

The following troubleshooting chart (Table 1) uses the new designators and does not require change.

From	To	From	To
U901 — U900		Q907 — Q904	
U901A — U900A		Q903 — Q900	
U901B — U900B		Q908 — Q905	
Q904 — Q901		R911 — R908	
Q905 — Q902		R939 — R932	
Q906 — Q903			

*Table 1. Troubleshooting Chart for VHF Transmitter Control and Protection Circuitry*

Step	Symptom	Procedure	Normal Indication	If Normal	If Abnormal
1	No Meter 3 or 5 with all controls open (POWER SET clockwise and CURRENT LIMIT counterclockwise)	a. Disconnect exciter from synthesizer at J700. Check for keyed 9.5 V dc at Pin 8, U900.	9.5 V dc	Go to Step 1b.	a. Check PA ENABLE at J300-5. b. Check for synthesizer lock. c. Check Q906 (TX 9.5 V switch). d. Check PA ENABLE switch (Q5 and Q6).
		b. Measure output voltage of U900A, Pin 7.	> 3.3 V dc	Repair fault in control voltage amplifiers Q900 and Q901.	Go to Step 1c.
		c. Measure voltages to input of U900A, Pins 5 and 6.	Pin 5 > Pin 6	U900 defective.	Check for shorts or opens in resistive feed circuits to Pins 5 and 6.
2	Meter 3 reads max of about 10 $\mu$ A with all controls fully open. Little or no output power.	a. Disconnect exciter from synthesizer at J700. Measure voltage of protection comparator output, Pin 1, U900B.	> 8 V dc	Troubleshoot Q902 circuit.	Go to Step 2b.
		b. Measure voltages to input of U900B, Pins 2 and 3.	Pin 3 > Pin 2	U900 defective.	Analyze and repair current limiter circuitry Q903, Q904, and Q905.
3	All controls inoperative and Meter 3 at 25 $\mu$ A	a. Disconnect exciter from synthesizer at J1101. Observe Meter 3 in RX mode.	0 $\mu$ A	Go to Step 3b.	Repair fault in control voltage amplifiers Q900 and Q901.
		b. Set all controls counterclockwise. Measure Pins 5 and 6, U900A in TX mode.	Pin 6 > Pin 5	U900 defective.	Look for defect in voltage reference network R905, R903, R902, R907, and R908.

Table 1. Continued

Step	Symptom	Procedure	Normal Indication	If Normal	If Abnormal
4	Control voltage limit (R908), current limit (R932), and reflected power (VSWR) protection inoperative	Q902 and associated resistors probably open. Analyze and repair.			
5	Current limit (R932) inoperative	Disconnect exciter from synthesizer at J700. Unsolder CURRENT SENSE line (ORG) from C887. Observe Meter 3.	15 $\mu$ A	Check for short to A+ of current sense line.	Analyze fault in current limit circuit Q903, Q904, and Q905 and repair.
6	Reflected power (VSWR) protection inoperative	Check and repair defect in reflected power detector components R901, CR901, etc. on Directional Coupler Board.			
7	Thermal protection inoperative	Check and repair defect in thermal protection components R901, R900, and CR900 on Common Circuits Board.			
8	Power set (R908) inoperative.	Check and repair defect in forward power detector components R902, CR902, etc.			

### 1.1.2 UHF Radios only

The text changes are as follows:

From	To
R908 — R912	
R917 — R901	

The following charts (Tables 2 and 3) for troubleshooting your UHF transmitter contain the updated designators, and do not require changes. These charts replace the charts in your UHF Instruction Manual, Transmitter Section.

Table 2. UHF Transmitter Troubleshooting Procedure

Step	Symptom	Procedure	Normal Indication	If Normal	If Abnormal
1	Suspected Transmitter Failure	Measure RF output power at antenna connector.	Rated power	No transmitter malfunction	High Power—perform Transmitter Control and Protection Circuit Troubleshooting Procedure. No power—go to 2. Low power—go to 3.
2	No Output Power	a. Set R912 and R901 fully clockwise. Observe Meter 5.	Greater than 5 $\mu$ A	Go to b.	Go to 3.
		b. Measure dc voltage across antenna relay coil during TX.	5 V	Go to c.	Check coil continuity (dc resistance approx. 160 ohms); if good, troubleshoot relay drive circuitry.
		c. Check reed switch continuity.	Continuous during TX	Go to d.	Replace switch.
		d. Check harmonic filter and output cable for shorts and discontinuities.	See schematic.	Go to 3.	Repair defect.
3	Low Output Power	a. Measure dc level at collector of Q802.	Greater than 11 V	Go to b.	Perform Transmitter Control and Protection Circuit Troubleshooting Procedure.
		b. Measure RF signal level at VCO buffer output.	+22 dBm min.	Perform Power Amplifier Troubleshooting Procedure.	Perform Synthesizer Troubleshooting Procedure.

*Table 3. UHF Transmitter Control and Protection Circuitry Troubleshooting Chart*

Step	Symptom	Procedure	Normal Indication	If Normal	If Abnormal
1	Little or no power with all controls open (POWER SET clockwise and CURRENT LIMIT clockwise).	a. Disconnect LLA from synthesizer at J700. Check for keyed 9.5 V dc at Pin 4, U900.	9.5 V dc	Go to Step 1b.	a. Check PA ENABLE at J300-5. b. Check for synthesizer lock. c. Check PA ENABLE switch (Q902).
		b. Measure output voltage of U900D, Pin 1.	> 5.0 V dc	Repair fault in control voltage amplifiers Q900 and Q901.	Go to Step 1c.
		c. Measure voltages to input of U900D, Pins 2 and 3.	Pin 3 > Pin 2	U900 defective.	Check for shorts or opens in resistive feed circuits to Pins 2 and 3 of J950.
2	All controls inoperative.	a. Disconnect LLA from synthesizer at J700.	3 V to 120 V	Go to Step 3b.	Repair fault in control voltage amplifiers Q900 and Q901.
		b. Set all controls clockwise. Measure Pins 9 and 10, U900B in TX mode.	Pin 10 > Pin 9	U900 defective.	Look for defect in VSWR shutback.
3	Current limit (R901) inoperative.	Disconnect exciter from synthesizer at J700. Unsolder current sense line (orange) from C887. Observe drain current.	10 A	Check for short to A+ of current sense line.	Analyze fault in current limit circuit U900C and repair.
4	Reflected power (VSWR) protection inoperative.	Check and repair defect in reflected power detector components U900B, CR902, etc.			
5	Thermal protection inoperative.	Check and repair defect in thermal protection components U900A, CR901, RT801, etc.			
6	Power set (R912) inoperative.	Check and repair defect in forward power detector components R902, CR902, etc. of directional coupler.			



## 1. Description

Common board circuitry performs two functions. Voltage regulation and RF amplifier power control. The circuit description, theory of operation, and troubleshooting chart for the RF power control are contained in the transmitter section of your manual. The voltage regulators are covered in this section.

### Note

This supplement also contains updated information about component designators in the Troubleshooting charts.

## 2. Theory of Operation (regulators)

The voltage regulators consist of the 1000 series part designators. The regulator voltages are: switched 9.6 volts, switched 5.0 volts, and unswitched 5.0 volts. The switched supplies (9.6 and 5.0 volts) are controlled by the power switch at the control head. The unswitched 5.0 volt supply remains powered up provided that the A + lead to the radio is live, and the B - lead provides a ground return path.

### 2.1 9.6 VOLT REGULATOR

The 9.6 volt regulator obtains its reference from the zener diode on HY1000. The reference voltage input of U1000-B at Pin 5 is approximately 7.0 volts DC. The output of U1000-B at Pin 4 is the 9.6 volt reference. This reference voltage is amplified by U1000-C, Q1001, and the output transistor Q1000. The 9.6 volt regulator is protected against short circuits. If a short circuit occurs on the 9.6 volt supply line, the diode CR1001 forward biases, removes base drive to Q1001, and shuts down the regulator to prevent further damage.

### 2.2 UNSWITCHED 5.0 VOLT REGULATOR

The unswitched 5.0 volt regulator is contained in the TO220 packaged device U1001. The device generates its own reference, and is internally current limited and thermally protected. This 5.0 volt supply is used as reference for the switched 5.0 volt supply, so the two regulated voltages closely track each other.

### 2.3 SWITCHED 5.0 VOLT SUPPLY

The switched 5.0 volt supply obtains its reference voltage from the unswitched 5.0 volt supply. The switched 5.0 volt supply is protected against excessive output current drain. Excessive current drain is sensed by the output resistors R1021 and R1022. If the drop across these resistors is .6 volts or more, the transistor Q1005 begins to conduct. This begins starving base drive to the output Darlington transistor Q1006.

### 2.4 SHUTBACK CIRCUIT

Both the switched supplies (5.0 and 9.6 volt) switch on and off by the shutback circuit. The shutback circuit senses the SW B + line voltage, and turns the regulators off if line voltage is irregular. The shutback circuit senses over and under voltage conditions on the SW B + line. The 9.6 volt regulator shuts back through Q1002. The base of Q1002 normally pulls low through R1006 and allows a path for Q1001 emitter current. When shut back, the base of Q1002 is pulled high by Q1004 and turns the 9.6 volt regulator off. The switched 5.0 volt regulator is shut back in a similar manner. The 5.0 volt supply is shut back through the diode CR1003. The diode is normally reverse biased and has no effect on the circuit. When shut back, the diode conducts and forces the op-amp output (U1000-D) low. This causes the regulator to shut off completely. The shutback circuit senses the low-line shutback condition through the op-amp U1000-A. The op-amp compares the

unswitched 5.0 voltage on its positive input with the resistively divided SW B+ input on its negative input. The circuit shuts back the regulators when SW B+ falls to approximately 8.5 volts, and turns on when SW B+ is over 9.4 volts. The high line shutback is sensed by 18-volt zener diode VR1000. This diode is presented with the SW B+ line voltage by Q1003. VR1000 has no effect to the circuit until SW B+ reaches about 20.5 volts. The 18-volt zener then conducts and clamps the base voltage of Q1004 to 19 volts. As SW B+ rises, the transistor Q1004 conducts and shuts back the switched regulators at high SW B+ voltages.

### 3. Regulator Troubleshooting

The following situations are explained to help troubleshoot the regulators in the *SYNTOR X 9000* radio.

- Failure of the switched 5.0 and 9.6 volt regulators
- Failure of the unswitched 5.0 volt regulator ONLY
- Failure of the 9.6 volt regulator ONLY
- Failure of the switched 5.0 volt regulator ONLY

#### 3.1 FAILURE OF THE 5.0 AND 9.6 VOLT REGULATORS

(1) Inspect P300 and J1 and verify that they are properly installed.

(2) Measure SW B+ on the common circuits board. This voltage range is 10.7 to 16.2 volts. If SW B+ is outside of this range, the regulator shutback circuitry disables the regulators.

(3) Measure the voltage at the collector of Q1004. It should be .6 volts or less. If the collector is above .6 volts, repair the shutback circuit.

#### 3.2 FAILURE OF THE UNSWITCHED 5.0 VOLT REGULATOR ONLY

(1) Measure the input to U1001 Pin 1. This range is 10.7 to 16.2 volts. If not, repair the open path A+ or B- to the common circuits board.

(2) Measure the resistance from U1001 Pin 2 to B on the personality board. This should be below .1 ohms. If not, locate the resistive path or connector and repair.

(3) Measure the output of U1001 Pin 3. If not between 4.75 to 5.25 volts, unsolder Pin 3 to determine if the supply is shorted. If the unconnected output is not five volts, replace U1001.

#### 3.3 FAILURE OF THE 9.6 VOLT REGULATOR ONLY

(1) Measure the voltage at the emitter of Q1000. It should be between 10.7 to 16.2 volts. If not, find the open path supplying the collector.

(2) Check the op-amp output at U1000B Pin 4. It should be 6.65 to 7.35 volts. Next, check U1000 Pins 5 and 6. Reading should be 6.2 volts. If not, repair the reference circuit.

(3) Measure the base voltage on Q1001. This point is normally at 3.1 volts. If this point is below two volts or above six volts, repair the driving op-amp circuit involving U1000A.

(4) Measure the voltage on the base of Q1000 (output pass transistor). The base voltage should be .5 to .8 volts below the SW B+ voltage on the emitter of Q1000. If this voltage is out of range, repair the output driver involving Q1000 and Q1001.

#### 3.4 FAILURE OF THE SWITCHED 5.0 VOLT REGULATOR ONLY

(1) Measure the input reference voltage at U1000D Pin 13. This should be 4.75 to 5.25 volts. If not, recheck the unswitched 5.0 volt regulator output. If the unswitched 5.0 supply is present, unsolder U1000 Pin 13 to check if U1000 is faulty.

(2) Check the collector voltage of Q1005. Acceptable range is 10.7 to 16.2 volts. If not, find the open path to the common circuits board.

(3) Measure the driving op-amp U1000 Pin 12 to determine if sufficient base drive is present for Q1006. U1000 Pin 12 should be 6.4 to 7 volts. If this voltage is more than seven volts, check the voltage drop across R1016. The drop is approximately .2 volts. If there is little or no drop across R1016, replace Q1006. If the voltage drop is excessive, remove Q1005 to disable the current shutback circuit, and recheck. Should the drop still be excessive, measure the drop across R1021. If R1021 drop is more than .7 volts, locate the fault on the switched 5.0-volt line. This fault is probably on another board in the radio. If the R1021 voltage drop is less than .7 volts, replace Q1006. If the voltage on U1000 Pin 12 is below 6.4 and Pin 14 is less than Pin 13 of U1000, replace U1000. If U1000 Pin 14 is more than Pin 13, check for an open R1017 or shorted CR1003.


parts list

HLN4905A UHF Common Circuit Board MXW-2484-O


REFERENCE SYMBOL	MOTOROLA PART NO.	DESCRIPTION
C900-902	21-11014H32	capacitor, fixed, $\mu\text{F} \pm 10\%$ , 100V unless otherwise stated
C903, 904	23-11013B11	33, 10V, tantalum
C905	08-11051A16	.33 $\pm 5\%$ , 63V
C906	21-11014H32	20 pF $\pm 5\%$
C1000	08-11051A13	.1 $\pm 5\%$ , 63V
C1001, 1002	21-11015B05	220 pF
C1003	23-11019A39	47 $\pm 20\%$ , 16V, electrolytic
C1004	08-11051A10	.033 $\pm 5\%$ , 63V
C1005	21-11014B47	82 pF $\pm 5\%$
C1006	21-11015B05	220 pF
C1007	23-84538C06	47 $\pm 20\%$ , 20V, tantalum
C1008	23-11048C11	10 $\pm 20\%$ , 35V, electrolytic
C1009	23-11013E57	10 $\pm 20\%$ , 25V, tantalum
C1010	21-11015B05	220 pF
CR900-903	48-80005E01	diode (see note)
CR1000-1004	48-80005E01	silicon
HY1000	01-80715D03	hybrid regulator
J300	30-80263K01	connector receptacle
J950	28-84324M02	10 conductor
J951	28-84647L04	polarized 3-contact
JU900, 901	06-11009B23	6-contact
Q900	48-00869E42	transistor (see note)
Q901	48-84411L10	NPN
Q902	48-00869E42	PNP, heatsink mounted
Q1000	48-84413L05	NPN
Q1001	48-00869E40	PNP, type M9640
Q1002	48-00869E49	PNP
Q1003, 1004	48-00869E43	PNP
Q1005	48-00869E42	NPN
Q1006	48-84413L10	NPN, type M1310, heatsink mounted
R900	06-11049C79	resistor, fixed, $\Omega \pm 5\%$ , $\frac{1}{4}$ W unless otherwise stated
R901	18-80087E05	7.5k $\pm 1\%$ , metal film
R902	06-11049C91	2k, variable
R903	06-11049C79	10k $\pm 1\%$ , metal film
R904	06-11009B06	220k
R905	06-11009A61	3.3k
R906	06-11009A65	4.7k
R907	06-11009A73	10k
R908	06-11009A57	2.2k
R909	06-11009A49	1k
R910	06-11009A73	10k
R911	06-11009A69	6.8k
R912	18-80087E08	10k, variable
R913	06-11009A73	10k
R914	06-11009A15	39
R915	06-11009A59	2.7k
R916	06-11009A75	12k
R917	06-11009A41	470
R918	06-11009A27	120
R919	06-11009A39	390
R920, 921	06-11009A73	10k
R922, 923	06-11009A55	1.8k
R924	06-11009A65	4.7k
R1001	06-11009B06	220k
R1002	06-11009A49	1k
R1003, 1004	06-11009A35	270
R1005	06-11045A20	62 $\pm 5\%$ , $\frac{1}{2}$ W
R1006	06-11009A43	560
R1007	06-11009A66	5.1k
R1008	06-11009A88	43k
R1009	06-11009A65	4.7k
R1010	06-11009A66	5.1k
R1011	06-11009A65	4.7k
R1012	06-11009A55	1.8k
R1013	06-11009A66	5.1k
R1014	06-11009A81	22k
R1015	06-11009A35	270
R1016	06-11009A45	680
R1017	06-11009A65	4.7k
R1018, 1019	06-11009A59	2.7k
R1020	06-11009A35	270
R1021, 1022	06-80037C07	1.8, $\frac{1}{2}$ W
R1023	06-11009A66	5.1k
R1024	06-11009A73	10k
U900	51-80067C01	integrated circuit (see note)
U1000	51-80067C06	quad op amp
U1001	51-80068C02	voltage regulator, 5V

MXW-2484-O (2)

REFERENCE SYMBOL	MOTOROLA PART NO.	DESCRIPTION
VR900	48-82256C11	voltage regulator (see note)
VR1000	48-82256C53	10V, zener
		18V, zener
mechanical parts		
	14-83820M02	thermoconductor insulator
	04-84152B01	shoulder washer
	03-10905A05	machine screw (M3 x 0.5 x 8)
	05-80200K01	nylon rivet
note: For best performance, order diodes, transistors, and integrated circuits by Motorola part number.		

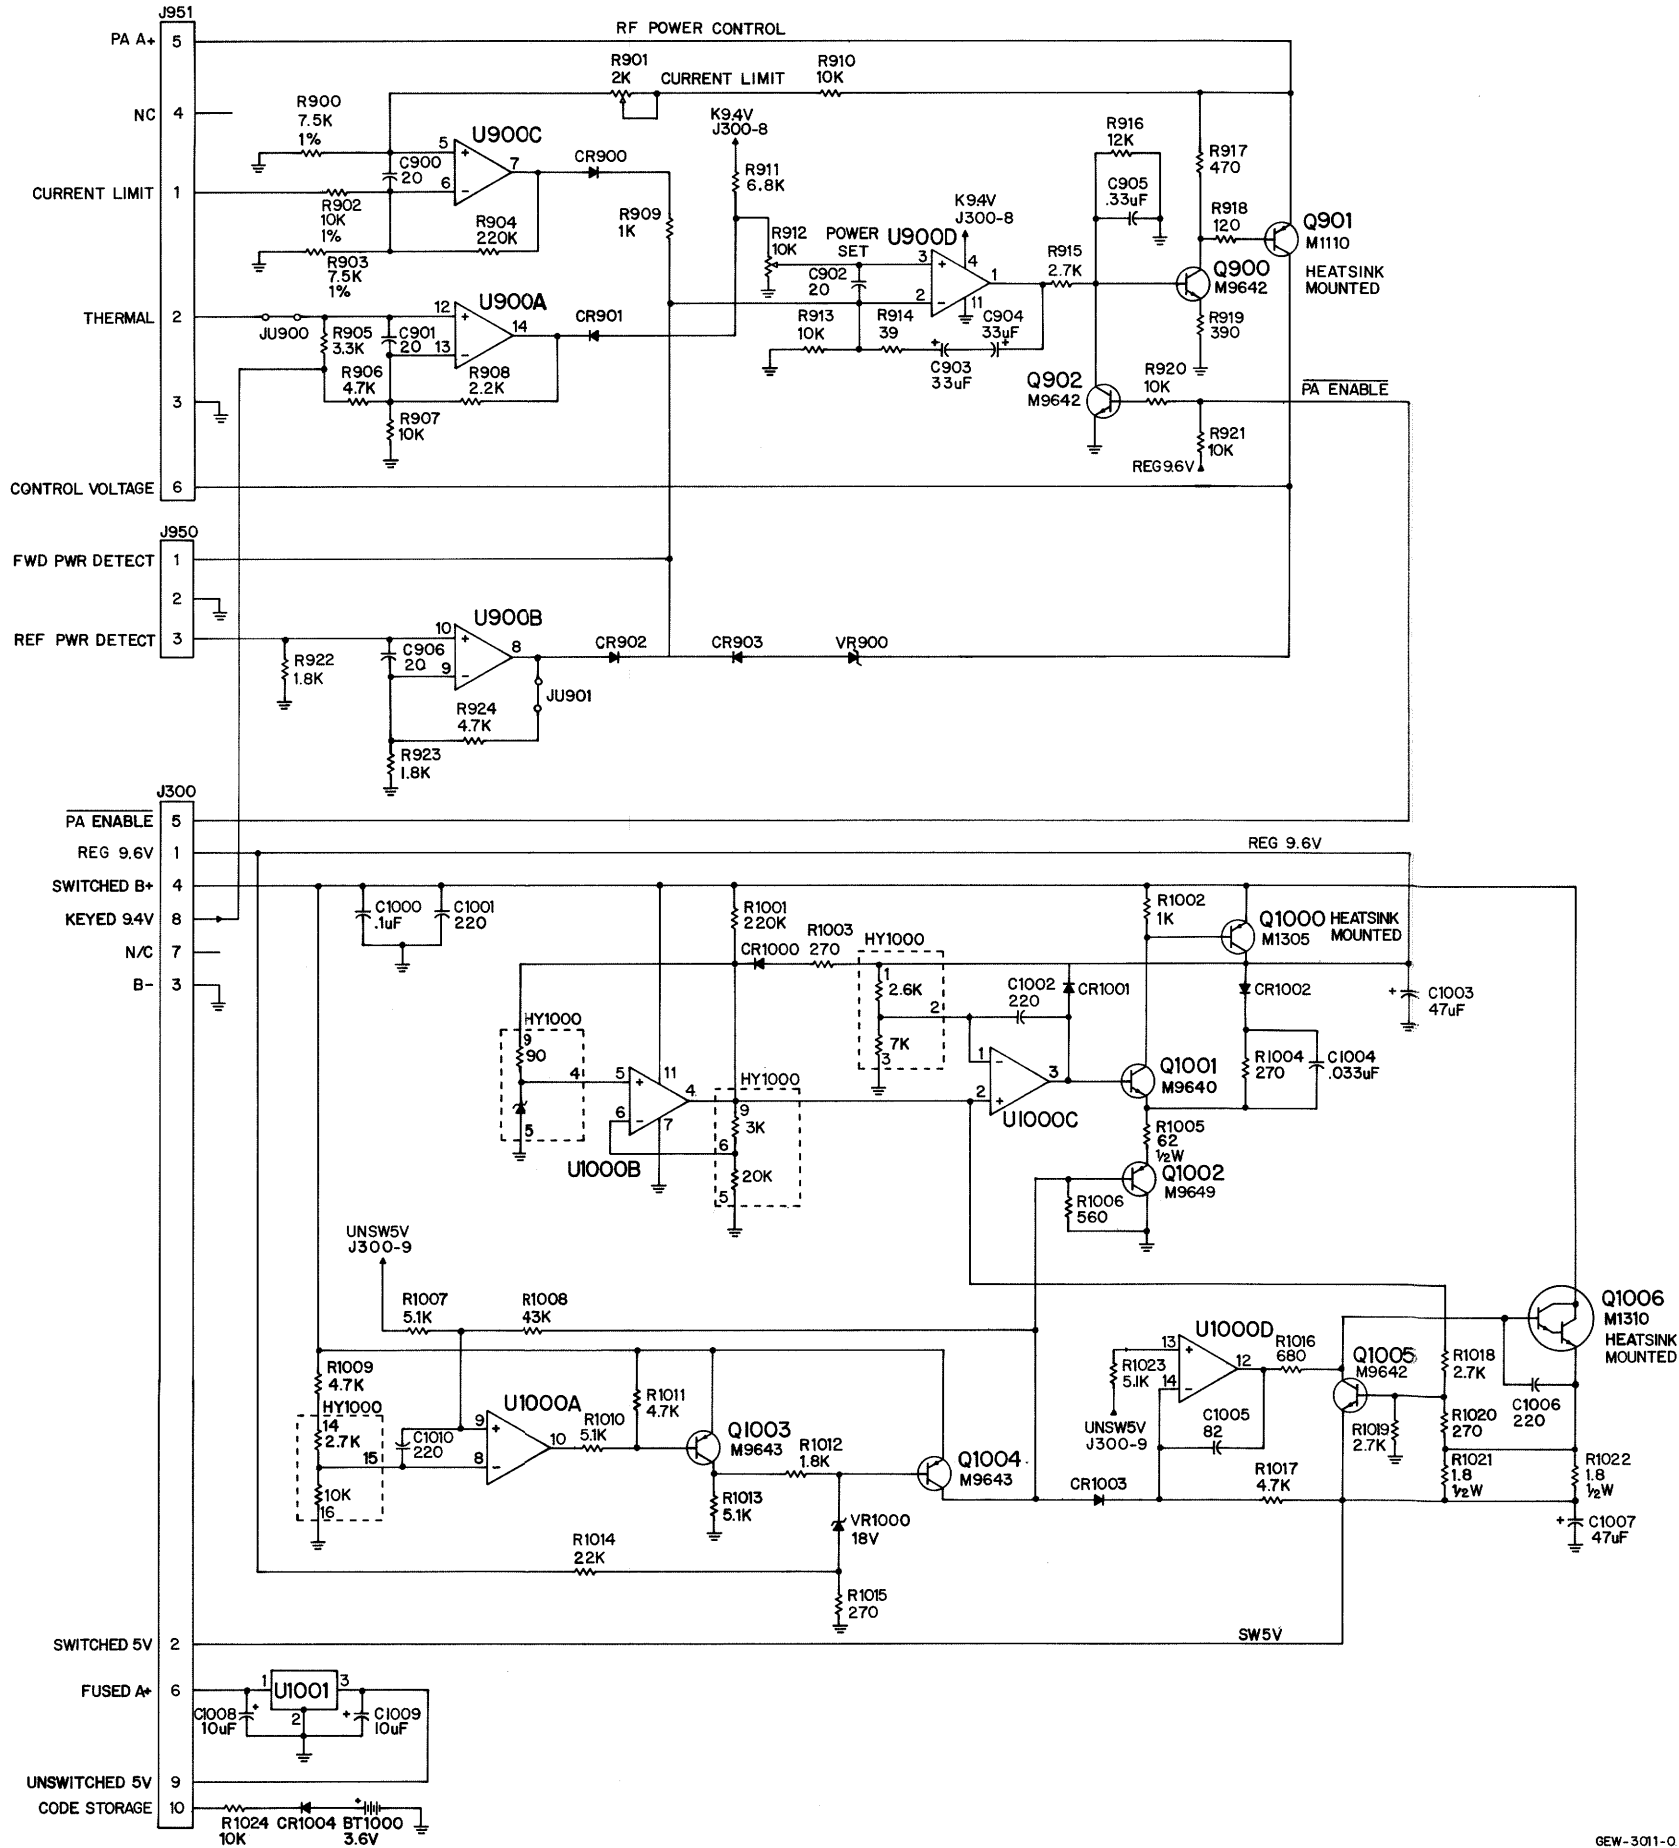

# VHF COMMON CIRCUIT BOARD

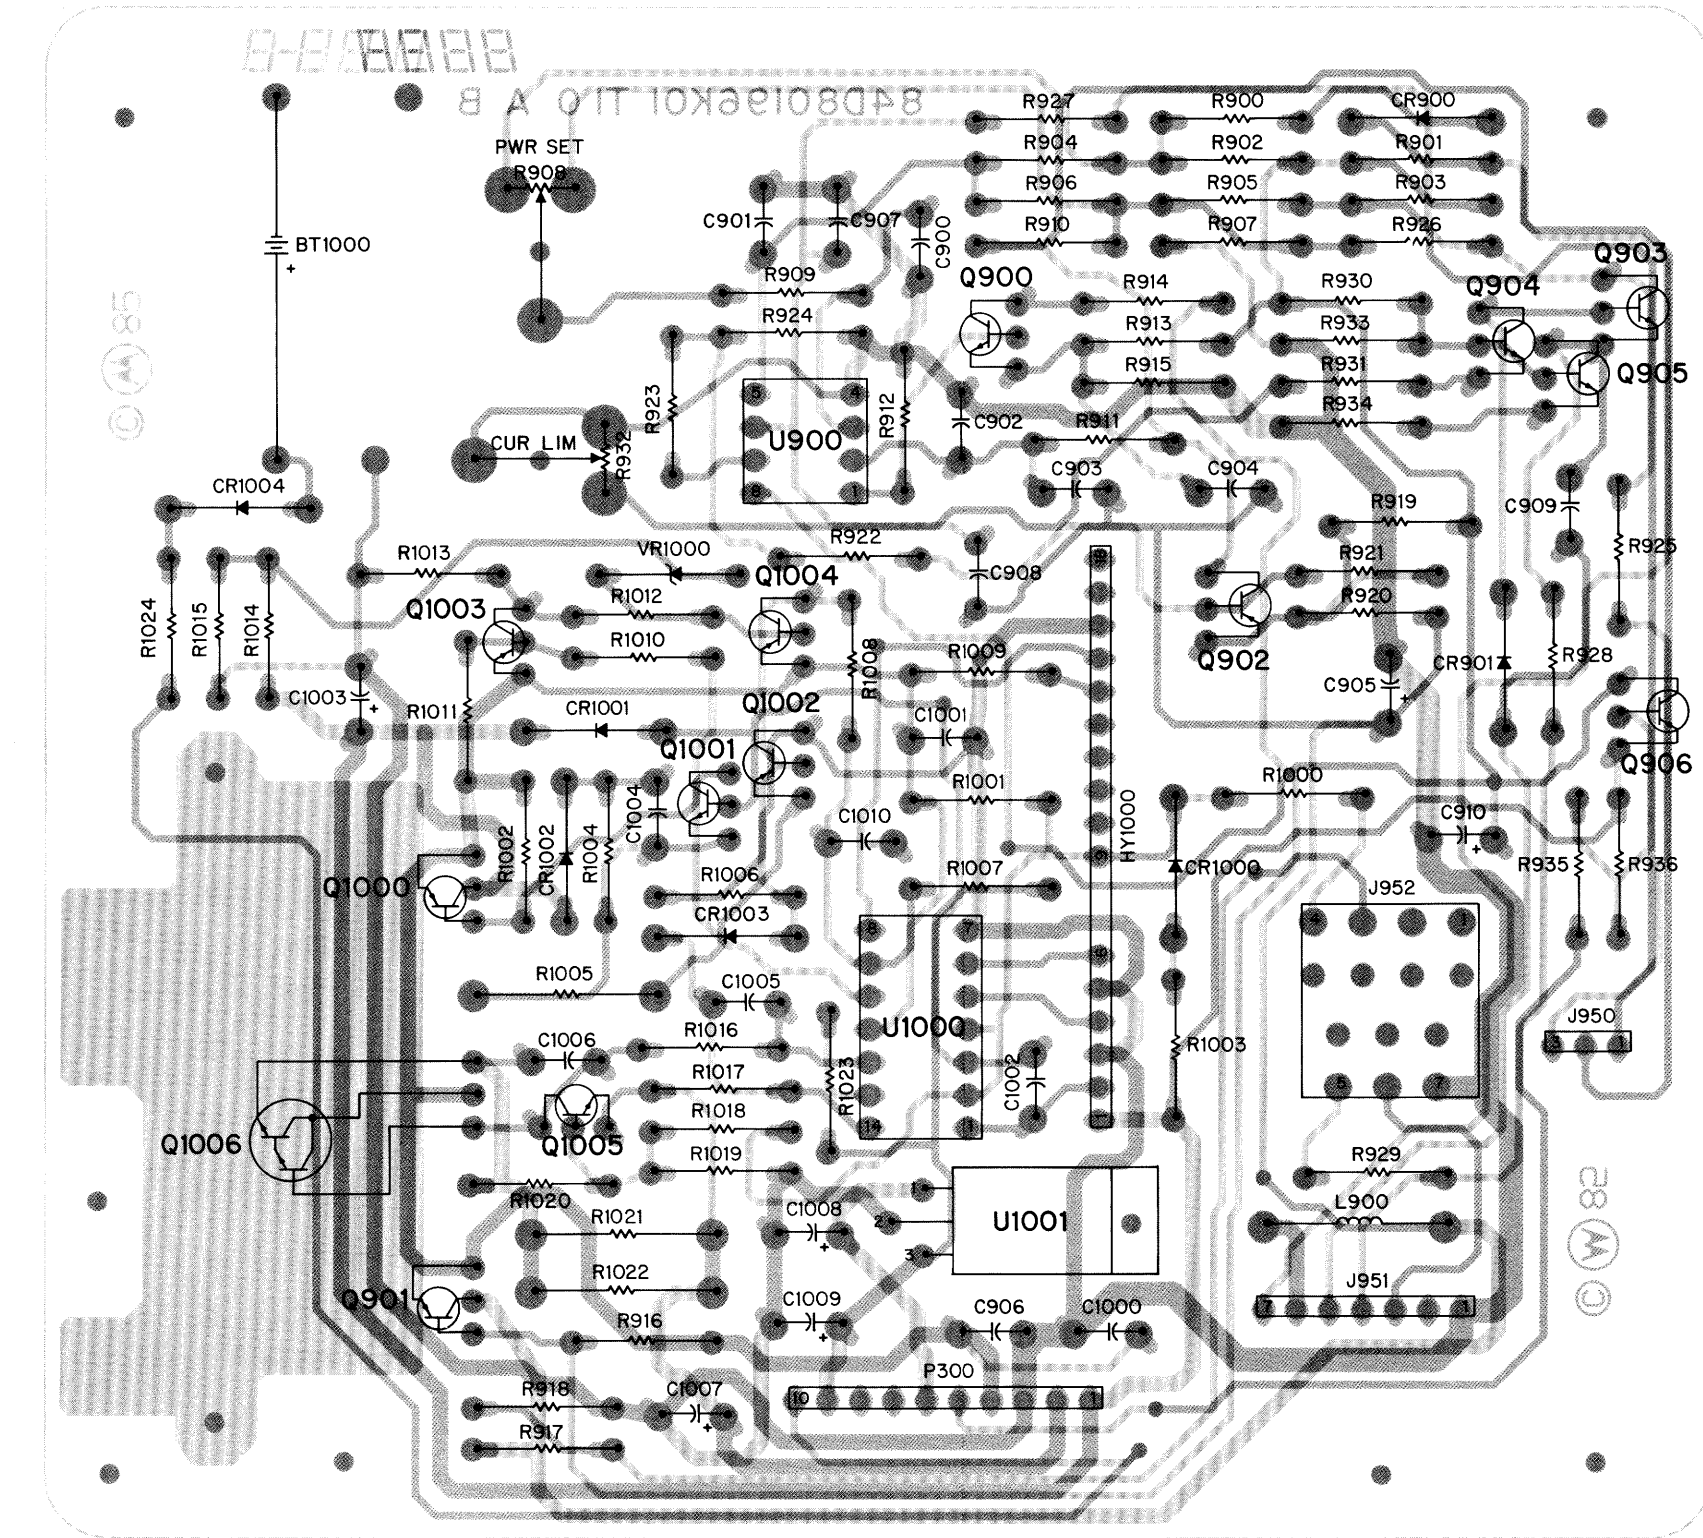


## COMPONENT SIDE VIEW

SOLDER SIDE  
COMPONENT SIDE  
OVERLAY

GEW-2504-O  
GEW-2505-O  
GEW-2507-O

Schematic, Circuit Board Diagram, and  
Parts List for Common  
Circuits Boards (UHF/VHF)  
**PEW-2587-O**  
(Sheet 2 of 2)  
2/17/86

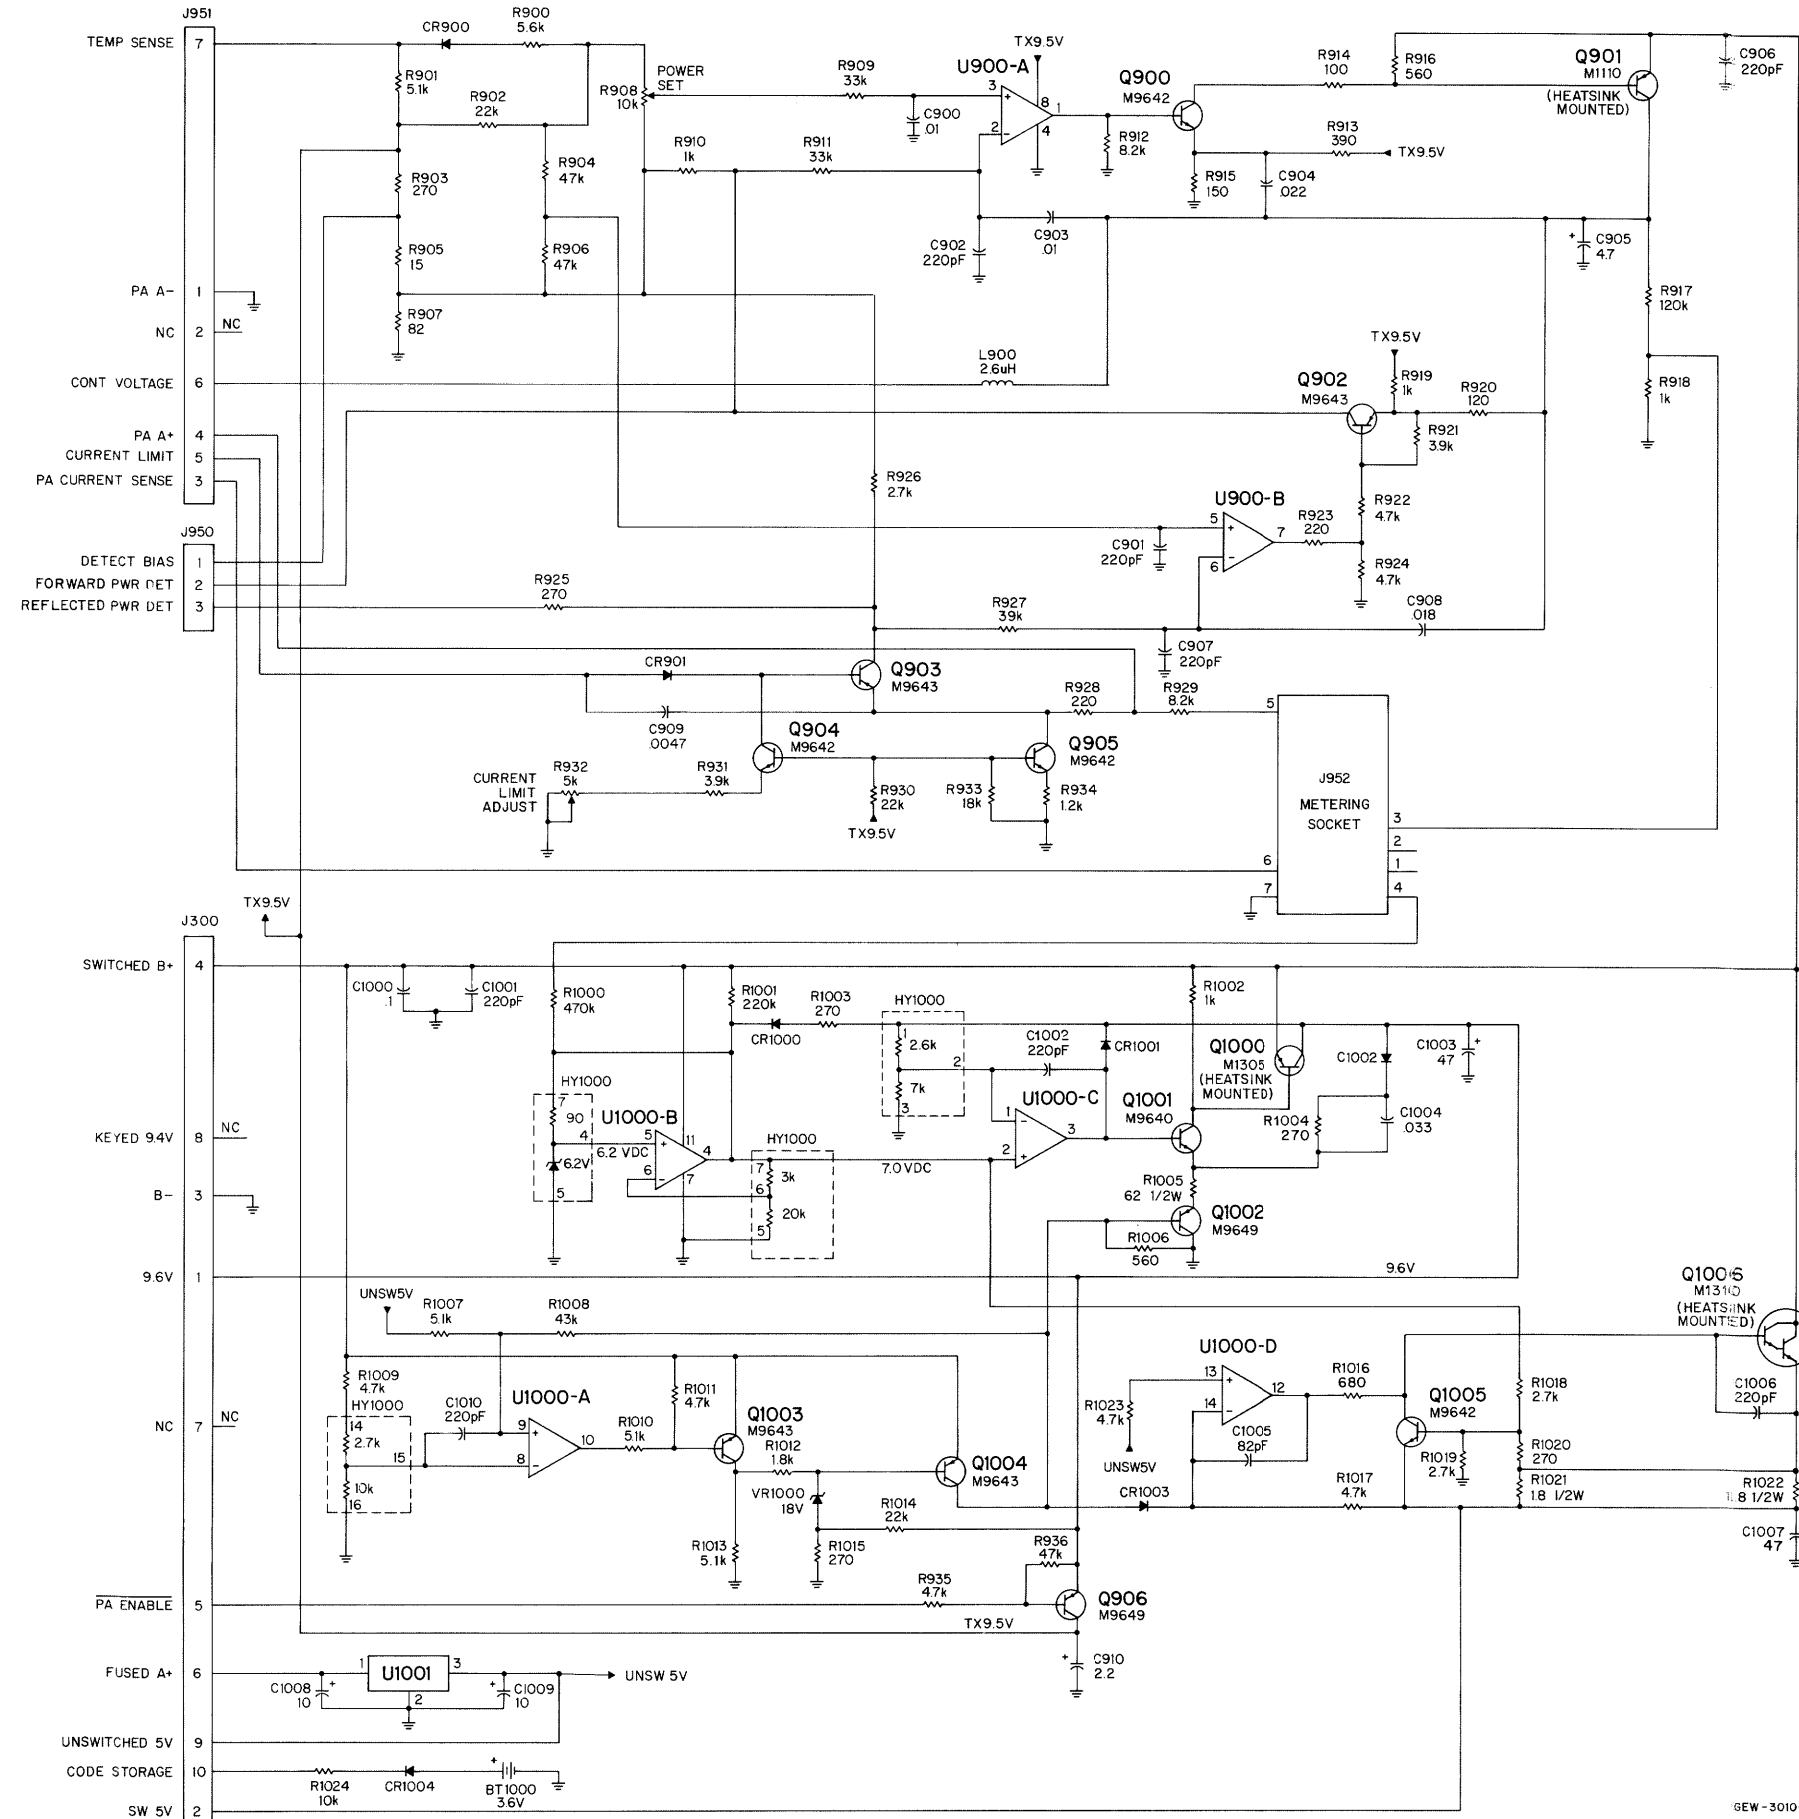

## parts list

HLN4906A VHF Common Circuit Board MXW-2485-O

REFERENCE SYMBOL	MOTOROLA PART NO.	DESCRIPTION
C900	08-11051A07	capacitor, fixed, $\mu F \pm 10\%$ , 100V unless otherwise stated
C901, 902	21-11015B05	.01 $\pm 5\%$ , 63V
C903	08-11051A07	.01 $\pm 5\%$ , 63V
C904	08-11051A09	.022 $\pm 5\%$ , 63V
C905	23-11013D55	4.7 $\pm 20\%$ , 20V, tantalum
C906, 907	21-11015B05	.220 pF
C908	08-11044A34	.018 $\pm 5\%$ , 63V
C909	08-11051A05	.0047 $\pm 5\%$ , 63V
C910	23-11013F59	2.2 $\pm 20\%$ , 35V, tantalum
C1000	08-11051A13	.1 $\pm 5\%$ , 63V
C1001, 1002	21-11015B05	.220 pF
C1003	23-11019A39	47 $\pm 20\%$ , 16V, electrolytic
C1004	08-11051A10	.033 $\pm 5\%$ , 63V
C1005	21-11014B47	82 pF $\pm 5\%$
C1006	21-11015B05	.220 pF
C1007	23-84538G06	47 $\pm 20\%$ , 20V, tantalum
C1008	23-11048C11	10 $\pm 20\%$ , 35V, electrolytic
C1009	23-11013E57	10 $\pm 20\%$ , 25V, tantalum
C1010	21-11015B05	.220 pF
CR900, 901	48-80005E01	diode (see note)
CR1000-1004	48-80005E01	silicon
HY1000	01-80715D03	hybrid (see note)
J300	30-80263K01	connector receptacle
J950	28-84324M02	10-contact, cable assembly
J951	28-84647L05	polarized 3-contact
J952	09-84207B01	7-contact
L900	24-82835G08	coil
Q900	48-00869642	transistor (see note)
Q901	48-84411L10	NPN
Q902, 903	48-00869643	PNP, heatsink mounted
Q904, 905	48-00869642	PNP
Q906	48-00869649	PNP
Q1000	48-84413L05	PNP, type M1305 heatsink mounted
Q1001	48-00869640	NPN, type M9640
Q1002	48-00869649	PNP
Q1003, 1004	48-00869643	PNP
Q1005	48-00869642	PNP
Q1006	48-84413L10	NPN, type M1310 heatsink mounted, Darlingon
R900	06-11009A67	resistor, fixed, $\Omega \pm 5\%$ , 1/4 W unless otherwise stated
R901	06-11009A66	5.6k
R902	06-11009A81	22k
R903	06-11009A35	270
R904	06-11009A89	47k
R905	06-11009A05	15
R906	06-11009A89	47k
R907	06-11009A23	82
R908	18-80087E08	10k, variable
R909	06-11009A85	33k
R910	06-11009A49	1k
R911	06-11009A85	33k
R912	06-11009A71	8.2k
R913	06-11009A39	390
R914	06-11009A25	100
R915	06-11009A29	150
R916	06-11009A43	560
R917	06-11009A99	120k
R918, 919	06-11009A49	1k
R920	06-11009A27	120
R921	06-11009A63	3.9k
R922	06-11009A65	4.7k
R923	06-11009A33	220
R924	06-11009A65	4.7k
R925	06-11009A35	270
R926	06-11009A59	2.7k
R927	06-11009A87	39k
R928	06-11009A33	220
R929	06-11009A71	8.2k
R930	06-11009A81	22k
R931	06-11009A63	3.9k
R932	18-80087E07	5k, variable
R933	06-11009A79	18k
R934	06-11009A51	1.2k
R935	06-11009A65	4.7k
R936	06-11009A89	47k
R1000	06-11009B14	470k
R1001	06-11009B06	220k
R1002	06-11009A49	1k
R1003	06-11009A35	270
R1004	06-11009A35	270
R1005	06-11045A20	62, 1/2 W

REFERENCE SYMBOL	MOTOROLA PART NO.	DESCRIPTION
R1006	06-11009A43	560
R1007	06-11009A66	5.1k
R1008	06-11009A88	43k
R1009	06-11009A65	4.7k
R1010	06-11009A66	5.1k
R1011	06-11009A65	4.7k
R1012	06-11009A55	1.8k
R1013	06-11009A66	5.1k
R1014	06-11009A81	22k
R1015	06-11009A35	270
R1016	06-11009A45	680
R1017	06-11009A65	4.7k
R1018, 1019	06-11009A59	2.7k
R1020	06-11009A35	270
R1021, 1022	06-80037G07	1.8, 1/2 W
R1023	06-11009A65	4.7k
R1024	06-11009A73	10k
U900	51-80067C03	integrated circuit (see note)
U1000	51-80067C06	dual op amp
U1001	51-80068C02	quad op amp
VR1000	48-82256C53	voltage regulator, 5V
mechanical parts		
	14-83820M02	thermoconductor insulator
	04-84152B01	shoulder washer
	03-10905A05	machine screw (M3 x 0.5 x 8)
	06-8020K001	nylon rivet


note: For best performance, order diodes, transistors, and integrated circuits by Motorola part number.



**MOTOROLA INC.**

Communications  
Group

## Control Unit, Cable Kits, and Accessories

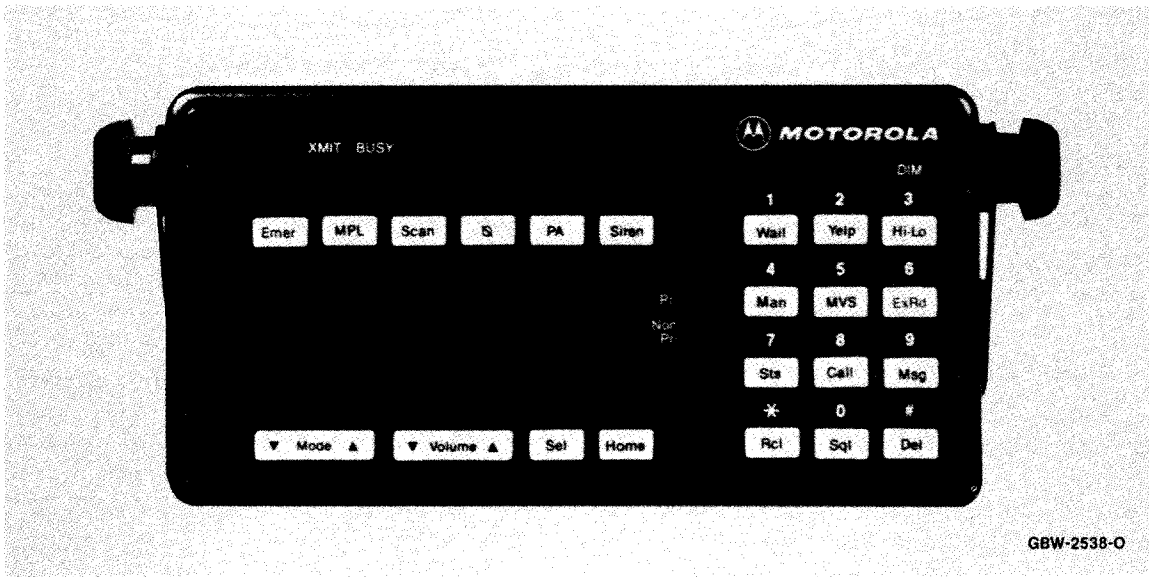

*Figure 1. Typical SYNTOR X 9000 Control Unit*

### 1. General

#### 1.1 DESCRIPTION

The SYNTOR X 9000 control head is a microcomputer based unit that processes all the button inputs and displays used by the radio and the options. It also interfaces with the vehical via the vehical interface ports (VIP).

#### 1.2 CONTROLS AND INDICATORS

(See Figure 1.)

##### 1.2.1 Power Switch

The power switch is a slide switch on the bottom right surface of the control head. It turns the radio and its accessories on and off.

##### 1.2.2 Display

The eleven-character vacuum fluorescent display's primary function is to display mode numbers, mode names, volume level, and the status of options. It also functions as an on-off indicator for the entire system, and plays an integral role in the operator's reconfiguration of options.

##### 1.2.3 Option Buttons

Located above the display is a row of six buttons for turning options on and off. Below each is a small indicator light to show the status of the option.

### 1.2.4 XMIT and BUSY Indicators

Above the six option buttons are XMIT and BUSY indicators. The XMIT indicator lights when the radio is transmitting. The BUSY indicator lights when the selected channel is busy.

### 1.2.5 Scan Indicators

To the right of the display are the NON-PRI and PRI indicator lights. When scan operation detects activity on a non-priority (NON-PRI) channel, the NON-PRI light comes on. Activity on a second priority channel causes PRI to light. First priority channel activity causes PRI to flash.

### 1.2.6 Mode Rocker Switch

Located below the display, the Mode rocker increases the mode number when you push on the right side, and decreases the mode number when you push on the left. If you push and hold the switch, it scrolls the mode numbers up or down. The mode names appear on the display.

### 1.2.7 Volume Rocker Switch

Below the display, beside the Mode switch is the Volume rocker. Press and release to check volume setting. Your display shows "VOLUME \_ \_" and a number value (0-15). Push and hold the right side of the rocker to increase the volume setting. Push and hold the left side to decrease volume. The number value scrolls up or down to your desired level.

The volume rocker also controls the volume level of the public address (PA) and external radio speaker (ExRd) options when they are enabled. The display shows "PA VOL" when public address is selected and volume is pressed.

### 1.2.8 Home and Sel Buttons

Press the Home button to go to the radio's preprogrammed "Home" mode. You may use Home instead of Mode to change modes. Hold Home until a beep sounds to enter the configuration state. The display shows an entry prompt. Use the keypad to enter your new mode choice and press Home again. Your mode is now changed without scrolling.

Use the Sel button when configuring an option. See the descriptions of the options for more specific information.

### 1.2.9 DIM Button

Above the keypad, on the right side of the control head face, is the control for the brightness of the display and button backlighting. When you turn on the system, the display comes on at the highest level. Press DIM once to reduce the brightness of the display to medium level, and twice for low brightness level. Press DIM a third time to turn the display and button backlighting off. This is called the "surveillance" mode.

### 1.2.10 Keypad

The keypad is for changing the status of options and entering numbers to the display. See the Operator's Manual for a complete description of button operation.

## 2. Theory of Operation

### 2.1 GENERAL

The SYNTOR X 9000 Control Unit has solid state microprocessor circuitry that operates the standard and optional features built into the system. The compact control unit was designed for installation in even the smallest of down-sized vehicles. Systems that have many options simply require more control unit buttons, not more space consuming control units.

The control unit may be field programmed to alter the information stored in certain areas of its electronic memory. Some options are also added by field programming.

#### 2.1.2 Display

The control unit has an eleven-character alphanumeric vacuum fluorescent display for indicating the following:

- Mode Names
- Squelch Level
- Volume Level
- Status Codes
- Message Codes
- Telephone Numbers
- Identification Numbers
- Alarm Displays
- Option Status

#### 2.1.3 Controls and Indicators

A twelve button keypad contains the traditional alphanumeric keys that double as function keys for SYNTOR X 9000 options. All buttons are backlit to facilitate operation in low light. Six ON/OFF option buttons are arranged above the display and indicator lights to tell whether these options are on or off.

Other indicators include BUSY, TRANSMIT, PRIORITY, and NON-PRIORITY. BUSY lights when activity is detected on the channel. The XMIT (transmit) indicator lights when you are transmitting.

When activity occurs during a Scan sequence, the NON-PRI (non-priority) or PRI (priority) light is on. Should the detected activity be on a NON-PRI mode, the NON-PRI light is on. If the activity is on PRI mode the PRI indicator lights for second priority modes, and flashes for first priority modes.

## 2.2 CONTROL BOARD

The control board's 6301X Microprocessor (MPU) communicates on the serial bus, receives and interprets keypad data, and controls the volume. The MPU sends ASCII data to a decoder to control the display, and sends data to turn the LEDs on or off. The control board has a watchdog timer that senses the need for a system reset. The vehicle interface ports are also controlled on this board.

### 2.2.1 Microprocessor (MPU)

The 6301X MPU operates in mode 2 (expanded bus with internal ROM active). Table 1 gives jumper placements for different modes. The clock frequency is 4.9152 MHz that results in an internal operating frequency of 1288 kHz. The limited number of I/O ports is augmented by using a serial-to-parallel shift register (U3) to scan the keyboard, and to switch the VIP drivers (Q28, Q29, Q30, and Q33).

*Table 1. Mode Jumper Placement*

Microprocessor Mode	JU3	JU6
No. 1—Expanded mode with external ROM only	IN	OUT
No. 2—Expanded mode with internal ROM active	OUT	IN
No. 3—Single Chip	OUT	OUT

### 2.2.2 Watchdog Timer

The watchdog timer consists of U5 (LM2903 comparator) and Q4 (SCR). On system power-up, C06 pulls the inverting input of U5 high while R10 and R11 hold the non-inverting input at VCC/2. The output goes low and the microprocessor resets. As C06 charges through R14, the voltage on the inverting input drops below that of the non-inverting input, the output goes high, and the microprocessor can start operating. R14 is now pulling up on C06, and the inverting-input voltage begins to rise. During this interval, the processor generates tickle pulses to periodically fire Q4, preventing the inverting-input voltage from rising above the non-inverting input voltage and repeating the reset cycle. If the tickle pulses stop for more than 150 mSec, the reset cycle is repeated.

### 2.2.3 EEPROM

The EEPROM stores customer data including mode names, button functions, and VIP settings. The customer data can be altered only by enabling the "STORE" function (grounding the MIC HI line); an automatic function of the control unit programmer. Power strobing minimizes EEPROM power consumptions. Jumpers configure the EEPROM for the uses shown in Table 2.

*Table 2. EEPROM Jumper Table*

Jumper	Use/Placement
JU1	Used for future options
JU2	IN for 6301X Microprocessor
JU4	IN for 2K EEPROM; OUT for 8K EEPROM (option W930)
JU5	IN for 8K EEPROM (option W930) OUT for 2K EEPROM

### 2.2.4 Bus Transceiver

The serial bus transceiver consists of Q1, Q2, Q3, and U4 (CA3140). Q1, Q2, and Q3 transmit data on the bus while U4 acts as a comparator to receive data from the bus.

### 2.2.5 Vacuum Fluorescent Voltage Converter

Voltage for the vacuum fluorescent display is generated by a fixed frequency, variable-duty cycle driven, flyback voltage converter. Q31 and Q32 form an emitter-coupled astable multivibrator that runs at about 150 kHz. The square wave output from this circuit is integrated by R71 and C39 to form a triangle that is applied to the non-inverting input of half of U5 (LM2903). During start up, the inverting input is biased at 3.7 volts by R66 and R67. Q23 is on while the non-inverting input voltage is below 3.7 volts. This allows current to flow the T1, building a magnetic field. When the triangle wave exceeds 3.7 volts, Q23 turns off and the magnetic field collapses, inducing negative current in T1. This current flows through either CR13 or CR14, charging C27 and C28. As the voltage on C28 increases beyond -35 volts, CR13 begins to conduct, pulling U5's inverting input below 3.7 volts. This decreases the cycle time that Q23 is on to the time needed to produce -35 volts on C28. The -41 volt supply is not regulated, but it tracks the -35 volt supply. Similarly, the AC supply for the vacuum fluorescent filament is not regulated, but is controlled to within one volt by and inductor on the display board.

### 2.2.6 Vehicle Interface Ports (VIP)

The VIP outputs are driven by a serial-to-parallel shift register. Output transistors (Q28, Q29, Q30) can

sink 300 mA current. Primarily, these transistors control external relays. The relay is connected between the collector and switched B+.

Each VIP input transistor (Q25, Q26, Q27) is connected to a dedicated input port through transistors used for input protection. These VIP inputs are connected to ground with either normally-open or normally-closed switches.

### 2.2.7 Power Supplies

Both the +5 and the +9.4 volt supplies are linear regulators. The +9.4 supply is built with a discrete transistor (Q11). The regulation is provided by VR09. The +5 volt supply is a 7805, three-terminal regulator IC.

### 2.2.8 Ignition Sense Circuits

Q7 senses the vehicle ignition's state, disabling transmit when the ignition is off. For negative-ground systems, the orange lead is typically connected to the fuse box (+12V). For more information, see the cable kit section.

### 2.2.9 EEPROM Write-Protect Circuit

Q12, Q13, and associated circuitry guard against inadvertently writing into the EEPROM. When MIC HI is grounded, Q21 (normally on) is turned off. A hot-carrier diode (CR24) ensures that Q21 turns off. CR24 is normally off so it does not interfere with the MIC HI line.

CR19 forces the system to be write-protected during reset; this is especially crucial during system power-up.

## 2.3 DISPLAY BOARD

This board contains the main operator interface points of the system, including the vacuum fluorescent display, the status indicator LEDs, and the user keypad.

### 2.3.1 U101 Vacuum Fluorescent Display Decoder Driver IC

This IC receives ASCII data from the controller board, decodes it into 14-segment display data, and then scans the display with the data. Once properly loaded into the driver, the displayed data is refreshed without any further processor action. The display driver is periodically reset by the actions of transistors Q118, Q119, and Q110 that watch the clock line from the processor to the display driver. When the clock line is held low for more than 600  $\mu$ Sec, the display driver resets and new display data follows.

### 2.3.2 Vacuum Fluorescent Display

The vacuum fluorescent (VF) display is an eleven digit, 14-segment display that needs three separate voltages to operate: the cathode needs -35 volts to accelerate electrons to the anode; the grid needs -40 volts to totally shut off current flow; the filament needs 3.8 volts AC at 80 mA. These voltages are obtained from the VF up-converter on the controller board.

### 2.3.3 -10 Volt Supply

The AC voltage present on Q23 of the controller board is used to obtain the -10 volts needed to run the display driver IC. This voltage is fed through L101 to limit the current and then rectified by CR107 and shunt regulated by CR108.

### 2.3.4 Status LEDs

These LEDs are driven by the display driver as though they were decimal points on the VF display. Level shifting transistors are required for this since the display driver uses 39 volts for control signals.

### 2.3.5 Backlight LEDs

The same microprocessor signal that turns the VF power supply on and off also operates the backlight LEDs. Q120 supplies base current to the individual LED driver transistors. The driver transistors act as constant current sources to the LEDs. Backlight LEDs CR115, CR116, CR117, and CR118 are connected to thermistor R163 by way of Q108. This circuit allows more current to flow through these LEDs at room temperature and reduces current as the temperature rises.


## 3. Control Unit Maintenance

### 3.1 DISASSEMBLY OF CONTROL UNIT (See Figure 2.)

#### **Note**

Before disassembling the control unit, make a note of the location of the labeled buttons.

Remove the two 30mm slotted screws that hold the front and back of the control unit together. The two halves separate at the top; at the bottom, they are held together by the flex cable that interconnects the circuit boards. Place the unit so the PC boards are facing up. Remove the five 8mm screws in the display board and carefully remove the front of the control unit housing. Keep the front housing parts as a complete unit (including the front housing, buttons, and display board light pipe). Always keep the front of the display housing face down when handling. Remove the two 16mm self-tapping screws on the control board. Remove the back

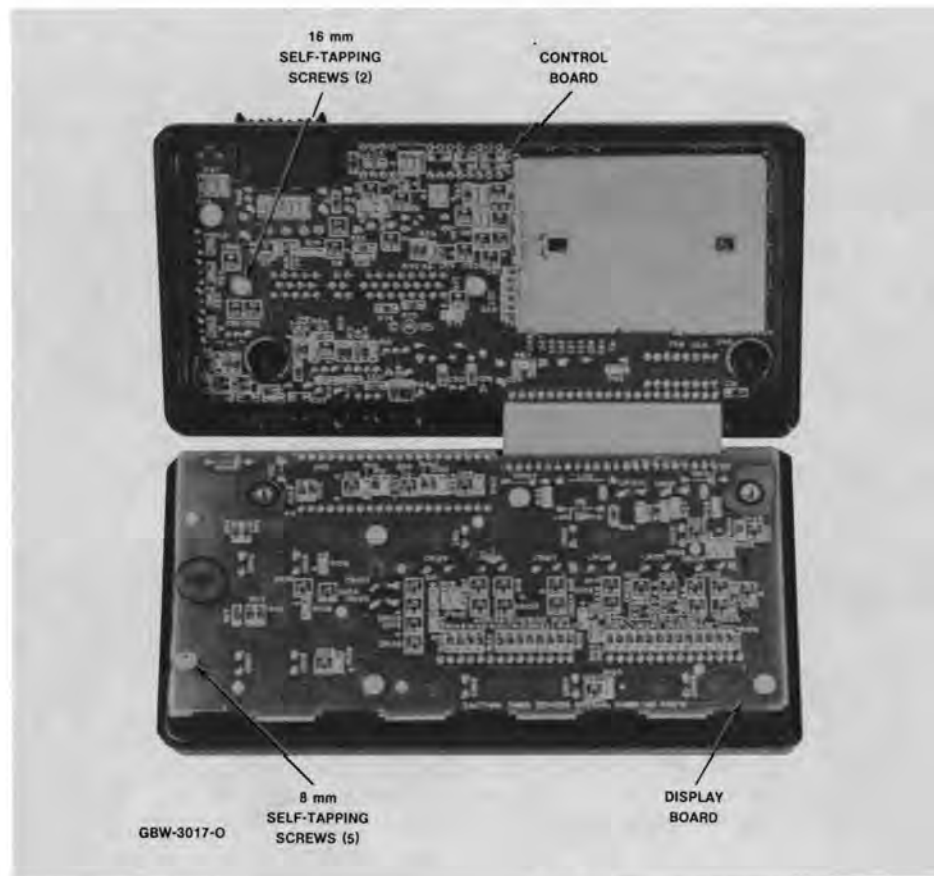

*Figure 2. Disassembly of Control Unit*

of the control unit housing. Remove the black gasket around the switch and set it aside. Remove the shields from the top and bottom of the control board. All components should be easily accessible.

#### **Note**

When working with chips and SOT parts, use extreme caution when heating. Never reuse a chip or SOT part; always replace with correct Motorola parts.

### **3.2 REASSEMBLY OF THE CONTROL UNIT**

Be sure the orange gasket is still around the outside of the control cable "mini D" connector. If it was removed, replace it, ensuring a snug fit to the PC board. Replace the gasket around the power switch. Replace the shields on the top and bottom of the control board. Place the control board in the back housing, being careful to put the toggle switch arm in the proper position in the ON/OFF button actuator. Screw in the two 16mm self-tapping screws to 6-8 inch lbs. Also, be sure the ON/OFF actuator still slides back and forth easily. Carefully check to see that all buttons are still in place, then place the display board in the front housing. Screw in the

five 8mm self-tapping screws to 6-8 inch lbs. Be sure the black gasket is around the outside groove of the front housing. When mating the front and back housings, make sure the flex cable slides behind the control board and is not pinched. Screw in the two 30mm slotted screw to 9-10 inch lbs.

### **4. Vehicle Interface Ports (VIP)**

The VIP allows the control unit to control outside circuits and to receive inputs from outside the control unit. There are three VIP outputs that are used for relay control. There are also three VIP inputs that accept inputs from switches. See the cable kit section for typical connections of VIP input switches and VIP output relays.

#### **4.1 VIP OUTPUT CONNECTIONS**

The VIP output pins are located on the back of the control unit below the area labeled "VIP." These connections are used to control relays. One end of the relay should be connected to switched B+, while the other side is connected to a software controlled ON/OFF switch inside the control unit. The relay can be

normally-on or normally-off depending on how the VIP outputs are configured. The control unit provides for three of these VIP output connections. The following is a list of proper connections for relays:

VIP OUTPUT NUMBER	SWITCHED B + PIN NO.	ON/OFF SWITCH PIN NO.	DEFAULT FUNCTION - IS CHANGED WITH FIELD PROGRAMMER
1	18	2	SIREN; HORN RING
2	19	1	EMERGENCY (IF OPTION PRESENT)
3	35	34	NONE

The function of these VIP outputs can be defined by field programming the control unit. Typical applications for VIP outputs are external horn/lights alarm and horn ring transfer relay control. For further information on VIP outputs, see the control unit programming manual.

## 4.2 VIP INPUT CONNECTIONS

The VIP input pins are located on the back of the control unit below the area labeled "VIP." These connections are used to accept inputs from switches. One side of the switch is connected to ground while the other side is connected to a buffered input to the control unit. The switch can be normally-closed or normally-open depending on how the VIP inputs are configured. The control unit permits three of these VIP input connections. The following is a list of proper connections for the switches:






VIP OUTPUT NUMBER	GROUND PIN NO.	ON/OFF SWITCH PIN NO.	DEFAULT FUNCTION - IS CHANGED WITH FIELD PROGRAMMER
1	20	4	HORN RELAY (ALARM)
2	21	3	LIGHT RELAY (ALARM)
3	36	37	SIREN-HORN TRANSFER


The function of these VIP inputs is defined by field programming the control unit. Typical applications for the VIP inputs are for a foot switch or a horn ring switch. For further information on VIP inputs, see the control unit programming manual.

## 5. Power Connections


Replace the fuse in the in-line fuseholder of the red power cable coming from the radio in the trunk. Also connect the green (and/or orange) fused wire(s) coming from the control unit to the ungrounded terminal (or source) of the battery.

Pull all excess cabling into the trunk. Clamp the cables to the vehicle body or chassis with the cable clamps supplied. Drill  $\frac{1}{8}$ " mounting holes and then attach the clamps with four #8 by  $\frac{3}{8}$ " tapping screws and four  $\frac{1}{4}$ " lockwashers. Finally, be sure all in-line fuses are installed.

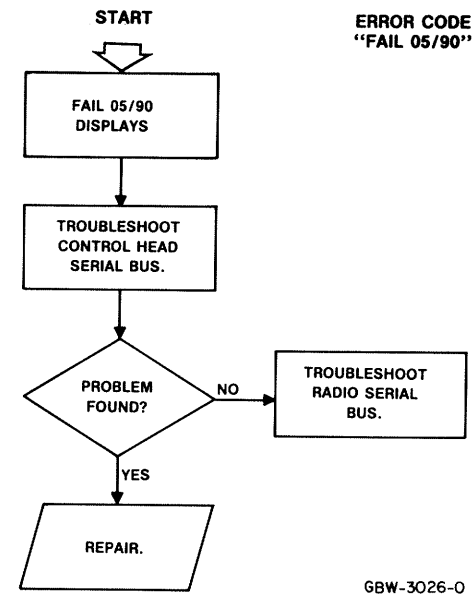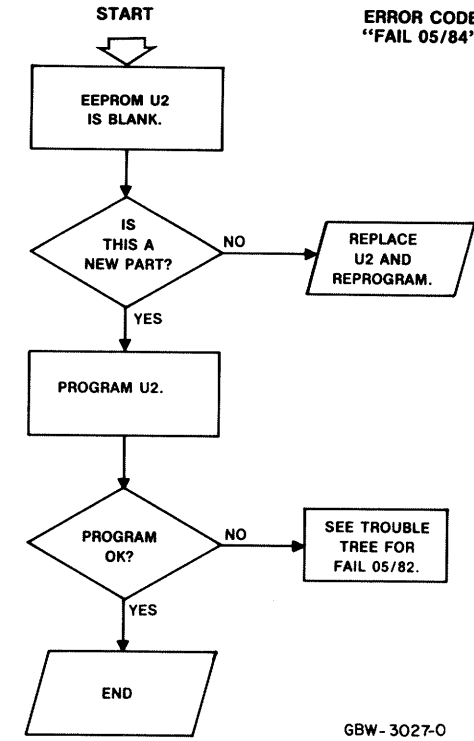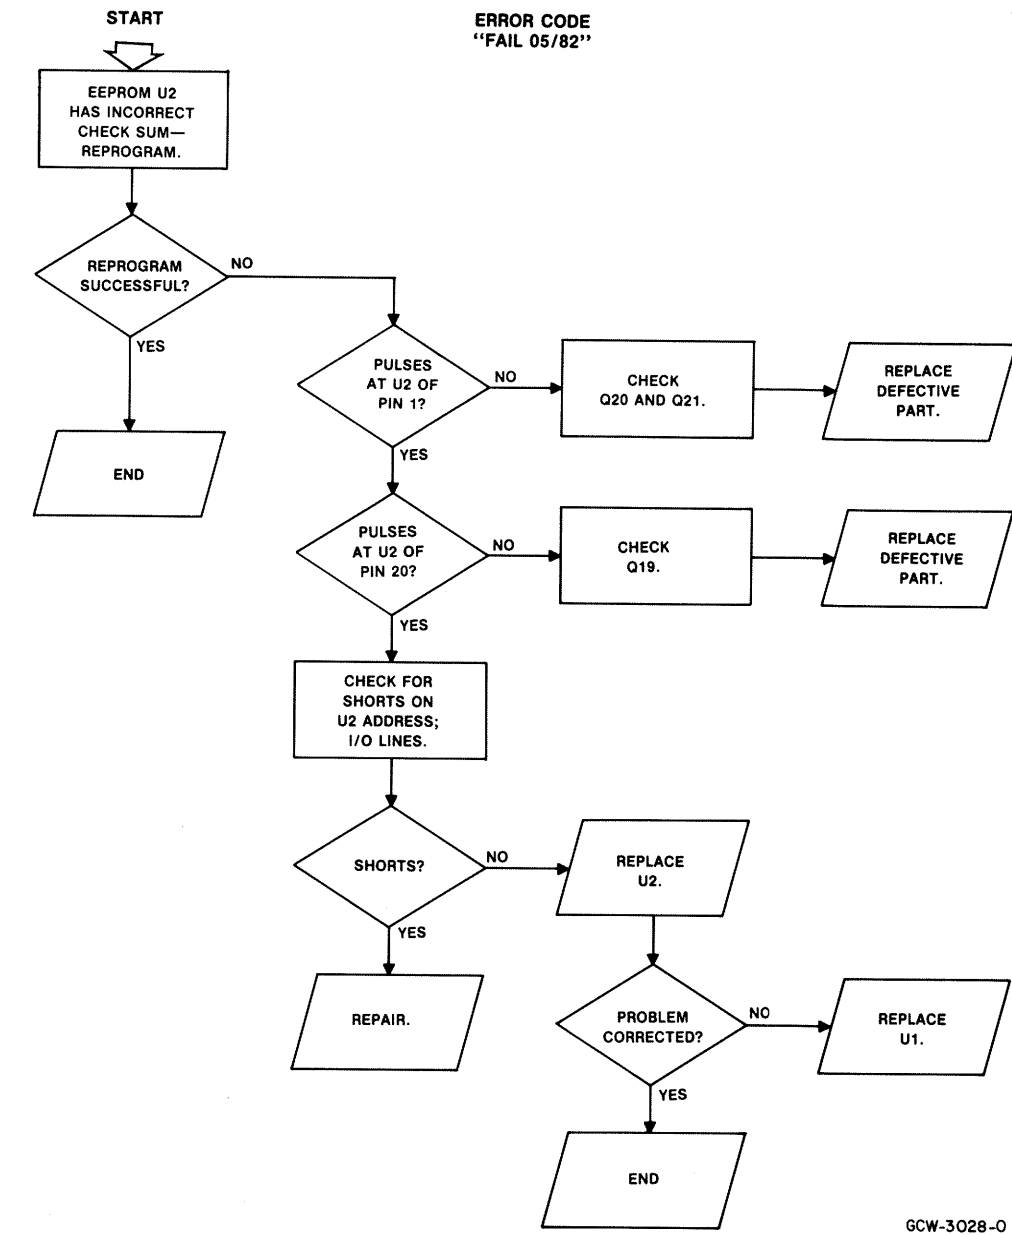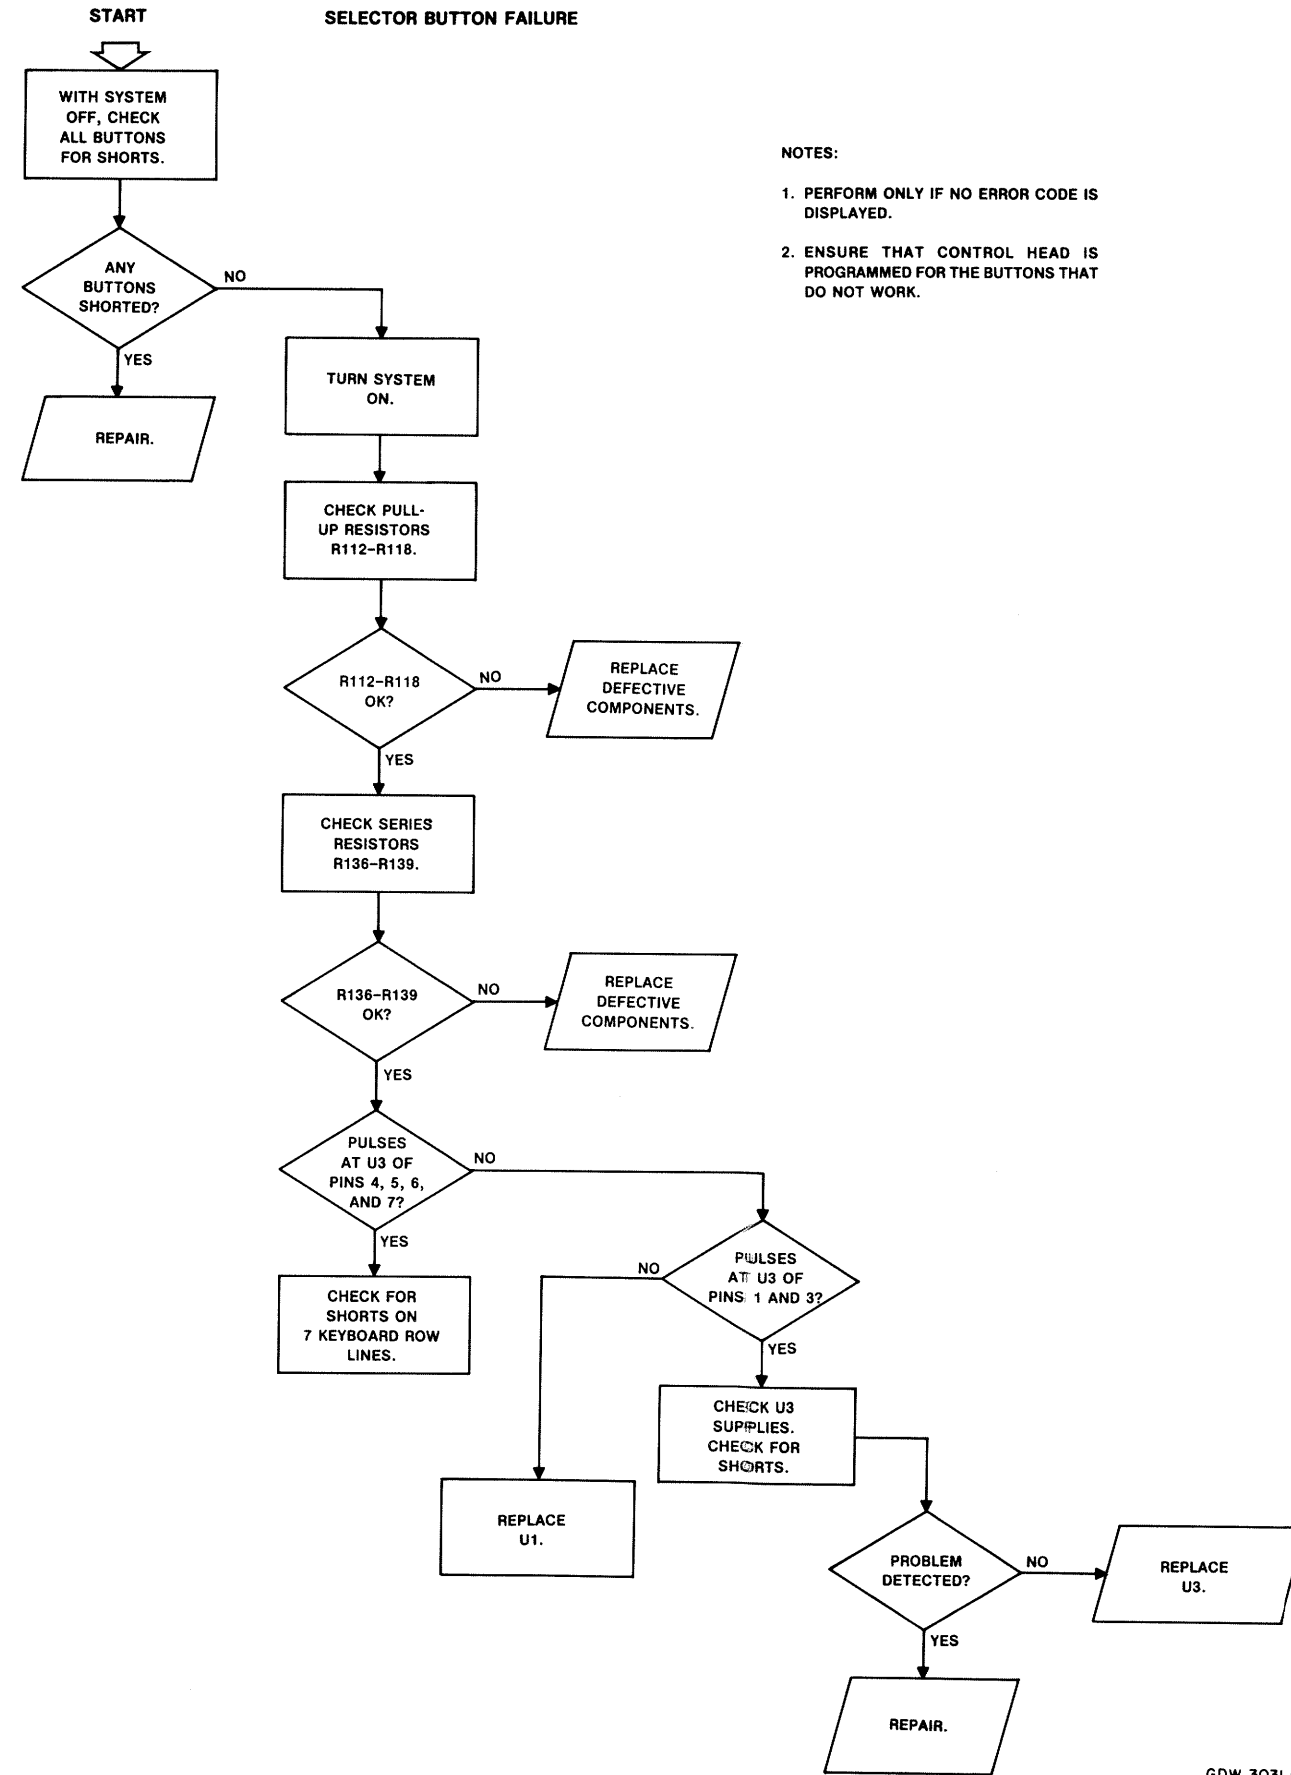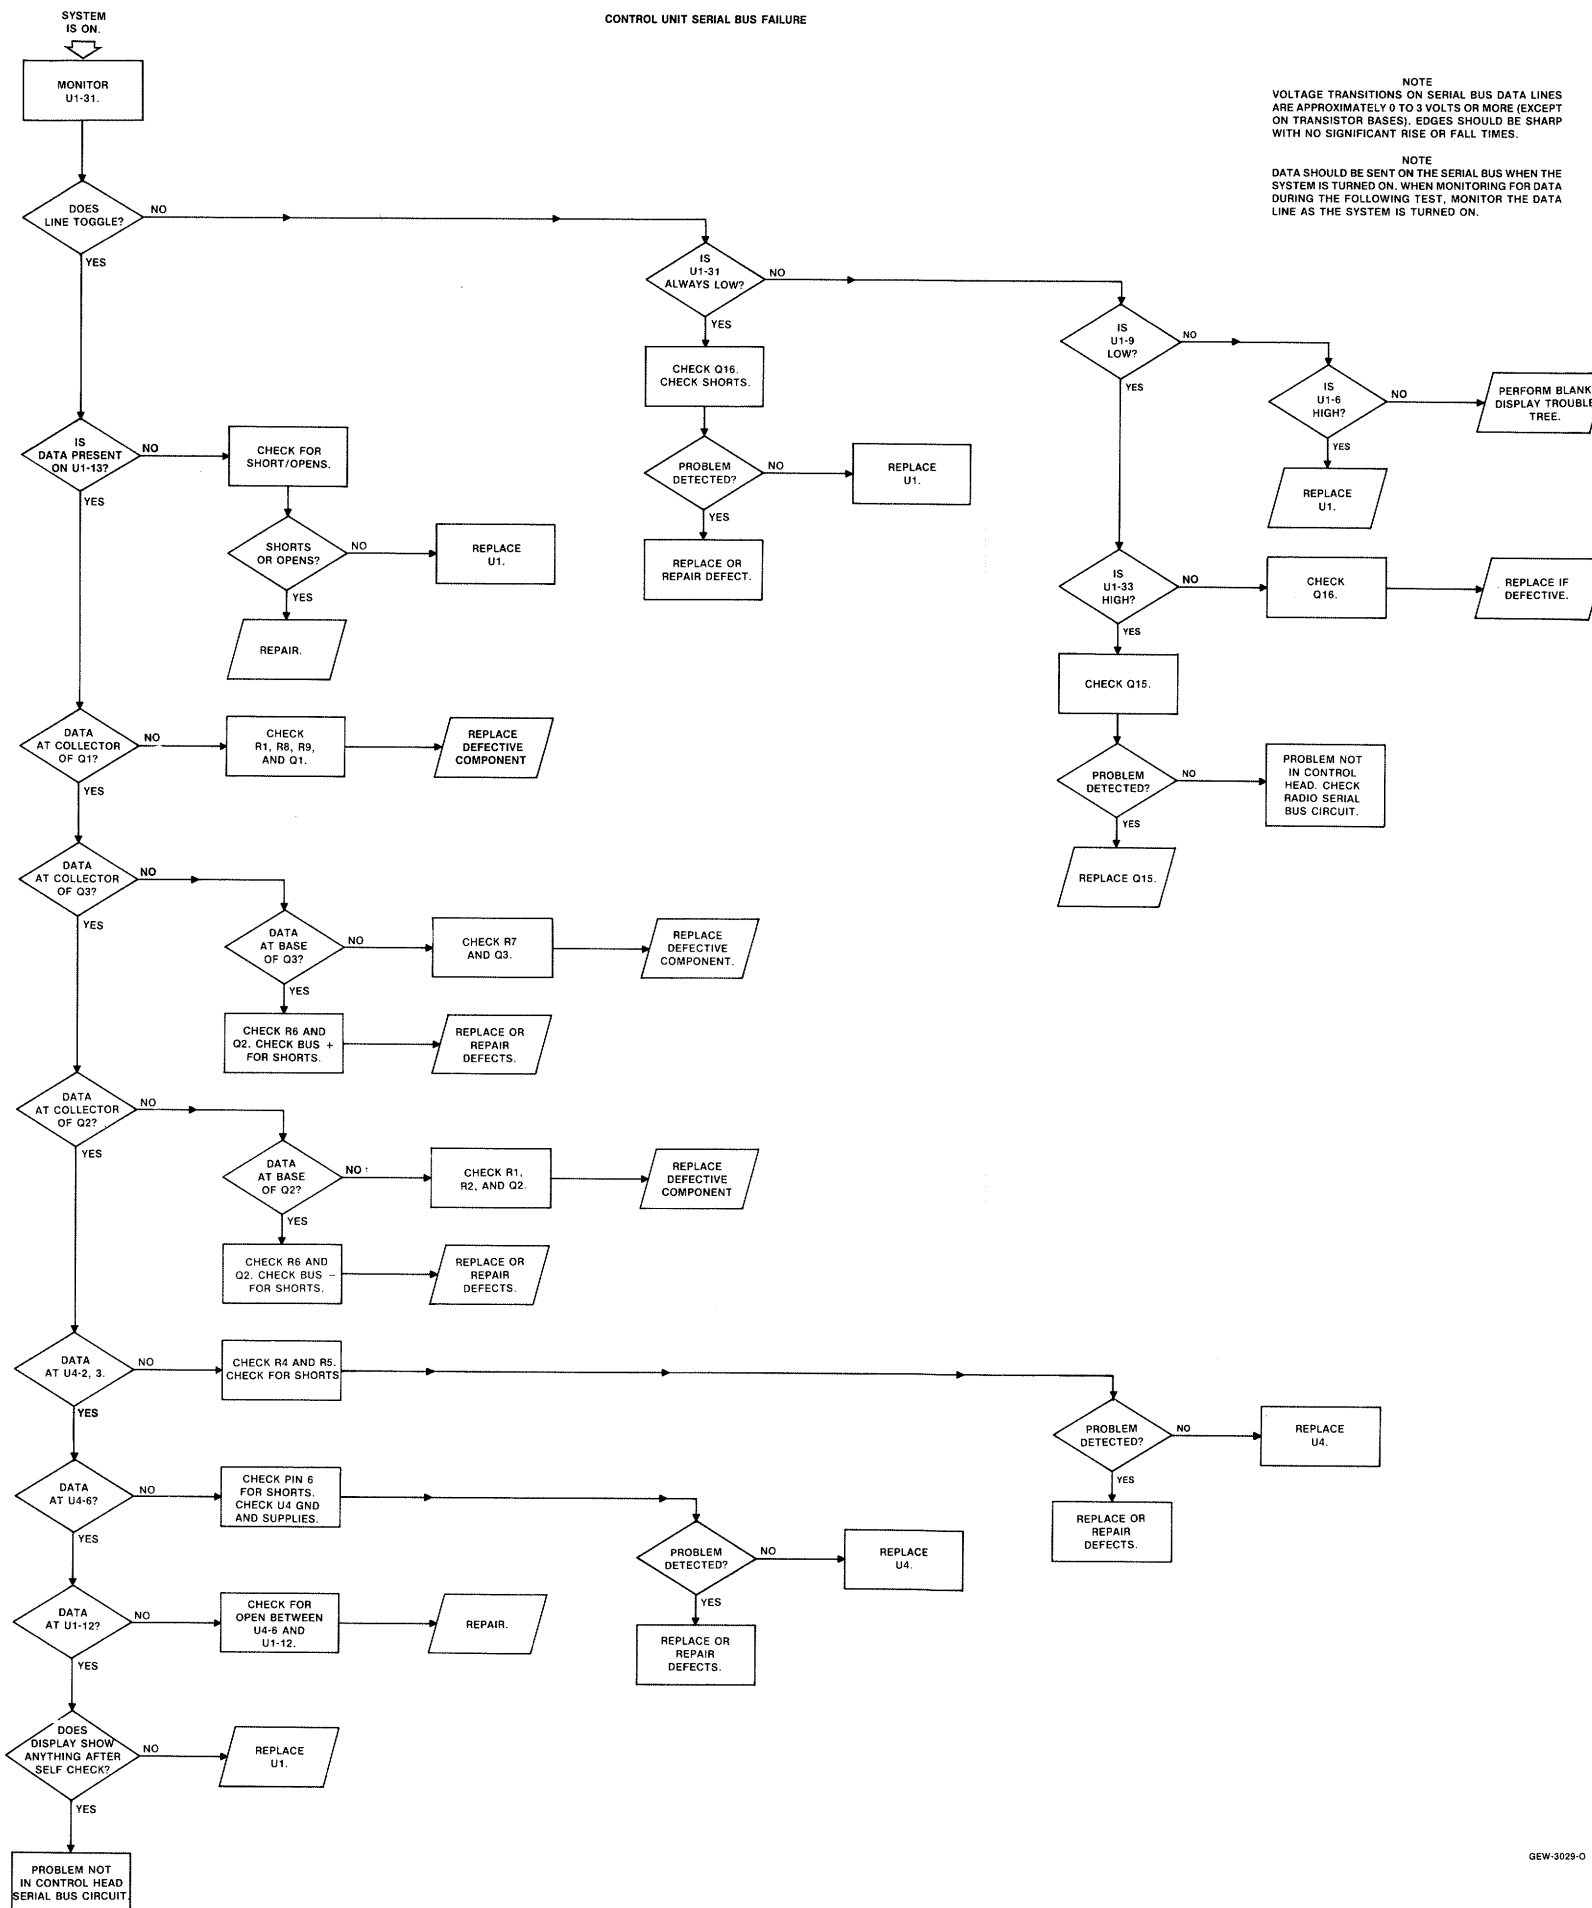


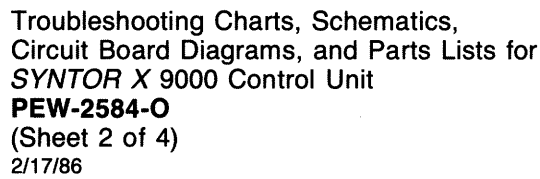

## DISPLAY BOARD

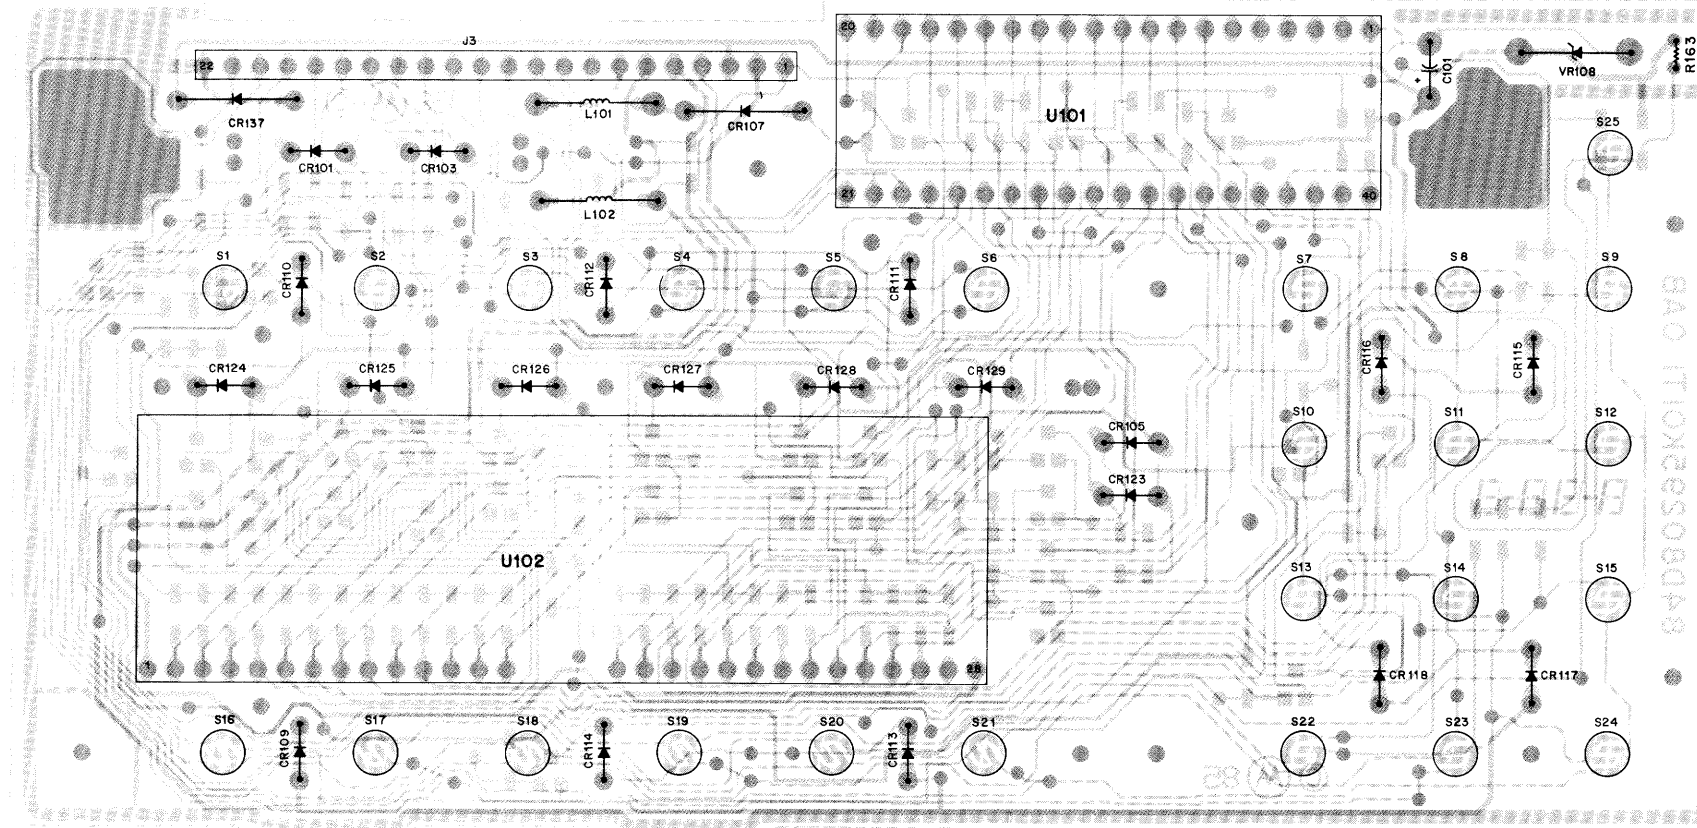

SHOWN FROM COMPONENT SIDE

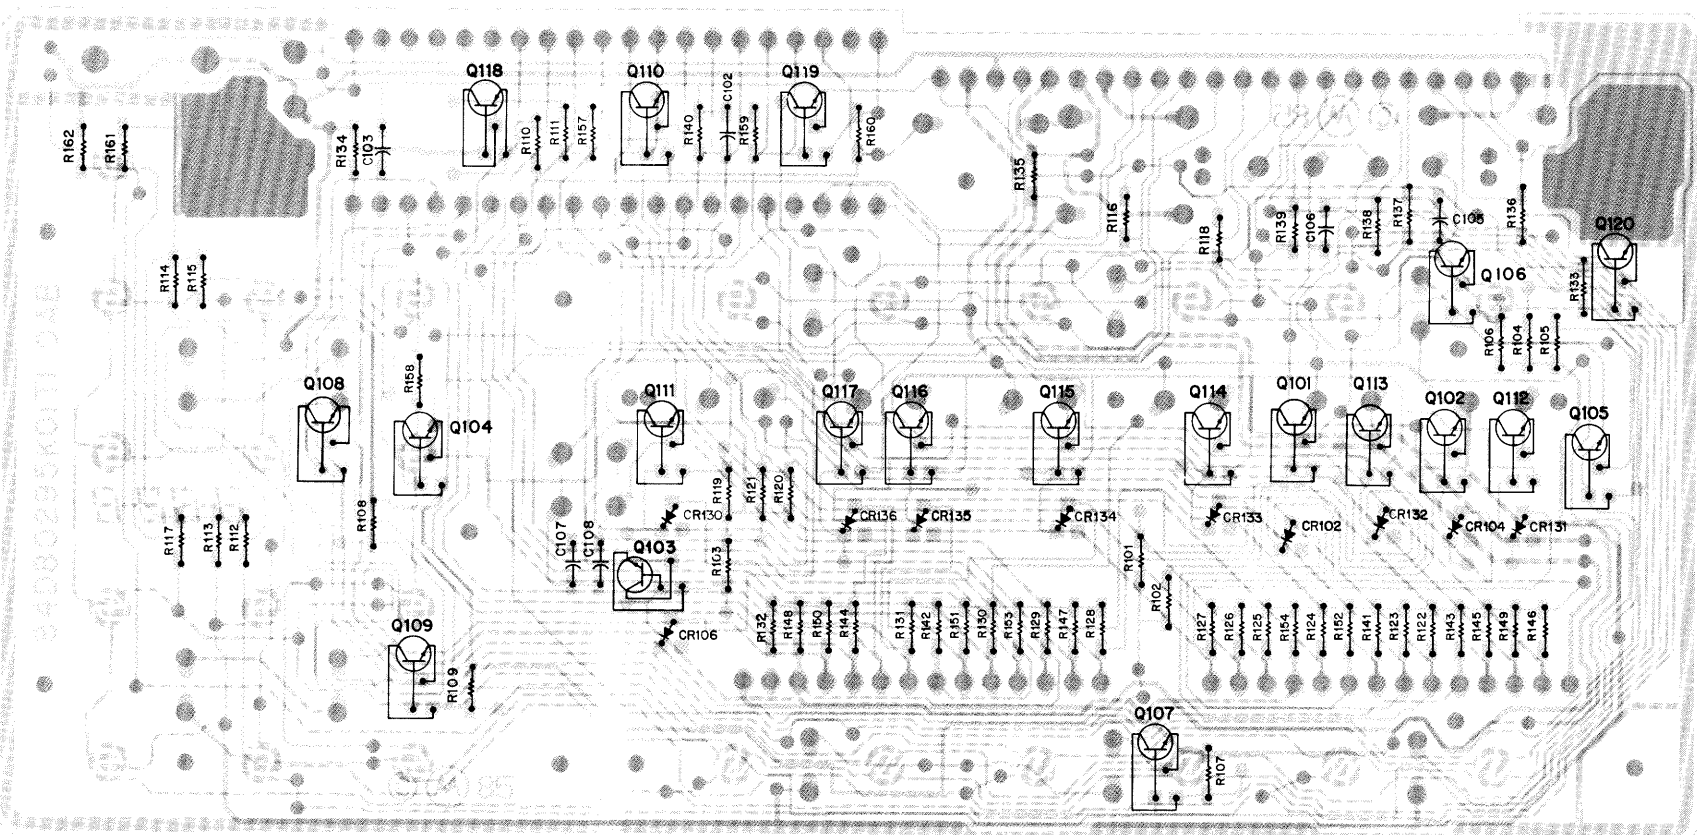

SHOWN FROM SOLDER SIDE

## parts list

p/o HLN4907A Control Unit Display Board MXW-2568-O

REFERENCE SYMBOL	MOTOROLA PART NO.	DESCRIPTION
C101	23-11048C11	capacitor, fixed, $\mu F \pm 20\%$ , 50V
C102	21-11032A09	10, 35V, electrolytic
C103	21-11032B13	.001 $\pm 10\%$
C105-108	21-11032B13	.1 +80, -20%
CR101	48-80246K01	diode (see note)
CR102	48-80236E08	red LED
CR103	48-80246K02	dual silicon, common anode
CR104	48-80236E08	yellow LED
CR105	48-80246K01	dual silicon, common anode
CR106	48-80236E08	red LED
CR107	48-83654H01	dual silicon, common anode
CR109-18	48-80246K04	silicon
CR123	48-80246K02	green LED
CR124-29	48-80246K01	yellow LED
CR130-36	48-80246K01	red LED
CR137	48-80236E08	dual silicon, common anode
	48-48616A01	hot carrier
L101	24-11047A44	coil
L102	24-80138G07	390 $\mu H$
		15 $\mu H$ , $\pm 5\%$
Q101-117	48-80141L02	transistor, 50723 package unless otherwise noted (see note)
Q118	48-80141L01	NPN
Q119, 120	48-80141L02	PNP
		NPN
R101-103	06-11024A25	resistor, fixed, $\Omega \pm 5\%$ , $\frac{1}{8}$ W
R104	06-11024A65	unless otherwise stated
R105-107	06-11024A39	4.7k
R108	06-11024A59	2.7k
R109	06-11024A11	27
R110	06-11024A85	33k
R111	06-11024A49	1k
R112-118	06-11024A97	100k
R119	06-11024A25	100
R120, 121	06-11024A32	200
R122-132	06-11024A97	100k
R133, 134	06-11024A73	10k
R135	06-11024A25	100
R136-139	06-11024A65	4.7k
R140-154	06-11024A97	100k
R157	06-11024A89	47k
R158	06-11024A45	680
R159	06-11024A65	4.7k
R160	06-11024A85	33k
R161	06-11024A69	6.8k
R162	06-11024A67	5.6k
R163	06-8360K09	thermistor, 100k, green
U101	51-80236C04	integrated circuit (see note)
U102	72-80242J01	display driver
VR108	48-82256C67	vacuum fluorescent display
		voltage regulator (see note)
		10V zener, 1 W


note: For best performance, order diodes, transistors, and integrated circuits by Motorola part number.

HKN4240A, HKN4241A and HKN4242A Cable Kits for SYNTOR X 9000 MXW-2529-O


REFERENCE SYMBOL	MOTOROLA PART NO.	DESCRIPTION
non-referenced items		
01-80739T53		22-foot cable
01-80739T54		17-foot cable
01-80739T55		10-foot cable
01-80701T89		LD and lug, black, 66" high-power
09-84151B03		contact receptacle
09-84151B05		plated contact receptacle
39-10184A44		contact receptacle
15-10183A17		2-contact housing connector receptacle
36-80220B06		connector knot
03-00140079		tapping screw (6-19 x $\frac{1}{2}$ )
42-80156B01		retainer ring
09-80227B01		female contact
15-80217K01		front cable housing
15-80216B01		back housing connector
32-83859M01		connector gasket

## CONTROLLER BOARD

\* IN LATER VERSION BOARDS,  
L2 AND L3 ARE REPLACED BY JUMPERS.

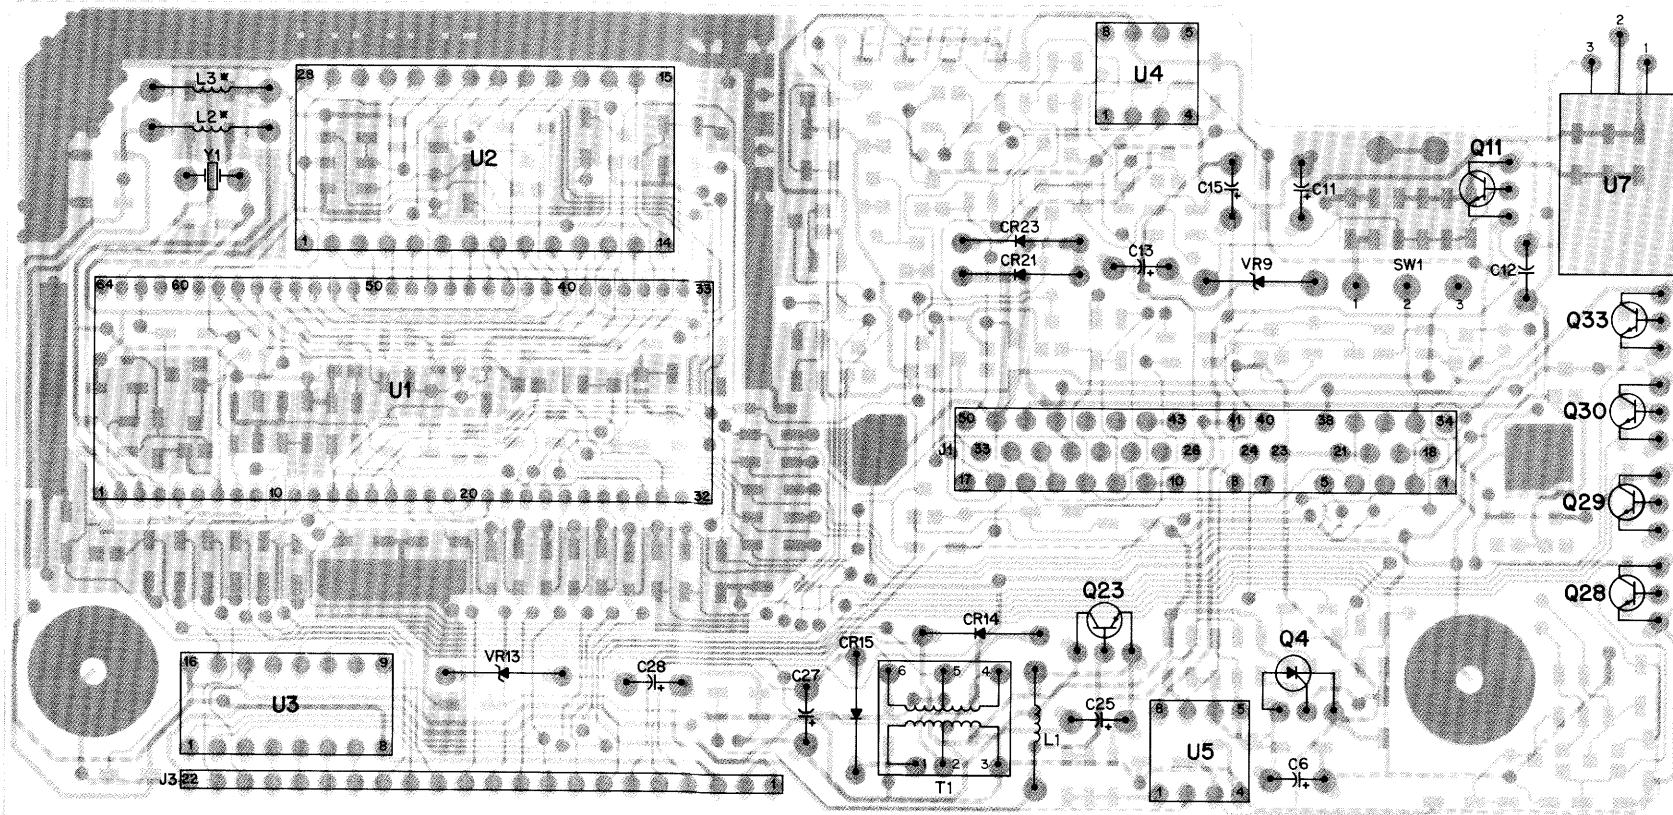

## COMPONENT SIDE VIEW

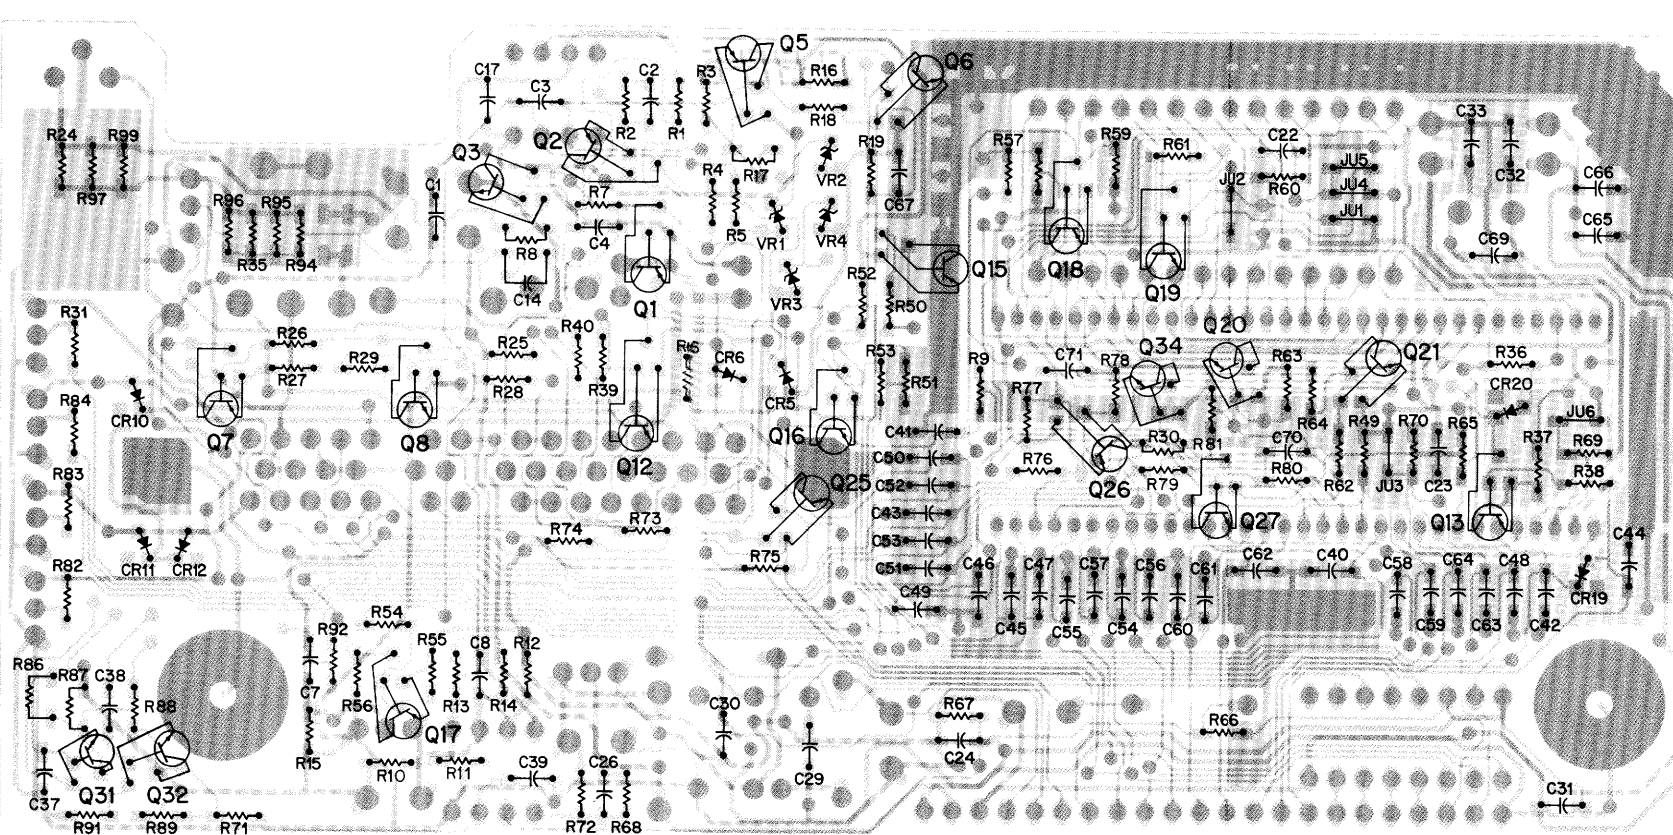

## SOLDER SIDE VIEW


## parts list

HLN4907A Control Unit MXW-2528-O

REFERENCE SYMBOL	MOTOROLA PART NO.	DESCRIPTION
C1	21-11032B13	capacitor, fixed, $\mu F \pm 20\%$ , 50V
C3	21-11031A29	unless otherwise stated
C6	23-11048C05	.1 +80, -20%
C7	21-11032B01	39 pF $\pm 5\%$
C8	21-11031A29	1
C11	23-11048C10	.001 +80, -20%
C12, 13	23-11048C05	39 pF $\pm 5\%$
C14	21-11031A29	1, electrolytic
C15	23-11048C06	2.2, electrolytic
C17	21-11032B13	.1 +80, -20%
C22, 23	21-11032B13	.1 +80, -20%
C24	21-11032B15	.22 +80, -20%
C25	23-11013E57	10, 25V, tantalum
C26	21-11032B13	.1 +80, -20%
C27, 28	23-11048C10	10, electrolytic
C29, 30	21-11032B01	.001 +80, -20%
C31	21-11032B13	.1 +80, -20%
C32	21-11031A24	24 pF $\pm 5\%$
C33	21-11031A21	18 pF $\pm 5\%$
C37, 38	21-11031A60	820 pF $\pm 5\%$
C39-66	21-11031A50	300 pF $\pm 5\%$
C67	21-11032A21	.01 $\pm 10\%$
C69	21-11031A10	5.6 pF $\pm 5\%$
C71	21-11032A21	.01 $\pm 10\%$
C72	21-11031A29	39 pF $\pm 5\%$
CR5, 6	48-80236E08	diode (see note)
CR10-12	48-80236E08	dual silicon, common anode
CR14, 15	48-83654H01	dual silicon, common anode
CR19, 20	48-80236E08	silicon rectifier
CR21	48-82466H18	dual silicon, common anode
CR23, 24	48-84616A01	silicon rectifier
		hot carrier
J1	01-80740T38	connector receptacle
		D-type 50-pin connector and face gasket
L1	24-80138G04	coil
		5.6 $\mu H$ , $\pm 5\%$
Q1	48-80141L01	transistor, 50723 package unless otherwise noted (see note)
Q2	48-80141L03	PNP
Q3	48-80141L04	NPN
Q4	48-80182D22	SCR, type M8222
Q5	48-80141L03	PNP
Q6	48-80141L04	NPN
Q7	48-80141L03	PNP
Q8	48-80141L04	NPN
Q11	48-80182D11	NPN, type M82D11
Q12	48-80141L04	NPN
Q13	48-80141L01	PNP
Q15	48-80141L03	PNP
Q16	48-80141L04	NPN
Q17, 18	48-80141L03	PNP
Q19	48-80141L02	NPN
Q20	48-80141L03	PNP
Q21	48-80141L02	NPN
Q23	48-00869732	PNP, type M9732
Q25-27	48-80141L03	PNP
Q28-30	48-80182D28	NPN, type M8228
Q31, 32	48-80141L02	NPN
Q33	48-80182D08	NPN, type M82D08
Q34	48-80141L04	NPN
R1	06-11024A57	resistor, fixed, $\Omega \pm 5\%$ , $\frac{1}{8}$ W
R2	06-11024A73	unless otherwise stated
R3	06-11024A65	2.2k
R4, 5	06-11024A25	100
R6	06-11024A65	4.7k
R7	06-11024A73	10k
R8	06-11024A57	2.2k
R9	06-11024A79	18k
R10, 11	06-11024B06	220k
R12	06-11024A65	4.7k
R13, 14	06-11024A97	100k
R15	06-11024A73	10k
R16, 17	06-11024A89	47k
R18	06-11024A85	33k
R19	06-11024A73	10k
R24	06-11024A11	27
R25	06-11024A49	1k
R26	06-11024A81	22k
R27	06-11024A73	10k
R28	06-11024A89	47k
R29	06-11024A65	4.7k
R30, 31	06-11024A85	33k
R35	06-11024A45	680
R36-39	06-11024A57	2.2k
R49	06-11024A89	47k
R50	06-11024A65	4.7k

Troubleshooting Charts, Schematics,  
Circuit Board Diagrams, and Parts Lists for  
SYNTOR X 9000 Control Unit  
**PEW-2584-O**  
(Sheet 3 of 4)  
2/17/86



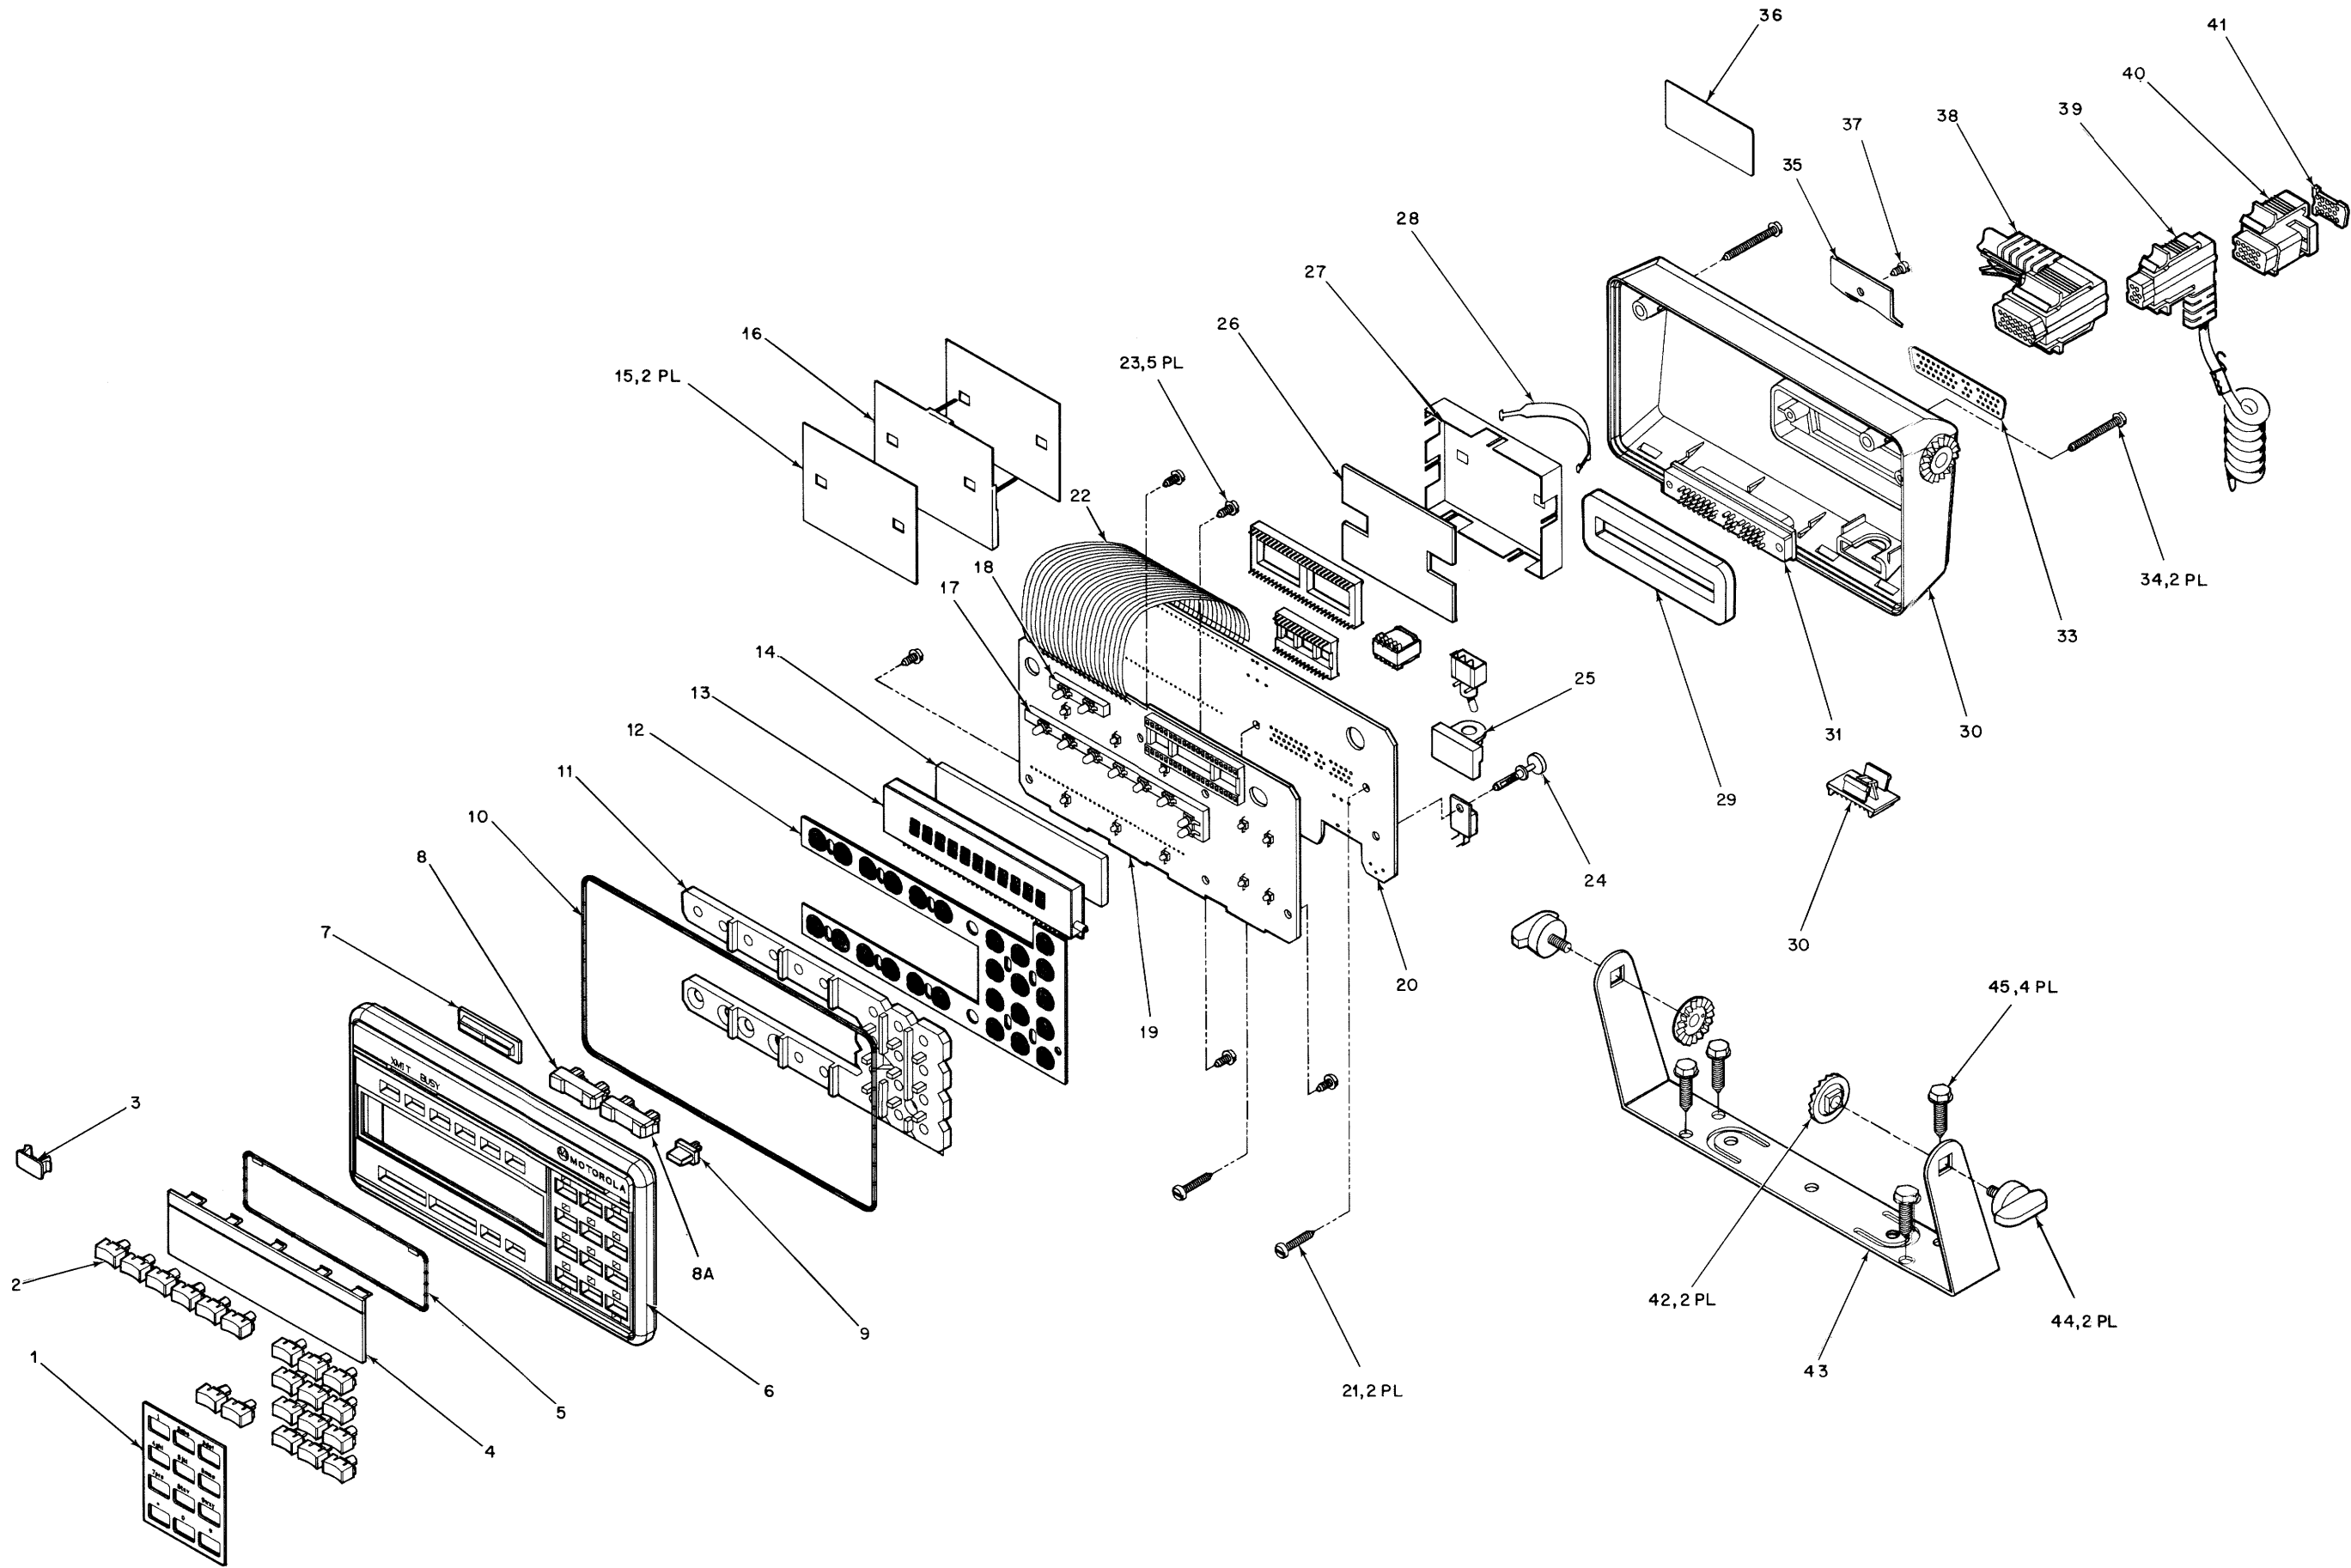



## parts list

Mechanical Parts List for Systems 9000 Control Head MXW-2293-O

REFERENCE SYMBOL	MOTOROLA PART NO.	DESCRIPTION
1	13-80087J01	escutcheon
2	38-80090J01	push-in key topper (specify legend required)
3	38-80253K01	plug key
4	61-80095J01	VF lens
5	32-80057K01	lens gasket
6	15-08088J01	front housing
7	61-80097J01	LED lens
8	38-80091J01	rocker key topper, mode
8A	38-80091J02	rocker key topper, volume
9	38-80092J01	dimmer key topper
10	32-80180J01	housing gasket
11	61-80185J01	keyboard lightpipe
12	75-80098J01	elastomeric keypad
13	72-80242J01	VF display
14	75-80184J01	VF shock pad
15	14-80269K01	insulator
16	26-80220K01	solder side shield
17	43-80011L01	LED 8-position spacer
18	43-80012L01	LED 2-position spacer
19	84-80117J01	PCB display
20	84-80104J01	PCB control
21	03-10945A14	TORX plastite slotted screw (M3.12 x P1.27 x 16)
22	30-80034K01	22-position flex cable
23	03-10945A11	TORX plastite slotted screw (M3.12 x P1.27 x 8)
24	05-80200K01	nylon rivet
25	32-80178J01	on-off gasket
26	75-80268K01	IC shock pad
27	26-80003K01	component side shield
28	55-84300B02	shield handle
29	32-80179J01	D connector gasket
30	38-80128J01	on-off key topper
31	28-80228J01	50-position D subminiature connector
32	15-80089J01	back housing
33	32-80181J01	connector face gasket
34	03-10908A33	TORX panhead slotted machine screw (M3.5 x 0.6 x 30)
35	07-84323C01	strain relief bracket
36	54-80282J01	nameplate
37	03-10908A18	TORX panhead slotted machine screw (M3.0 x 0.5 x 6)
38	30-80222J01	radio cable
39	30-80223J01	microphone cable
40	15-80221K01	vehicle interface port connector
41	32-80275K01	VIP gasket
42	43-80127J01	trunnion spacer
43	07-80126J01 or 07-80126J02	trunnion bracket, long
44	03-80160E01	trunnion bracket, short
45	03-00136756	wing screw


parts list


HKN4241A 17' Negative Ground Cable Kit		MXW-2046-O
REFERENCE SYMBOL	MOTOROLA PART NO.	DESCRIPTION
	01-80701T89	66' high power black lead and lug
	09-84151B03	contact receptacle
	09-84151B05	plated contact receptacle
	39-10184A44	contact receptacle, 2 used
	15-10183A17	receptacle contact housing, 2-contact
	36-80220B06	connector knob
	03-00140079	tapping screw (6-19 x 1/2), 4 used
	42-10217A02	tie strap (.091 x 3.62), 2 used
	42-80156B01	retainer ring
	09-80227B01	power contact, female, 2 used
	15-80217K01	front cable housing
	15-80216B01	back cable housing
	32-83859M01	connector gasket
	54-80072G01	circuit board label
	54-84032M02	label

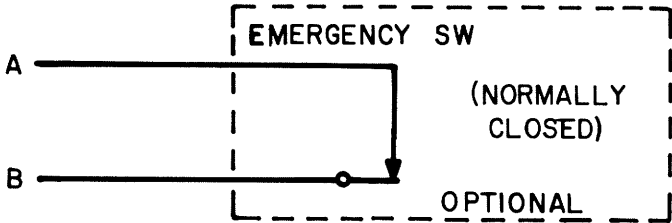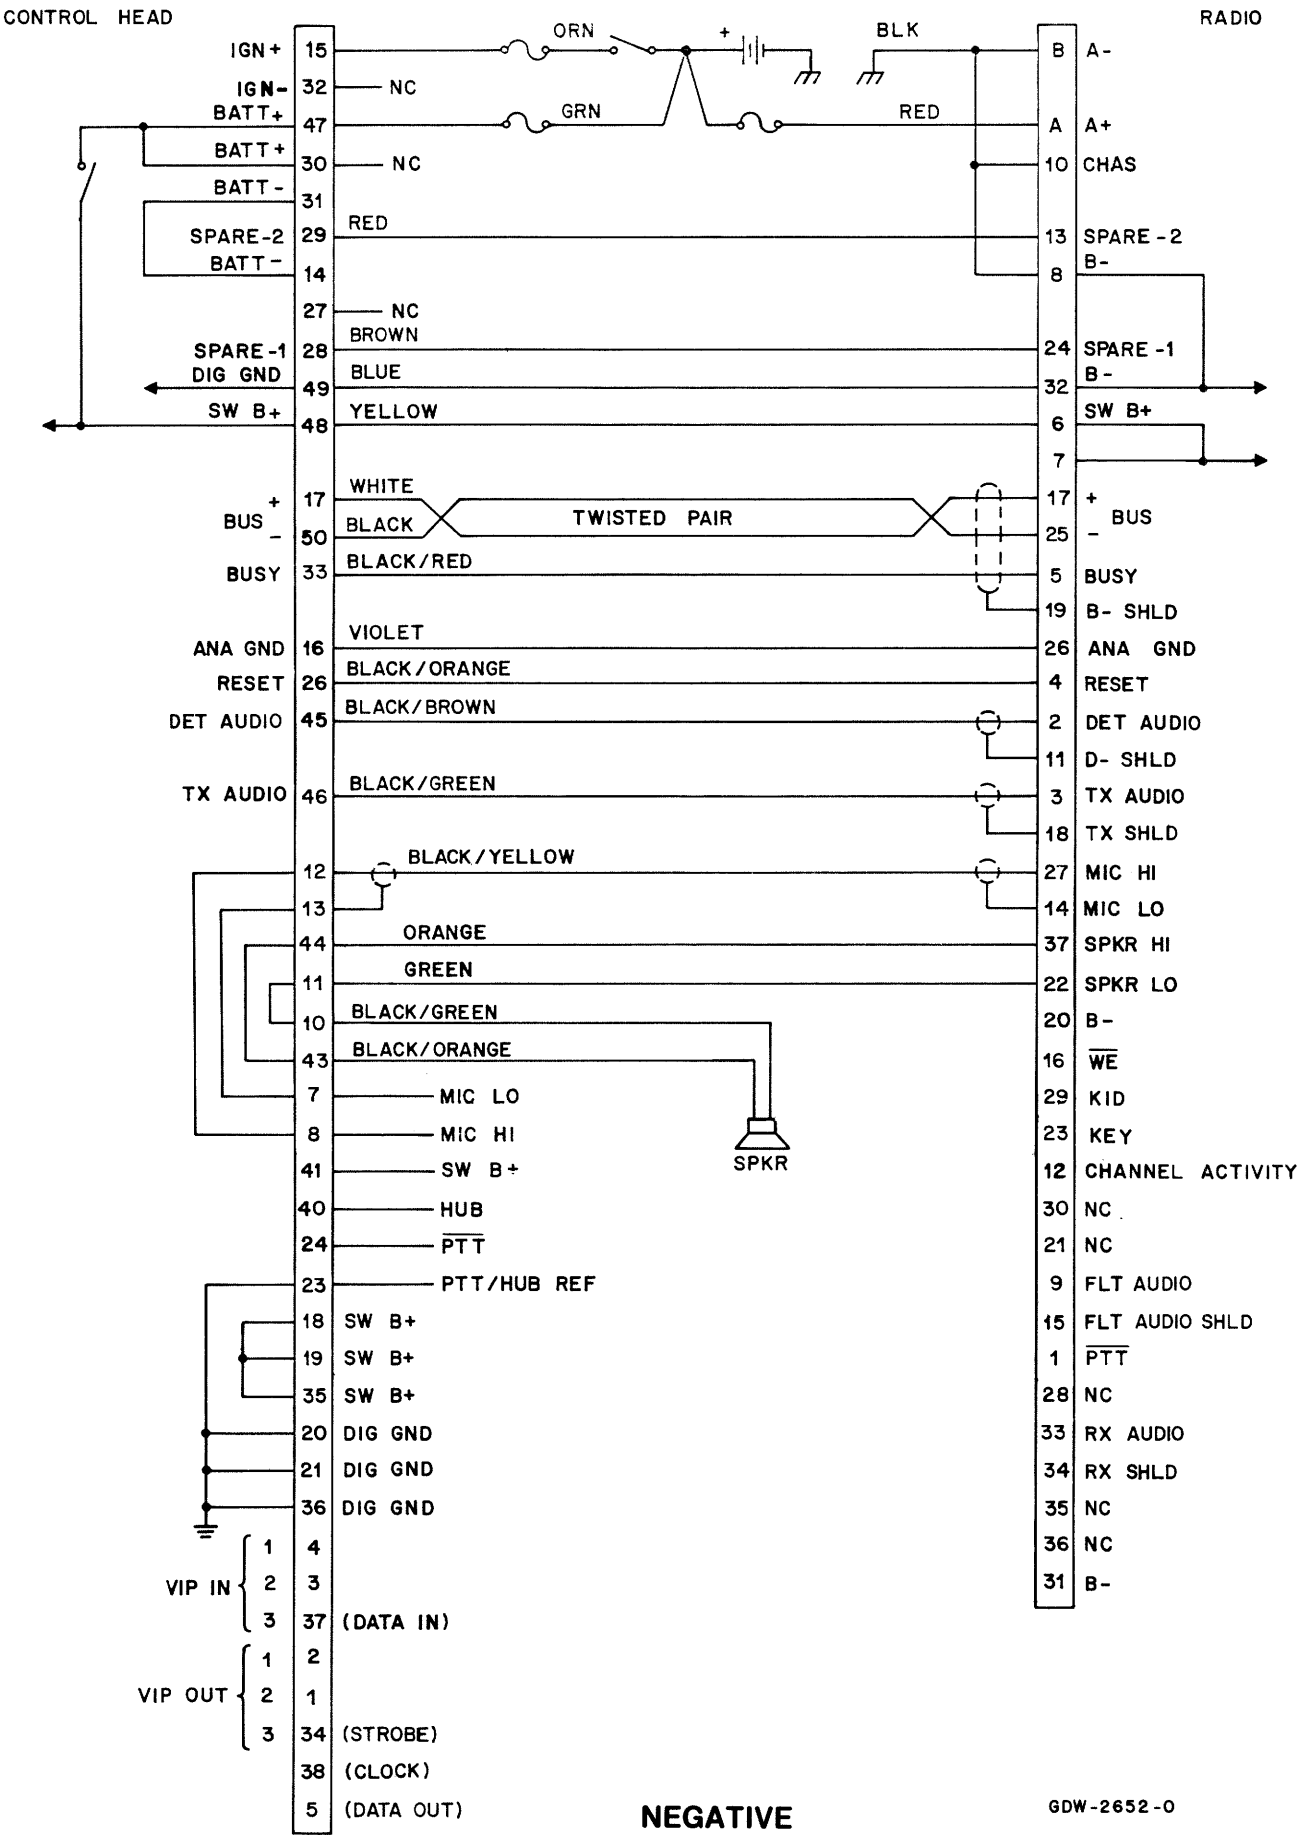


NOTE:  
VIP INPUTS ARE PROGRABLE.  
THIS MEANS VIP IN #1, VIP IN  
#2, OR VIP IN #3 COULE BE MADE  
AN EMERGENCY SWITCH DEPENDING  
ON HOW THE CONTROL HEAD IS  
PROGRAMMED.

GAW-3002-O

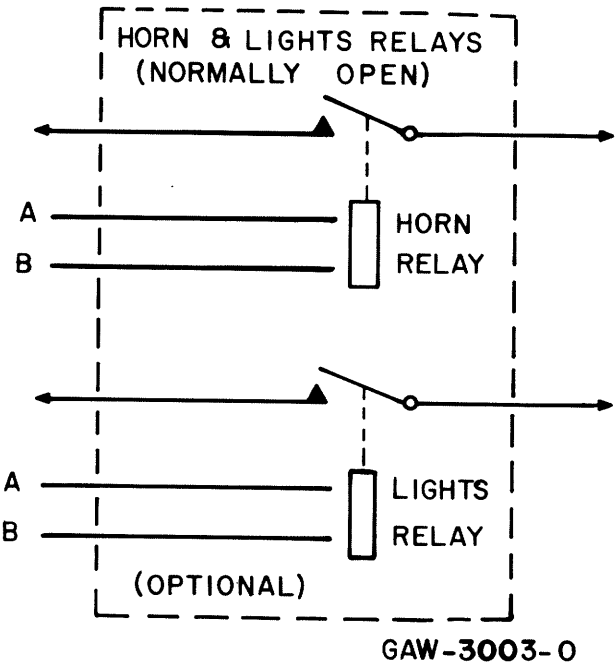


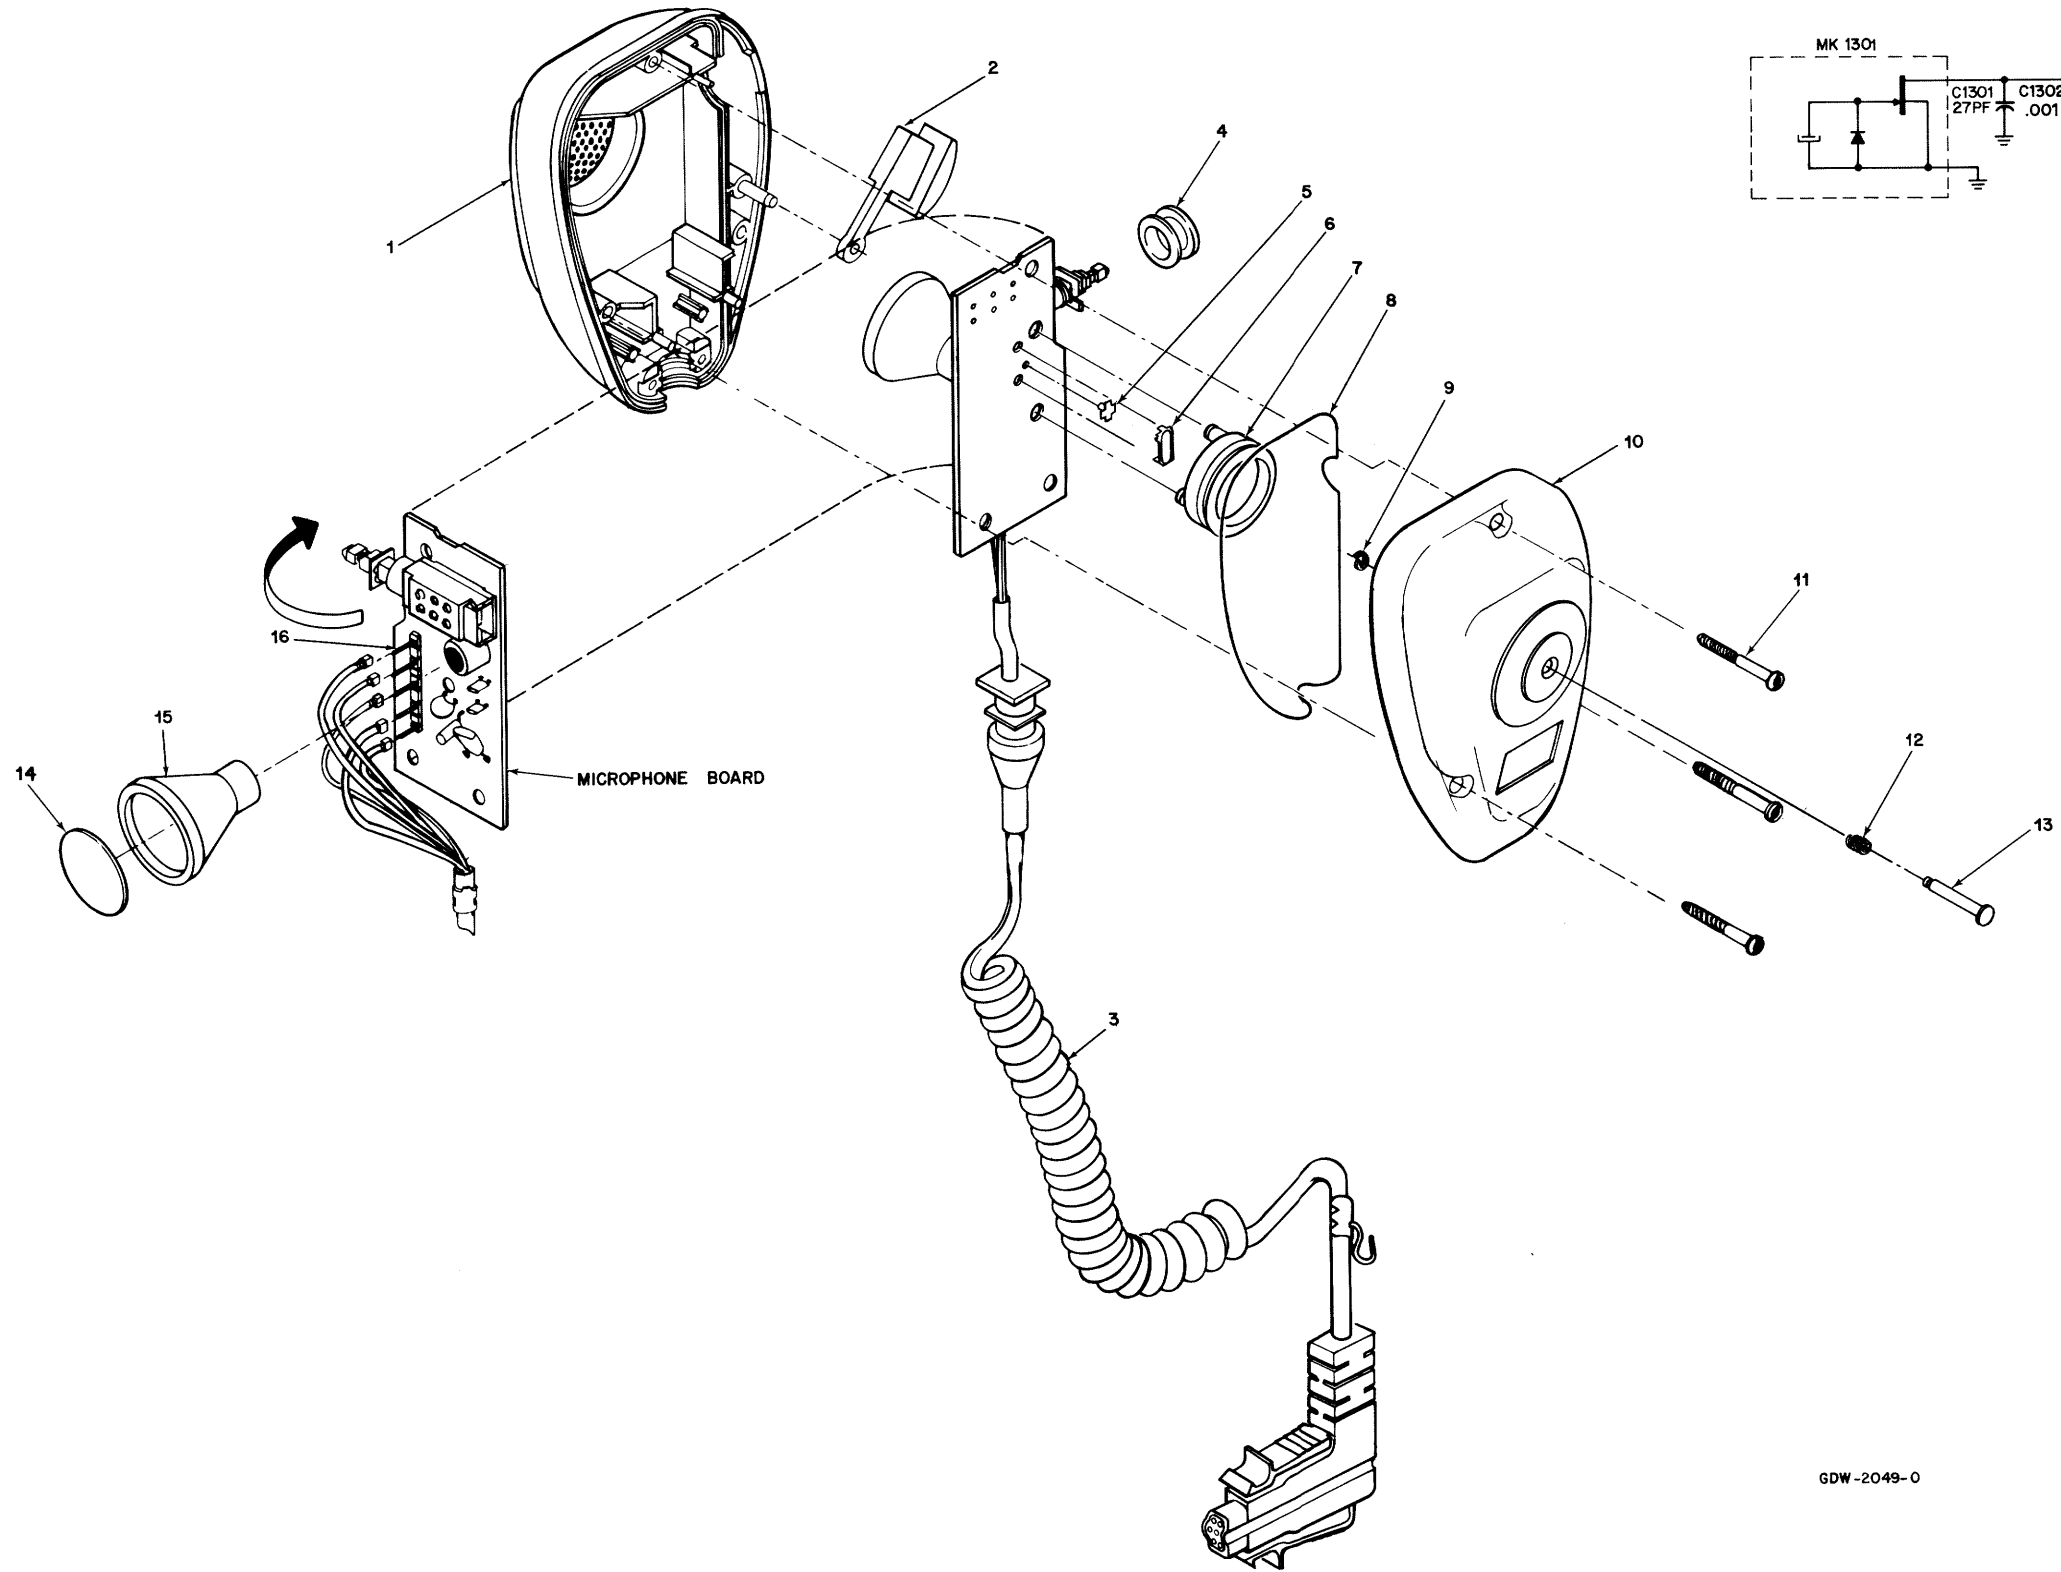

GDW-2049-0

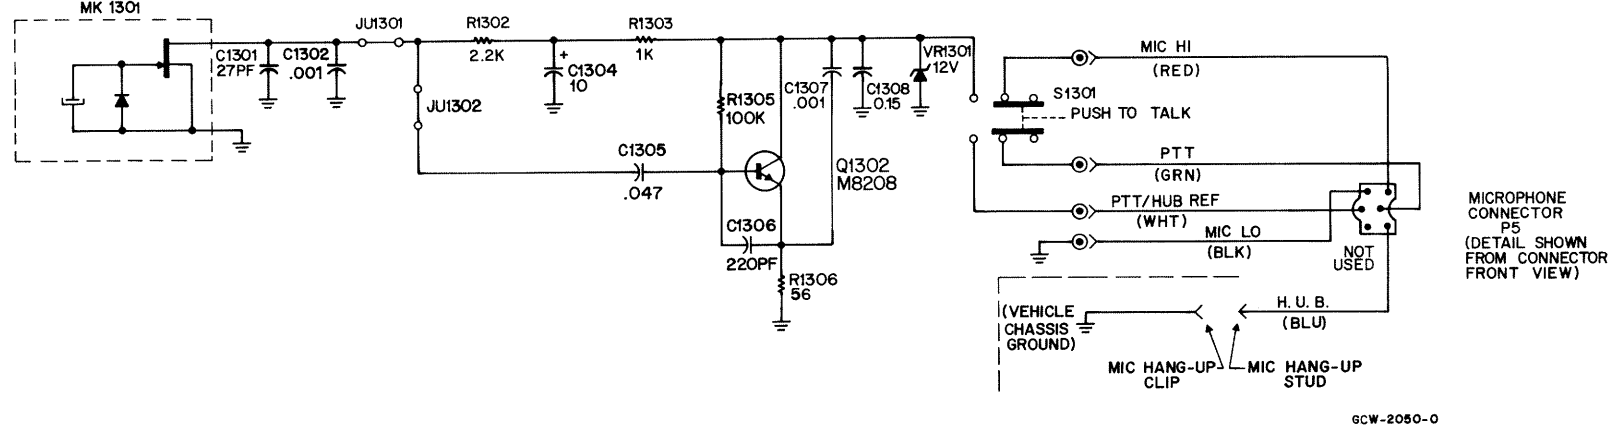


GCW-2050-0

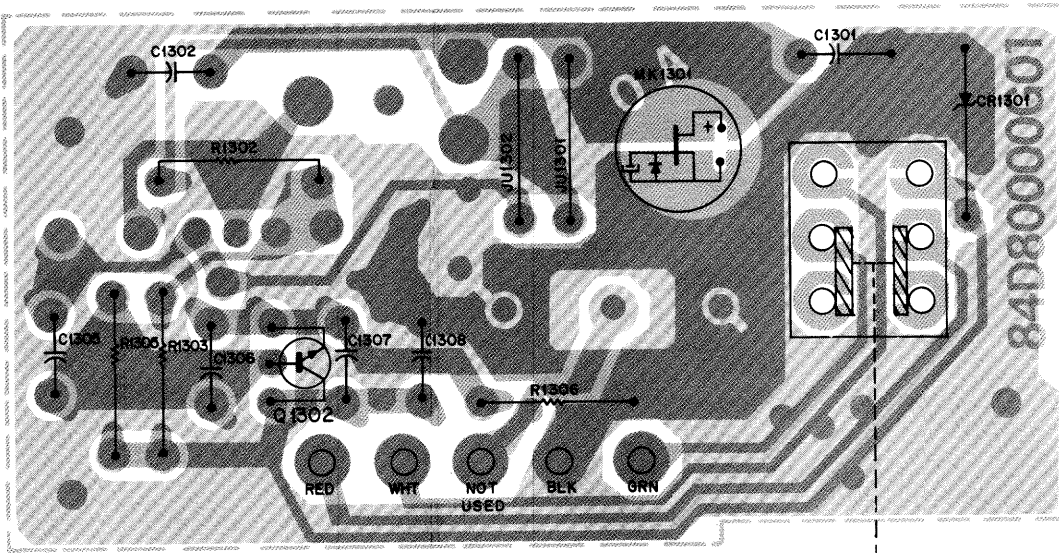


SHOWN FROM SOLDER SIDE

COMPONENT SIDE BD-BEPS-37896-0  
SOLDER SIDE BD-BEPS-37897-0  
OL-BEPS-38385-0

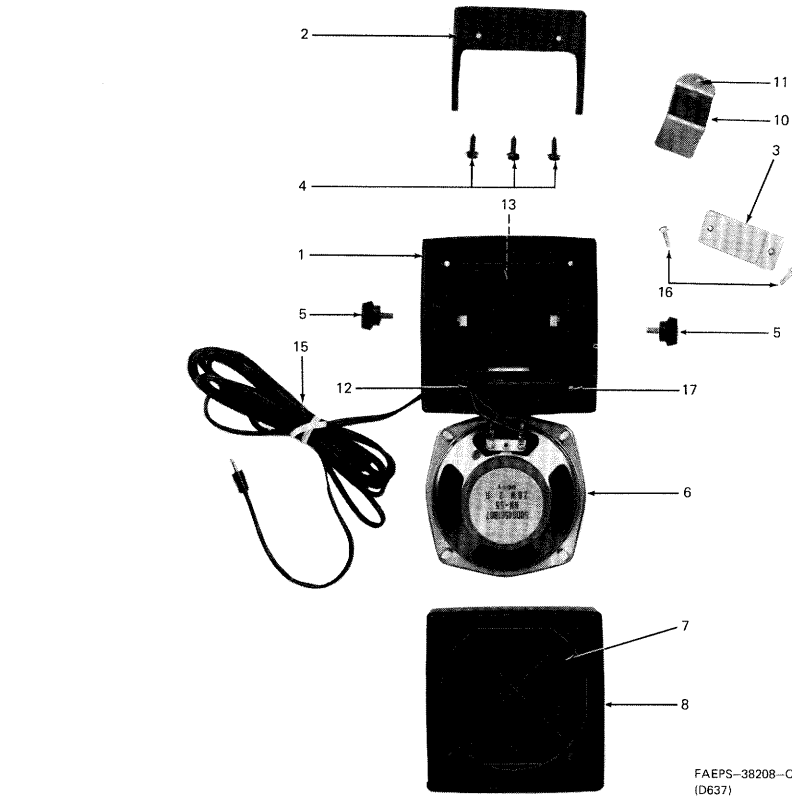

GBW-2274-0

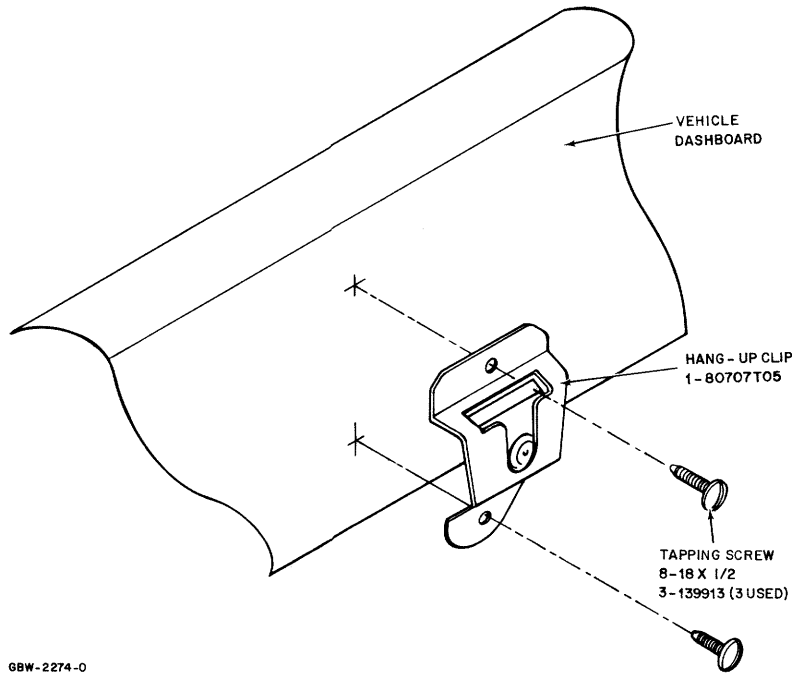

## parts list

HLN4384B Systems 9000 Microphone Board MXW-2051-O

REFERENCE SYMBOL	MOTOROLA PART NO.	DESCRIPTION
C1301	21-11038H35	capacitor, fixed, $\mu F \pm 5\%$ , 50V unless otherwise stated
C1302	21-11039B13	27 pF .001 $\pm 10\%$
C1304	23-11019A20	10 $\pm 20\%$ , 25V, electrolytic
C1305	08-11017A14	.047
C1306	21-11038P50	220 pF
C1307	21-11039B13	.001 $\pm 10\%$
C1308	08-11051A14	.15, 63V
CR1301	48-82256C25	diode (see note) 12V zener $\pm 5\%$ , 400mW
JU1301, 1302	06-11009B23	connector receptacle resistor jumper
MK1301	50-80258E04	microphone electret cartridge
Q1302	48-80182D08	transistor (see note) NPN, type M82D08
R1302	06-11009C57	resistor, fixed, $\Omega \pm 5\%$ , $\frac{1}{4}$ W unless otherwise stated
R1303	06-11009C49	2.2k
R1305	06-11009C97	1k
R1306	06-11009C19	100k 56
S1301	40-80652E02	switch momentary switch
mechanical part		
14-84360C01		switch insulator
note: For best performance, order diodes, transistors, and integrated circuits by Motorola part number.		

## FUNCTION

The palm microphone contains an amplifier to provide the radio with a high-level, noise-free audio input. The microphone also provides push-to-talk transmit control for the radio as well as off-hook channel monitoring (PL/DPL squelch disable) capability.

HLN4953A Systems 9000 Microphone Hardware MXW-2052-O

REFERENCE SYMBOL	MOTOROLA PART NO.	DESCRIPTION
1	15-80137D05	microphone front housing
2	38-80144D02	microphone button
3	30-80223J01	6-conductor microphone cable
4	05-80221K01	PTT switch grommet
5	40-80252E02	monitor switch button
6	40-80252E01	monitor switch contact
7	32-80253E02	PL switch gasket
8	32-80059H03	housing gasket
9	42-80166E01	retaining ring
10	15-80137D03	rear microphone housing
11	03-80076E04	hi-lo metric screw, 3 used
12	41-80175A01	spring
13	46-80089E06	microphone hangup stud
14	35-80089D01	microphone felt baffle
15	05-80148D01	microphone cartridge grommet
16	39-10184A10	contact plug, 5 used
non-referenced items		
04-80093E01		flat washer
41-80096E02		microphone plunger spring
45-80113D02		actuator plunger
46-80281G01		microphone weight
01-80738T96		microphone hangup clip
01-80707T05		eyeleted spring and bracket
03-00139913		tapping screw (8-18 x $\frac{1}{2}$ ), 2 used
05-80151D01		switch button grommet
54-84862K01		safety tag
33-80095E32		nameplate, HMN1031A

HSN4018A Systems 9000 Speaker MXW-2053-O

REFERENCE SYMBOL	MOTOROLA PART NO.	DESCRIPTION
01-80702T45		speaker mounting hardware
03-00136756		tapping screw (10-16 x $\frac{3}{4}$ )
01-80740T18		Systems 9000 speaker cable
15-10183A18		connector housing plug, 2-contact
39-10184A45		contact plug, 2 used
42-82018H05		retainer cable
42-84081A03		wire clamp with S-hook
03-00140001		tapping screw (6-19 x $\frac{3}{4}$ ), 4 used
03-84244C03		black shadow wing screw, 2 used
50-80135E01		speaker
07-80200E01		black speaker trunnion bracket
13-82671M04		bezel
15-84981B07		speaker base cover
32-84564B01		speaker gasket

Microphone, Speaker, and Accessories

PEW-2048-O

12/5/85



**MOTOROLA**  
Mobile Products Division

# instruction manual revision

---

## GENERAL

This revision consists of changes that have occurred since your manual was printed. Please correct your manual accordingly.

## INSTRUCTION MANUALS AFFECTED


68P80100W94-O

*SYNTOR X 9000*  
High Band and UHF Radios

## REVISION


1. Locate WMR-0224 and mark out step 6.
2. In the Microcomputer System section, remove and discard fold-out pages, PEW-2586-O, Sheets 1 through 4.
3. Insert the attached fold-out pages, PW-2586-C, Sheets 1 through 4.
4. Insert the attached fold-out page, PW-4350-O after the last page of PW-2586-C.

# U300 BLOCK DIAGRAM

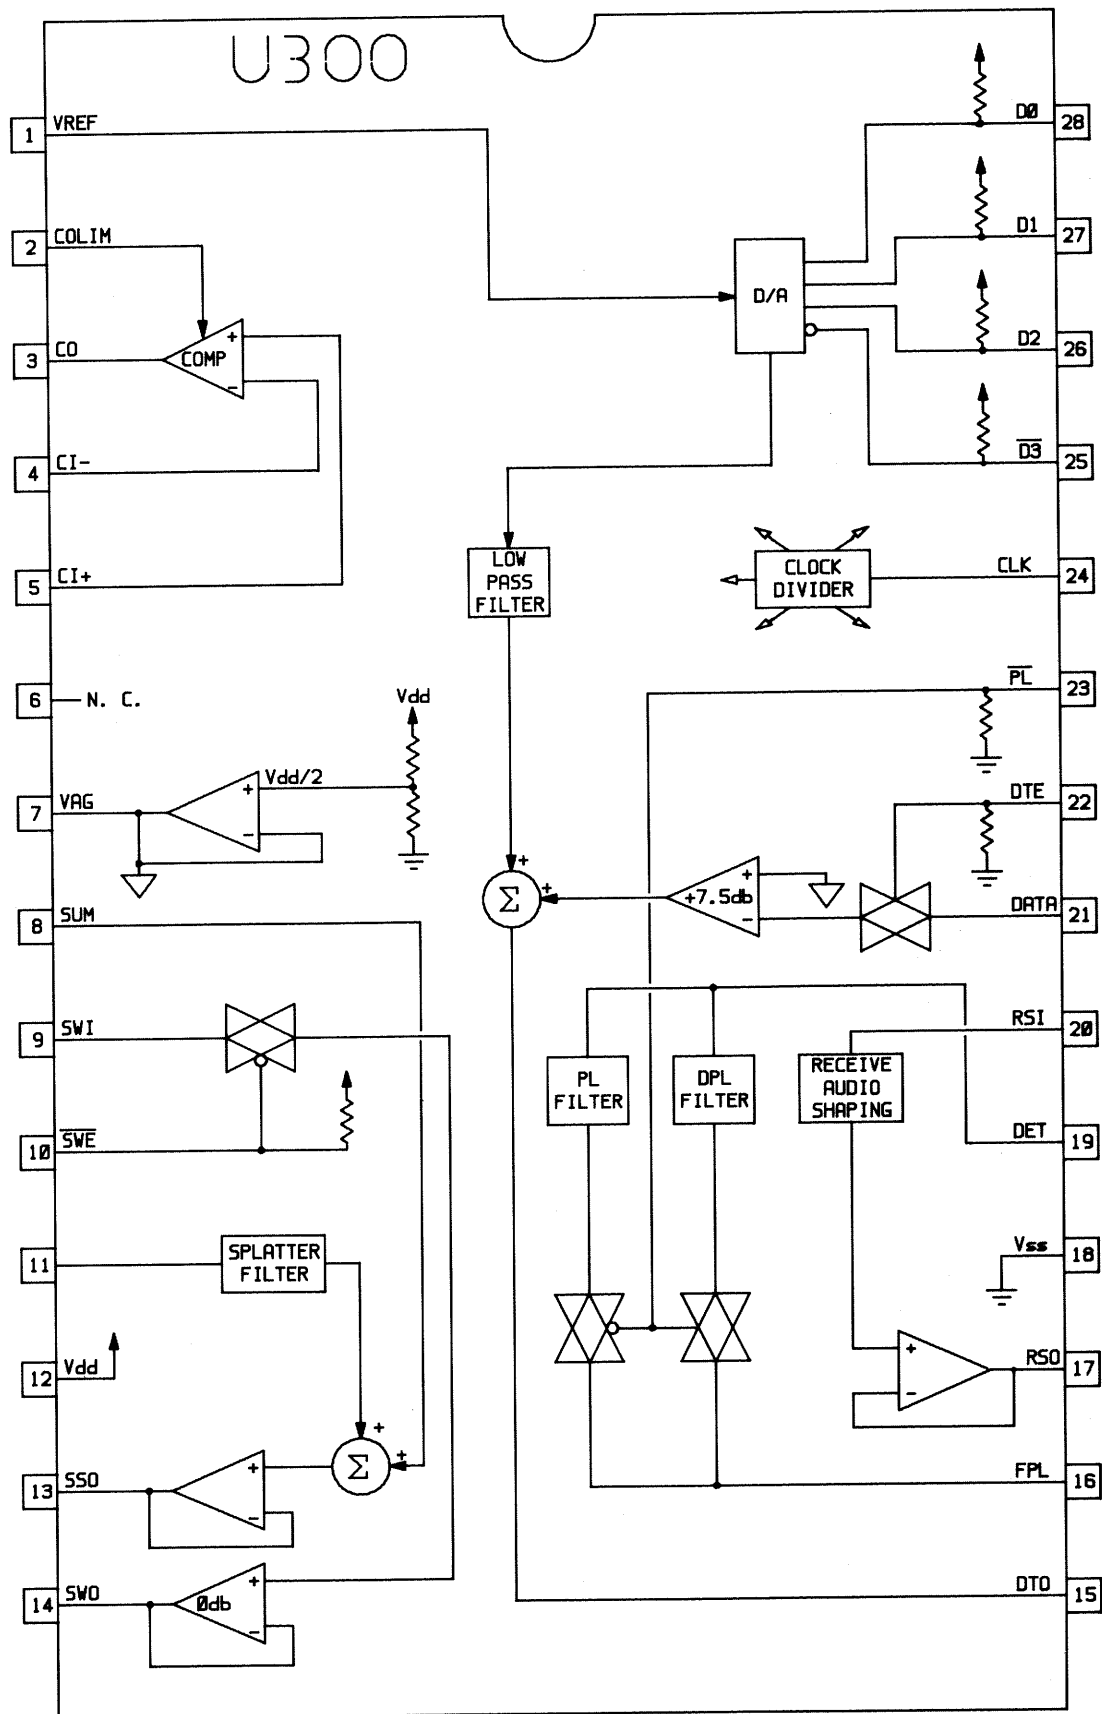

GCW-2586-0

Schematic, Circuit Board Diagram  
and Parts List for HLN4925D  
Personality Board  
**PW-2586-C**  
(Sheet 1 of 4)  
4/21/87

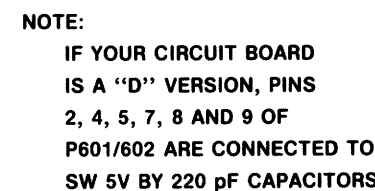

GEW-3012-A

## parts list

HLN4925D Systems 9000 Personality Board MXW-2486-C


REFERENCE SYMBOL	MOTOROLA PART NO.	DESCRIPTION
C100	08-11051A07	capacitor, fixed, $\mu F \pm 10\%$ , 50V
C101	21-11031A49	unless otherwise stated
C102	21-11031A31	.01 pF $\pm 5\%$ , 63V
C103	21-11032A21	47 pF $\pm 5\%$
C104	08-11051A02	.01 $\pm 5\%$ , 63V
C105	23-11048C11	10 pF $\pm 20\%$ , 35V, electrolytic
C106	21-11031A31	47 pF $\pm 5\%$
C107	21-11031A47	220 pF $\pm 5\%$
C108	23-11048C11	10 $\pm 20\%$ , 35V, electrolytic
C109	21-11031A64	.0015 $\pm 5\%$
C200	21-11032B15	22 $\pm 80$ , -20%
C201	08-11051A15	22 $\pm 5\%$ , 63V
C202	08-11051A04	.0033 $\pm 5\%$ , 63V
C203	08-11051A15	22 $\pm 5\%$ , 63V
C204	23-11013D55	4.7 $\pm 20\%$ , 20V, tantalum
C205	21-11031A31	47 pF $\pm 5\%$
C206	21-11031A57	560 pF $\pm 5\%$
C207	08-11051A17	.47 $\pm 5\%$ , 63V
C208	21-11032A21	.01
C209	21-11032A27	.033
C210	08-11051A17	.47 $\pm 5\%$ , 63V
C211	23-11048C11	10 $\pm 20\%$ , 35V, electrolytic
C212	23-11048C05	1 $\pm 20\%$ , 50V, electrolytic
C213	23-11048C06	2.2 $\pm 20\%$ , 50V, electrolytic
C214	21-11032A21	.01, 50V
C215	21-11031A31	47 pF $\pm 5\%$
C216	08-11051A13	.1 $\pm 5\%$ , 63V
C217	23-11013C01	1.5, 5V, tantalum
C300	21-11032A09	.001
C301	21-11031A43	150 pF $\pm 5\%$
C302	21-11032A09	.001
C303	21-11032B13	.1 $\pm 80$ , -20%
C304	21-11031A31	47 pF $\pm 5\%$
C305	21-11032A27	.033
C306	21-11032A21	.01
C307	23-11013D55	4.7 $\pm 20\%$ , 20V, tantalum
C308	23-83210A08	100 $\pm 150$ , -10%, 25V, electrolytic
C309-316	21-11031A39	100 pF $\pm 5\%$
C317	21-11031A47	220 pF $\pm 5\%$
C400	08-11051A17	.47 $\pm 5\%$ , 63V
C401,402	21-11031A47	220 pF $\pm 5\%$
C403	21-11031A64	.0015 $\pm 5\%$
C404-409	21-11031A47	220 pF $\pm 5\%$
C410	08-11051A15	22 $\pm 5\%$ , 63V
C411	23-82747L01	330 $\pm 100$ , -10%, 20V, electrolytic
C412	08-11051A15	22 pF $\pm 5\%$ , 63V
C414	23-11013C56	22 $\pm 20\%$ , 15V, tantalum
C415,416	21-11031A47	220 pF $\pm 5\%$
C501	23-11048C11	10 $\pm 20\%$ , 35V, electrolytic
C502	23-11013C55	15 $\pm 20\%$ , 15V, tantalum
C503	21-11032A21	.01
C504	23-11013C55	15 $\pm 20\%$ , 15V, tantalum
C505-509	21-11032B13	.1 $\pm 80$ , -20%
C510,511	21-11031A25	27 pF $\pm 5\%$
C512	23-11013C01	1.5 pF, 15V, tantalum
C513	21-11032A21	.01, 50V
C514	21-11032A21	.01
C515	21-11031A65	.0018 $\pm 5\%$
C516	21-11031G61	620 pF $\pm 5\%$
C521	21-11032A21	.01
C522-569	21-11032A02	270 pF
C570	21-11032B13	.1 $\pm 80$ , -20%
C571-576	21-11031A47	220 pF $\pm 5\%$
CR100, 101	48-80007E02	diode (see note)
CR200, 201	48-83654H01	zener $\pm 5\%$ , 12V, 400mW
CR202, 203	48-80007E02	silicon
CR300	48-80236E07	zener $\pm 5\%$ , 12V, 400mW
CR301	48-82178A01	transient suppressor
CR302	48-80008E01	germanium
CR400	48-83654H01	rectifier
CR500-503	48-83654H01	silicon
CR504-507	48-80140L11	zener, 7.5V
CR508	48-83654H01	silicon
CR509-511	48-80140L06	zener, 5.1V
CR513, 514	48-83654H01	silicon
CR515, 516	48-80013E02	contact
HY300	01-80739T59	hybrid (see note)
HY301	01-80740T15	transmission gate hybrid
HY500	01-80739T60	squelch hybrid
J100	28-84318M06	watchdog timer hybrid
J101	28-80085E24	connector receptacle
J200	28-84318M07	2-contact
J500, 501	28-84318M06	8-contact
J501	28-84318M07	3-contact
J504	28-84318M07	2-contact
J501	28-84318M07	3-contact
J504	28-84318M07	3-contact

MXW-2486-C (2)

REFERENCE SYMBOL	MOTOROLA PART NO.	DESCRIPTION
JU100, 101	09-84728L01	Jumper
JU200	09-84728L01	socket
JU501	09-84728L01	socket
JU504	09-84728L01	socket
L300	24-80293D02	coll
L400-402	24-80036A01	ferrite, 1/2 turn
L403	01-80741T98	ferrite, 1/2 turn
L500-502	24-80138G04	standup ferrite with heat sink
L501	24-80239D02	5.6 $\mu H \pm 5\%$ , axial
L502	24-80239D02	ferrite, 1/2 turn
P300	28-80264K01	connector plug
P601, 602	28-82647K02	10-contact
Q100	48-00696660	transistor (see note)
Q101	48-05128M66	P-Chan, JFET
Q200	48-80141L02	N-Chan, JFET
Q201	48-80141L03	NPN
Q202, 203	48-80141L02	NPN
Q300	48-80141L02	NPN
Q400	48-84413L06	NPN
Q401	48-84413L07	PNP
Q402	01-80734T95	PNP, transistors and clip
Q403	01-80734T96	PNP, transistors and clip
Q404	48-80141L02	NPN
Q500	48-80141L03	PNP
Q501, 502	48-80141L04	NPN
Q503	48-80141L03	PNP
Q504, 505	48-80141L02	NPN
Q506	48-80141L04	NPN
Q507, 508	48-80141L03	PNP
Q509	48-80141L04	NPN
Q510	48-80141L02	NPN
Q511	48-00696328	PNP
Q512, 513	48-80141L04	NPN
Q514	48-80141L01	PNP
Q516	48-80141L01	PNP
Q517	48-80141L02	NPN
R16	06-11024A33	resistor, fixed, $\Omega \pm 5\%$ , 1/4 W
R100	06-11024A01	unless otherwise stated
R101	06-11024A43	10, 1/4 W
R102	06-11024A49	220
R103	06-11024A87	1k
R104	06-11049P94	39k
R105	06-11049P87	1k $\pm 1\%$ , 1/4 W
R106	06-11024A87	9.09k $\pm 1\%$ , 1/4 W
R107	06-11024A67	5.6k
R108	18-80087E08	10k potentiometer
R109	06-11024A67	5.6k
R110	06-11024A87	39k
R111	18-80087E08	10k potentiometer
R112	06-11024A92	24k
R113	06-11024A73	10k
R114	06-11024A62	3.6k
R115	06-11024A78	16k
R116	06-11024A84	30k
R117	06-11024A77	15k
R118	06-11024A25	100
R119	06-11024A81	22k
R120	06-11024A65	4.7k
R121	06-11024B02	150k
R122	06-11024A89	47k
R123	06-11024A72	9.1k
R124	06-11024A73	10k
R125	06-11024A83	27k
R126	06-11024A71	8.2k
R127	06-11024B04	180k
R200	06-11024A71	9.2k
R201	06-11024A78	18k
R202	06-11024B04	180k
R203	06-11024A59	2.7k
R204	06-11024A73	10k
R205	06-11024B04	180k
R206	06-11024A83	27k
R208, 209	06-11024A89	47k
R210	06-11024A25	100
R211	06-11024A78	16k
R212	06-11024A61	3.3k
R213	18-05500L17	1.5k $\pm 20\%$ , 100V, potentiometer
R214	06-11024A65	47k
R215-217	06-11024A89	47k
R218	06-11024A73	10k
R300	06-11024A71	8.2k
R301	06-11024A80	3k
R302	06-11024A93	68k
R303	06-11024A73	10k
R304	06-11024A65	4.7k
R305	06-11024A66	5.1k
R306	06-11024A73	10k
R307	06-11024A92	62k
R308	06-11024A73	10k
R400	06-11024A97	100k

MXW-2486-C (3)

REFERENCE SYMBOL	MOTOROLA PART NO.	DESCRIPTION
R401	06-11024A98	110k
R402	06-11024A59	2.7k
R403, 404	06-11024A89	47k
R405	06-11024A83	27k
R406	06-11024A77	15k
R407, 408	06-11009E01	10, 1/4 W
R409	06-11024A65	4.7k
R410	06-11009E15	39, 1/4 W
R411	06-11024A65	4.7k
R412	06-11024A73	10k
R413	06-11024A33	220
R414, 415	06-11009E01	10, 1/4 W
R417	06-11024A49	1k
R418	06-11024A73	10k
R419	17-82350A14	.08 $\pm 20\%$ , 1 W
R500	06-11024A65	4.7k
R501	06-11024A25	100
R502, 503	06-11024A57	2.2k
R504	06-11024A25	100
R505	06-11024A65	4.7k
R506, 507	06-11024A57	2.2k
R508	06-11024A79	18k
R509	06-11024A65	4.7k
R510	06-11024A97	100k
R511	06-11024A89	47k
R512	06-11024A73	10k
R513	06-11024A81	22k
R514	06-11024A97	100k
R515	06-11024A65	4.7k
R516	06-11024A77	15k
R517	06-11024A73	10k
R518	06-11024A97	100k
R519	06-11024A65	4.7k
R520	06-11024A57	2.2k
R521	06-11024A61	3.3k
R522	06-11024A49	1k
R523	06-11024A65	4.7k
R524, 525	06-11024A89	47k
R526	06-11024A73	10k
R527	06-11009A43	560, 1/4 W
R528	06-11024A89	47k
R529	06-11024A65	4.7k
R530	06-11024A81	22k
R531	06-11024A89	47k
R532, 533	06-11024A81	22k
R534	06-11024A65	4.7k
R535	06-11024A73	10k
R536	06-11024A89	47k
R537, 538	06-11024A65	4.7k
R542	06-11024A95	82k
R543	06-11024A98	110k
R544	06-11024A97	100k
R545	06-11024A89	47k
R546, 547	06-11024A81	22k
R548	06-11024A25	100
R549	06-11024A49	1k
R550	06-11024A25	100k
R551, 552	06-11024A73	10k
RT100	06-80176D03	thermistor
T400	25-34083B03	thermistor
U300	51-80103E02	transformer
U301	51-30067C04	audio transformer
U302	51-33977M60	integrated circuit (see note)
U400	51-33629M02	CMOS UCS switch-capacitor filter
U500	51-80290J04	quad op amp
U503, 504	51-95133M01	variable gain pre-amp
U505	51-30067C05	bipolar op amp
U506	51-34561L42	microprocessor
VR500	48-83696E07	CMOS octal latch
Y300	48-80173D01	bi-FET op amp
Y500	48-80113K03	bipolar 2 to 4 line de-multiplexor
mechanical parts		
75-35295B01		crystal base pad
75-30144H01		vibration pad
03-10905A05		machine screw (M3 x 0.5 x 8)
04-84180C01		shoulder washer
14-83820M02		thermoconductor insulator
32-80219B01		gasket housing
01-80708T20		heat sink with Q400 and Q401
01-80740T26		handle and shield option, component side
01-80741T22		handle and shield option, solder side
07-80054D01		feedthru bracket
09-80269B03		28-pin IC socket, 3 used
09-80002K01		64-pin IC socket

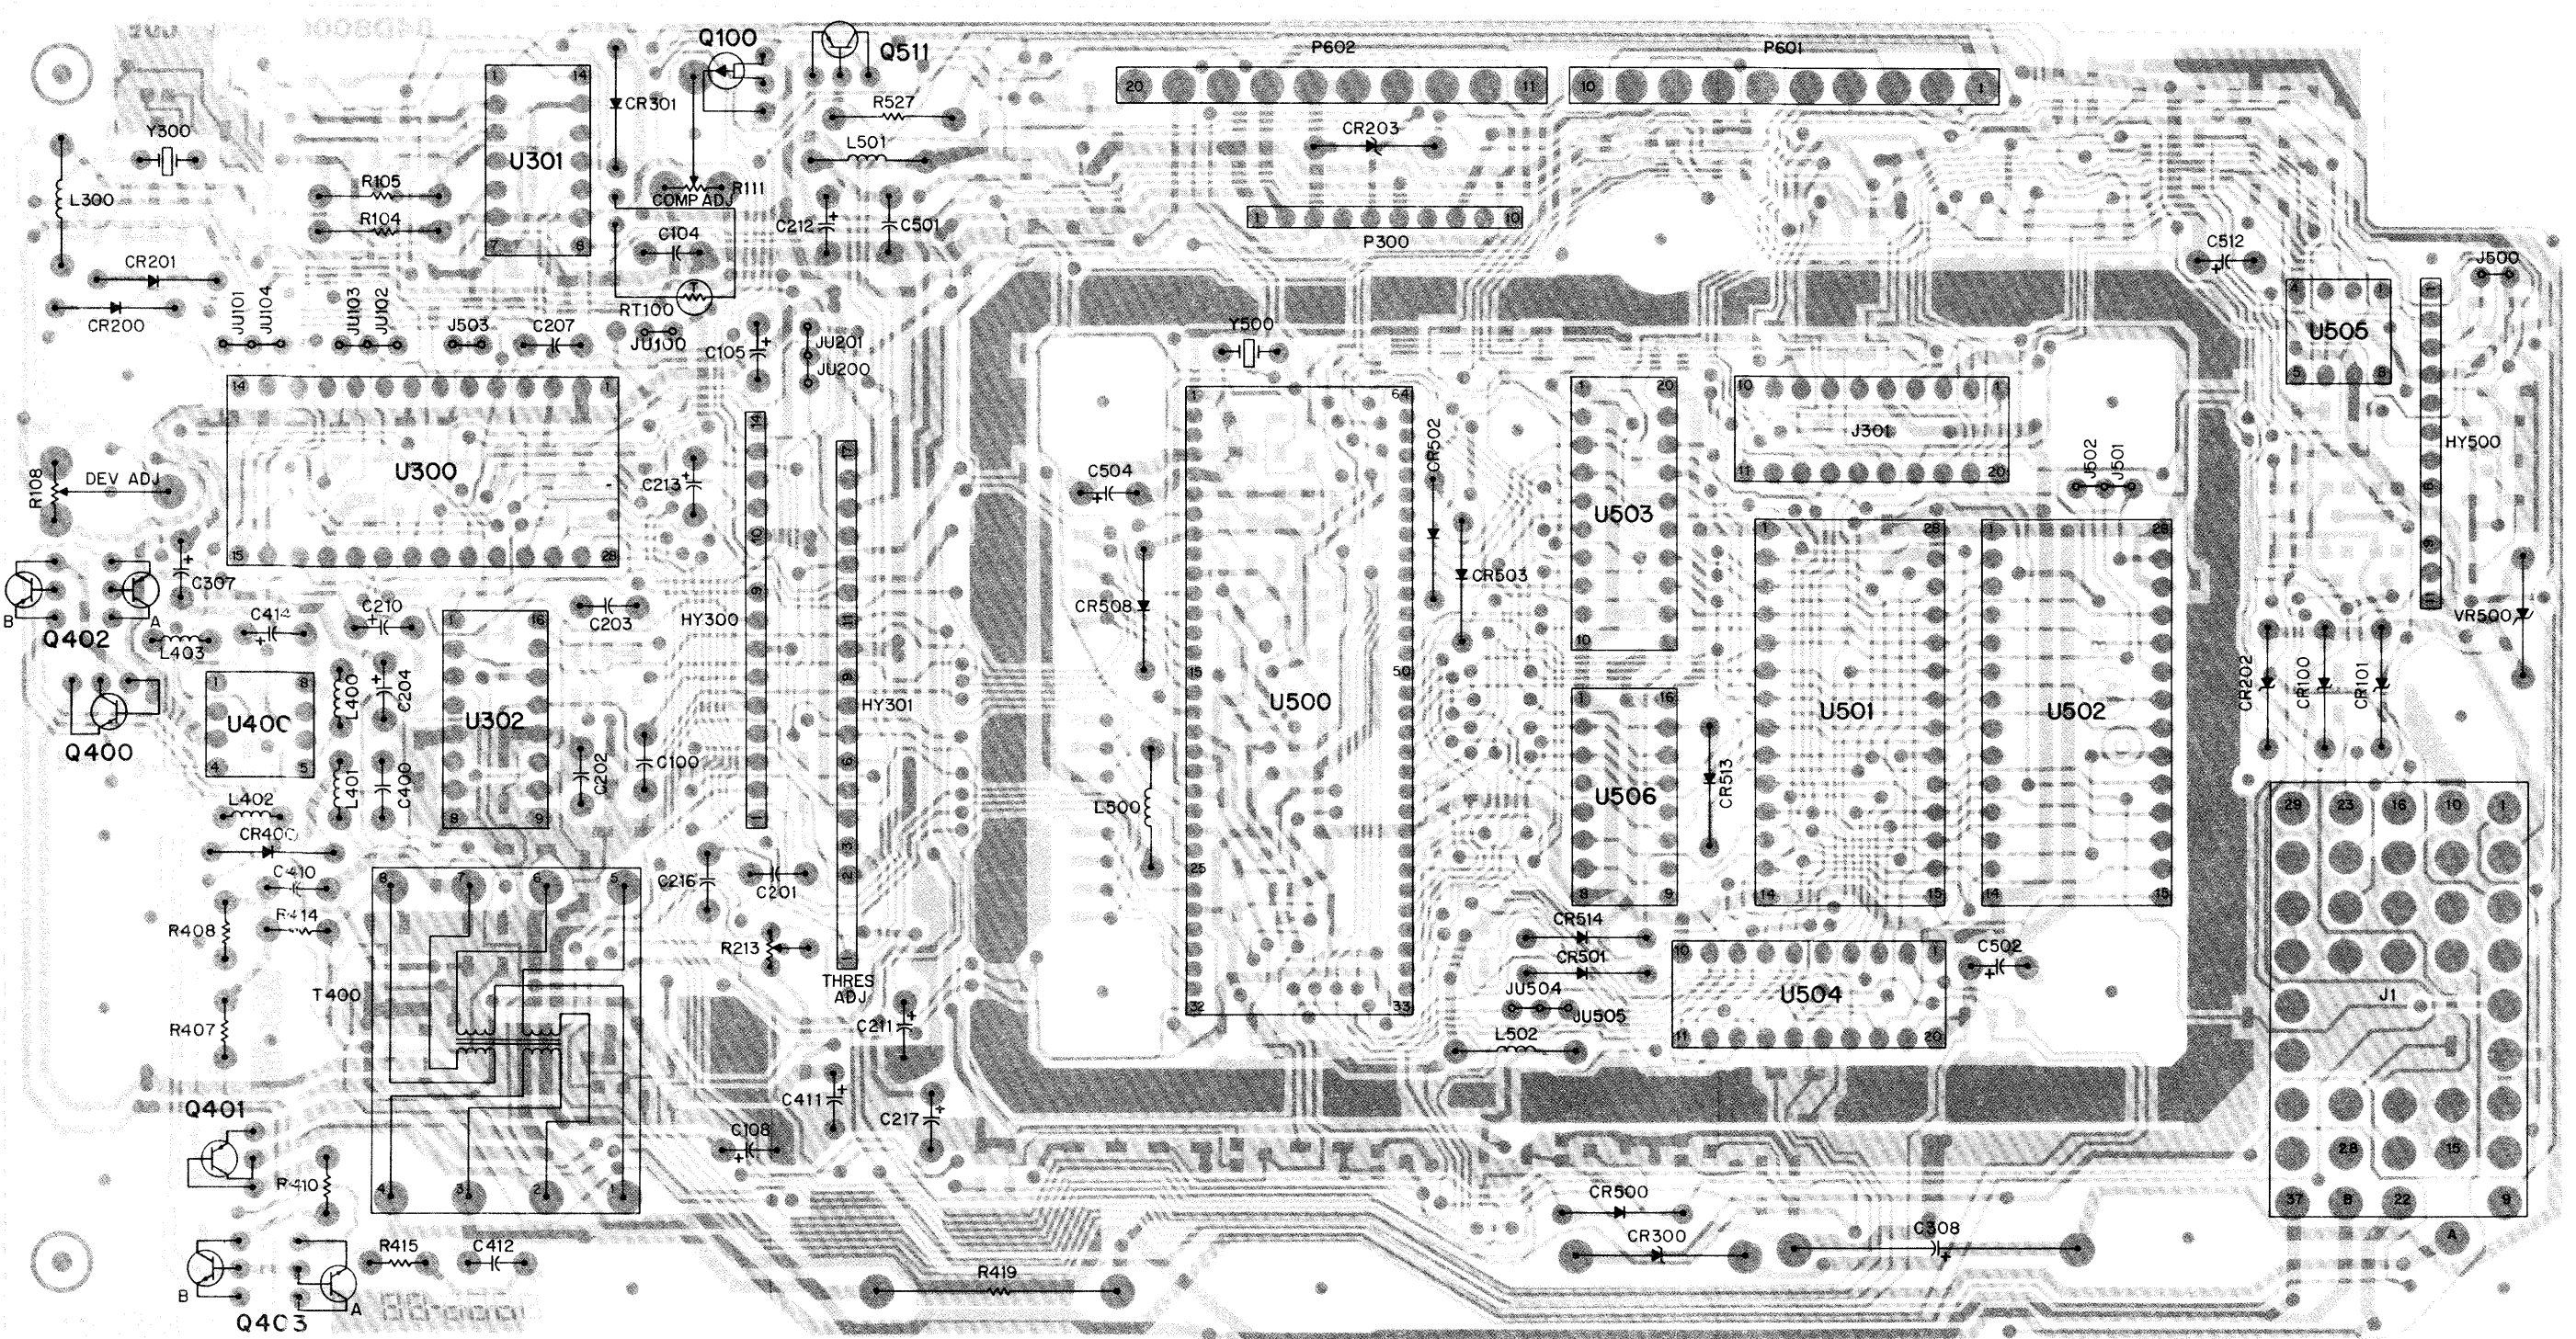4/12/87  
note: For best performance, order diodes, transistors, and integrated circuits by Motorola part number.


SHOWN FROM COMPONENT SIDE

SOLDER SIDE  
COMPONENT SIDE  
OVERLAYSchematic, Circuit Board Diagram  
and Parts List for HLN4925D  
Personality Board  
PW-2586-C  
(Sheet 3 of 4)

4/21/87

SHOWN FROM SOLDER SIDE


Schematic, Circuit Board Diagram  
and Parts List for HLN4925D  
Personality Board  
**PW-2586-C**  
(Sheet 4 of 4)  
4/21/87

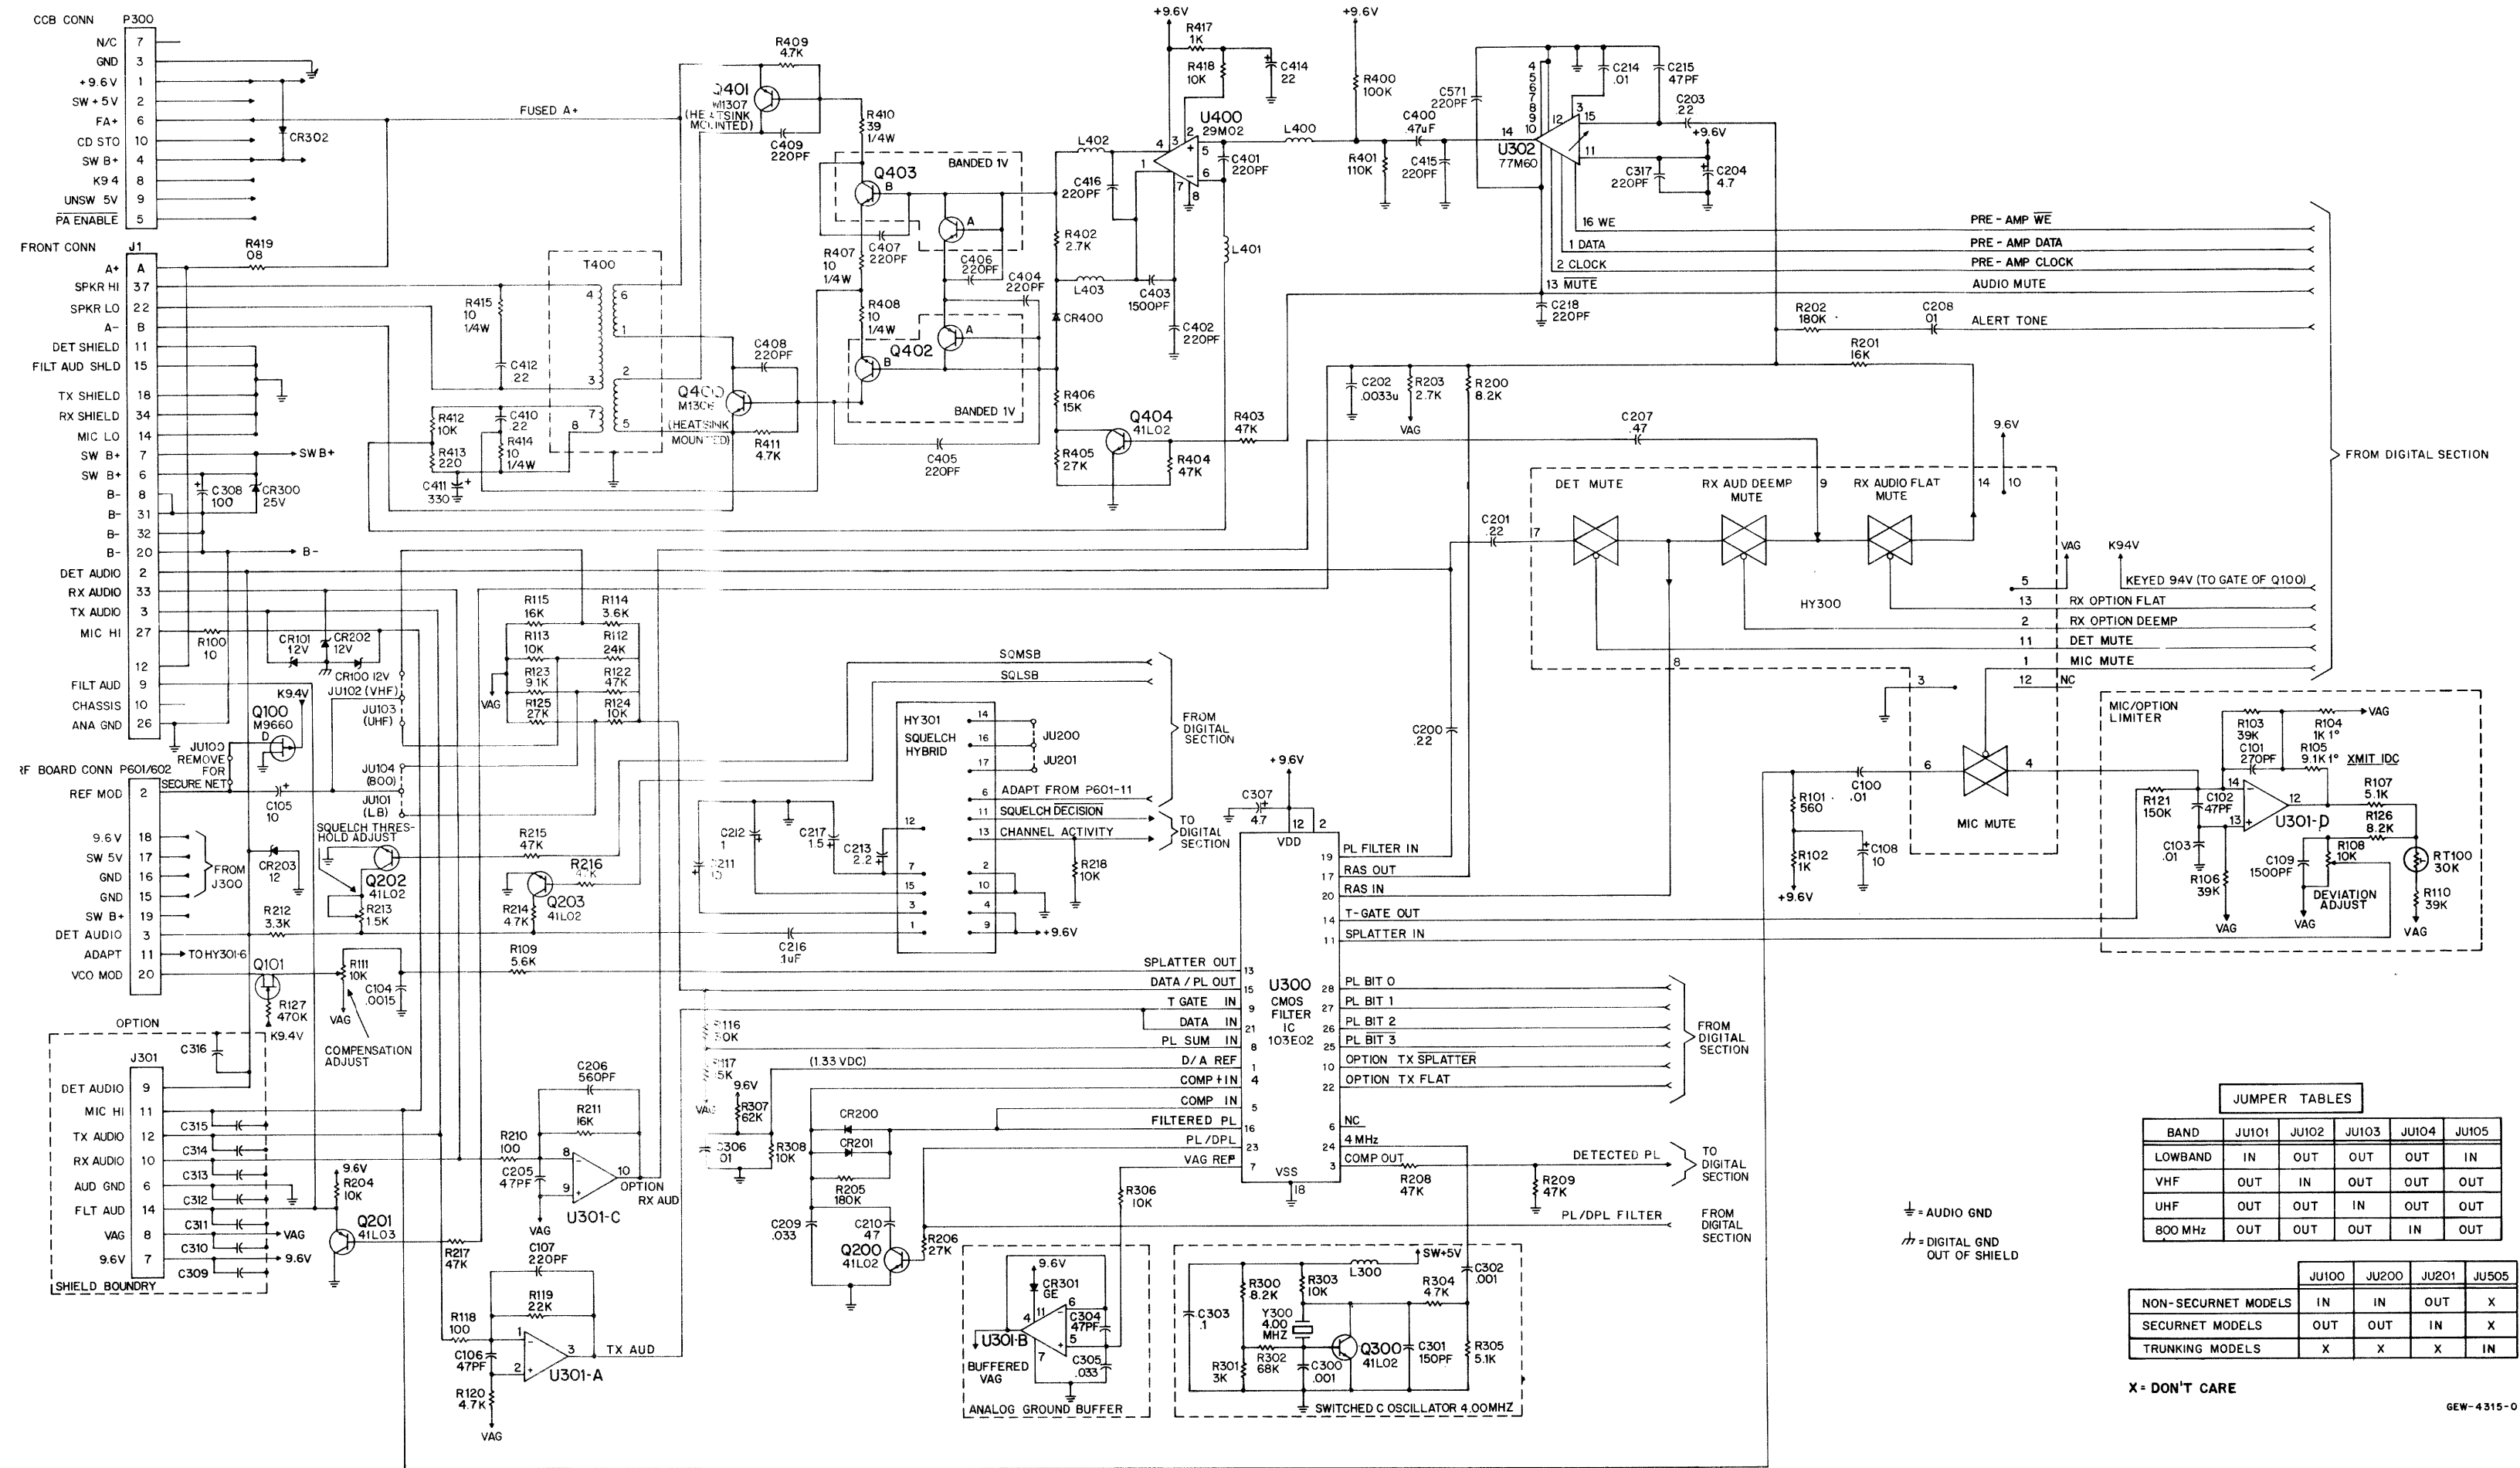

**X = DON'T CARE**

GEW-4315-0

## WATCHDOG TIMER HYBRID

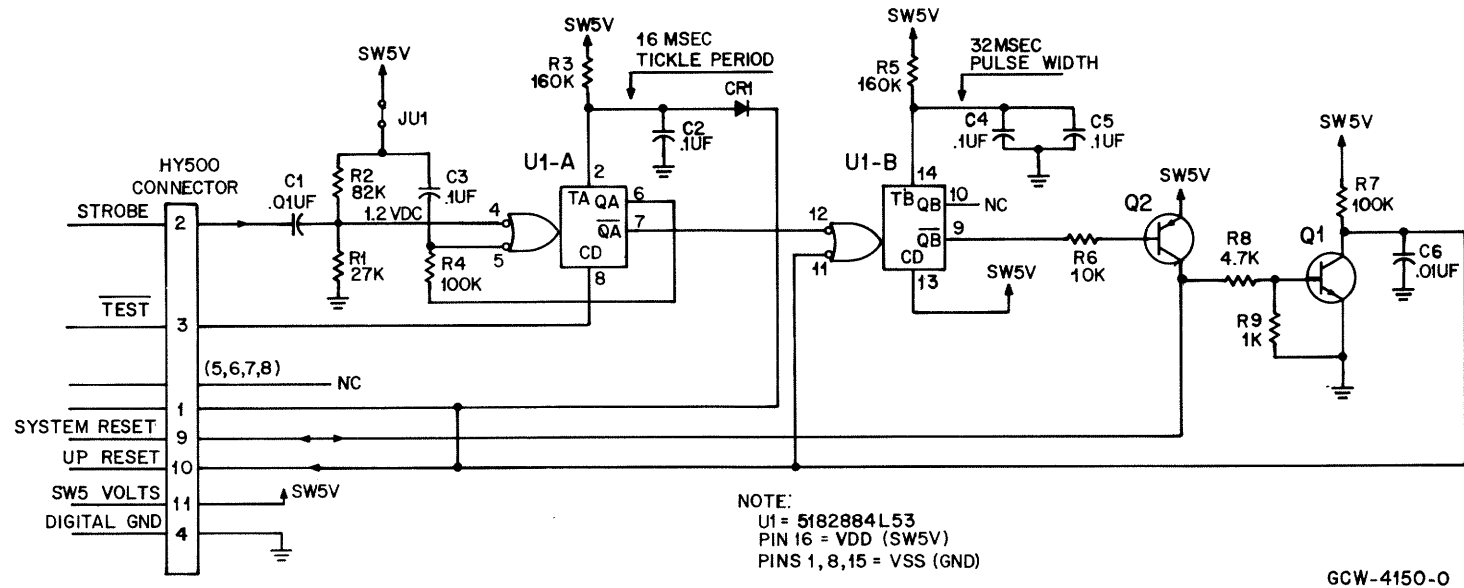


Watchdog Timer p/o HLN4925D Personality Board

MXW-4291-0

MOTOROLA REFERENCE	PART NUMBER	DESCRIPTION
HY500	01-80739T60	includes the following
C1	21-11032A21	capacitor, fixed $\mu\text{F}$ , $\pm 5\%$ , 50V unless otherwise stated
C2	21-84547A24	.1 $\pm 20\%$ , 25V
C3	21-11032B13	.1 $\pm 20\%$ , electrolytic
C4,5	21-84547A24	.1 $\pm 20\%$ , 25V
C6	21-11032A21	.01 $\pm 10\%$
CR1	48-80236E08	diode (see note) silicon
JU1	06-11024B23	jumper 0 ohm
Q1	48-80141L04	transistor (see note) NPN
Q2	48-80141L03	transistor (see note) PNP
U1	51-82884L53	integrated circuit (see note) monostable multivibrator

note: For best performance, order diodes, transistors, and integrated-circuit devices by Motorola part number.

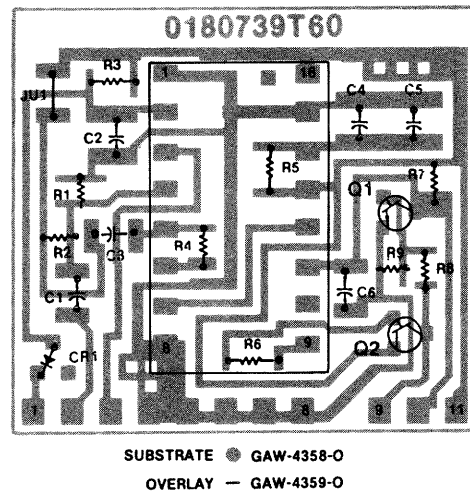


## SQUELCH HYBRID

Squelch Hybrid p/o HLN4925D Personality Board


MXW-4290-0

MOTOROLA REFERENCE	PART NUMBER	DESCRIPTION
HY301	01-80740T15	includes the following
C1	21-11031A61	capacitor, fixed $\mu\text{F}$ , $\pm 5\%$ , 50V unless otherwise stated
C2	21-11031A47	220 pF
C3	21-11031A37	82 pF
C4	21-11032A21	.01 $\pm 10\%$
C5	21-11032A13	.0022
C6	21-11031A47	220 pF
C7	21-11032A17	.0047 $\pm 10\%$
C8	21-11032A21	.01
CR1-6	48-80236E08	diode (see note) silicon
R6	06-11024A33	220
R9	06-11024A89	47k
R12	06-11024A33	220
R16	06-11024A33	220
R25	06-11024B20	820k
R31	06-11024A73	10k
Q1,2	48-80141L04	transistor (see note) NPN
Q3	48-80141L01	transistor (see note) PNP
U1	51-80067C06	integrated circuit (see note) quad opamp


note: For best performance, order diodes, transistors, and integrated-circuit devices by Motorola part number.

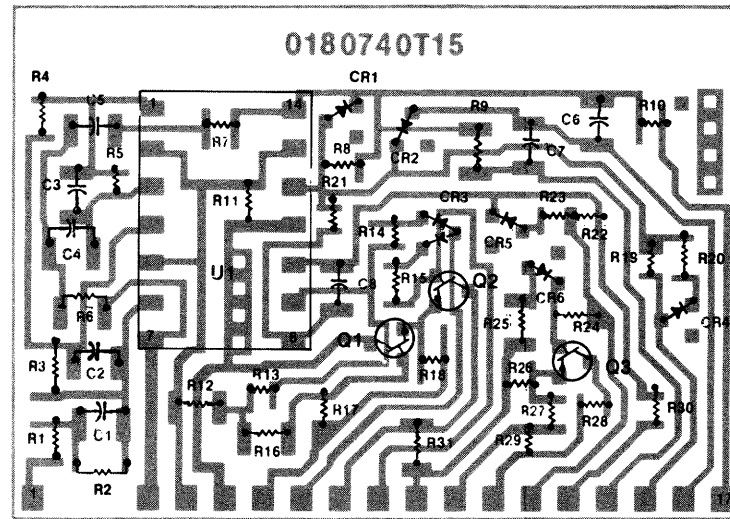

HY301 CONNECTOR

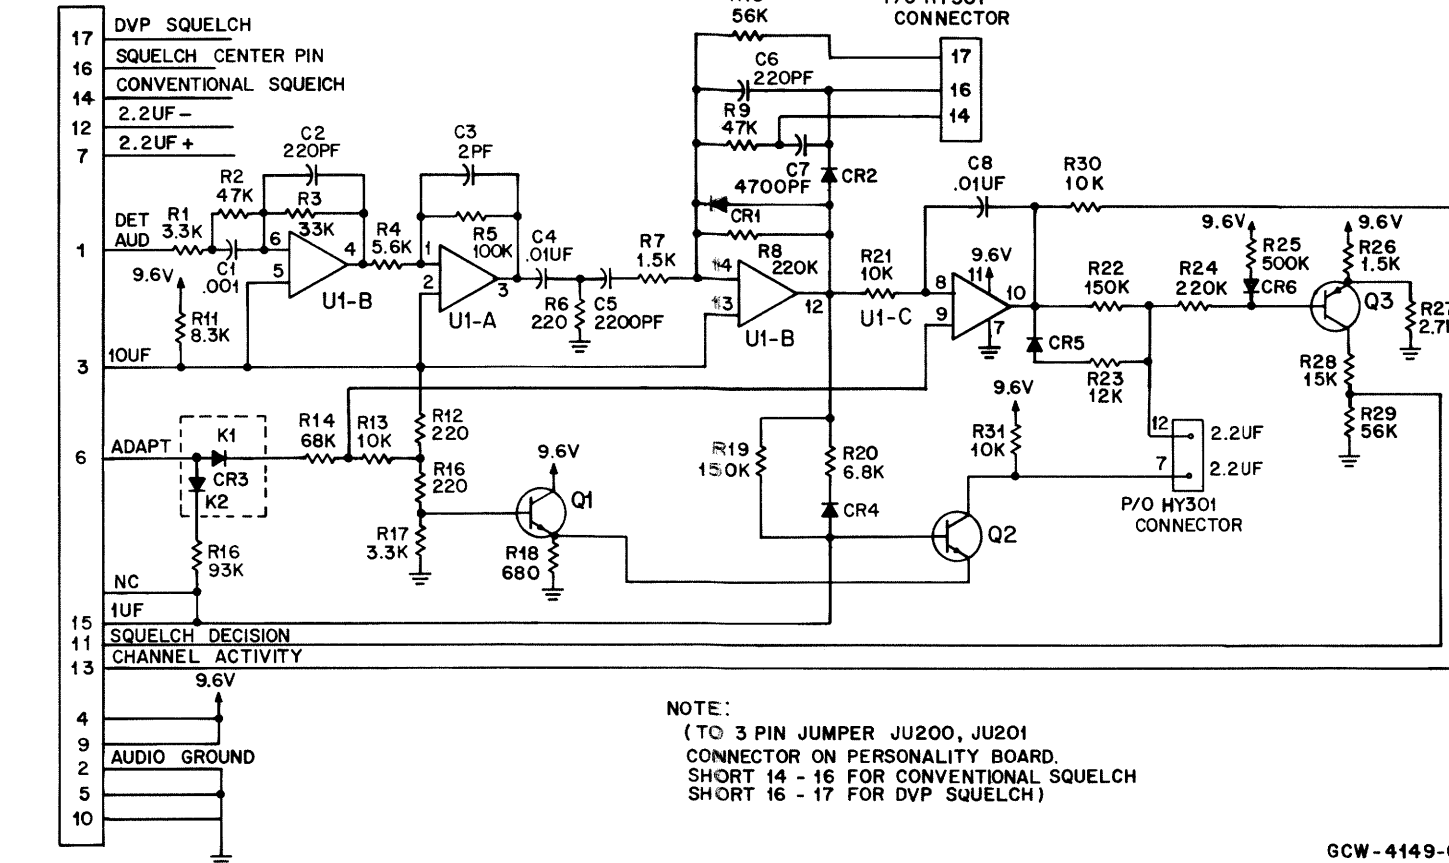

## TRANSMISSION GATE HYBRID

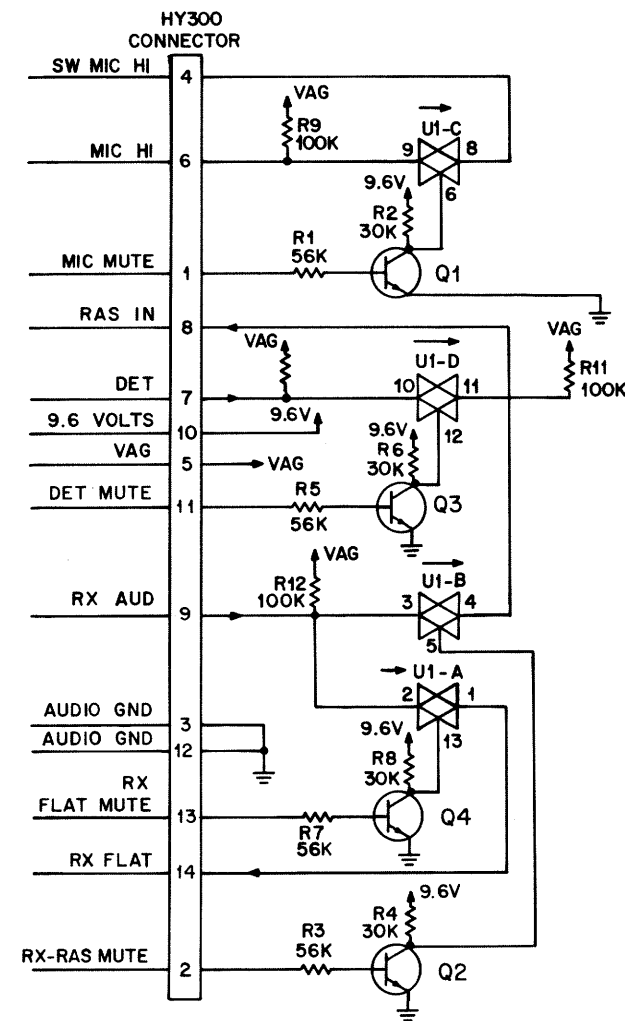


## parts list

Transmission Gate p/o HLN4925D Personality Board

MXW-4289-0

MOTOROLA REFERENCE	PART NUMBER	DESCRIPTION
HY300	01-80739T59	includes the following
R7	06-11024A91	resistor, fixed ohm, $\pm 5\%$ , 1/8 watt unless otherwise stated 56k
Q1-4	51-80141L02	transistor (see note) NPN
U1	51-80073C05	integrated circuit (see note) analog t-gate

note: For best performance, order diodes, transistors, and integrated-circuit devices by Motorola part number.

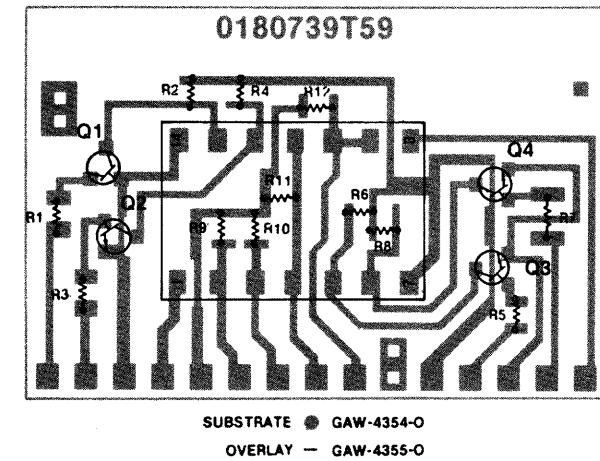

Schematics, Circuit Board Diagrams,  
and Parts Lists for the Transmission Gate,  
Squelch, and Watchdog Timer Hybrids  
on the HLN4925D Personality Board  
**PW-4350-0**

4/21/87



**MOTOROLA**  
Mobile Products Division

# instruction manual revision

**supersedes WMR-0317**

## GENERAL

This revision consists of changes that have occurred since your manual was printed. Please correct your manual accordingly.

## INSTRUCTION MANUALS AFFECTED

68P80100W94-O

*SYNTOR X 9000*  
High Band and UHF Radios

68P80101W62-O

*SYNTOR X 9000E*  
Dual Operation Radio System  
806-870 MHz

## REVISIONS

For the 68P80100W94-O manual:

1. Perform WMR-0224 before completing the following steps.
2. Remove and discard model charts MXW-2446-B, MXW-2447-B, MXW-2451-B, MXW-2452-B, MXW-2663-A, and MXW-2664-A (inserted by WMR-0224).
3. Insert the attached model charts, MXW-2446-C, MXW-2447-C, MXW-2451-C, MXW-2452-C, MXW-2663-B, and MXW-2664-B.
4. Remove and discard fold-out pages PW-2587-A, sheets 1 of 2 and 2 of 2, PEW-2767-O and PEW-2766-A.
5. Insert the attached fold-out pages PW-2587-B, PW-5194-O, PW-2767-A, and PW-2766-B. This updates the section for VHF, UHF, and 800 MHz radios.

For the 68P80101W62-O manual:

1. In the Common Circuits Board section of your manual insert the attached Section Contents page, T10005-O in front of the first page of text.
2. Remove and discard fold-out page PEW-2766-A, then insert the attached fold-out page PW-2766-B.

[illegible]

● = ONE ITEM SUPPLIED  
■ = INDICATES BREAKDOWN IN SEPARATE CHART

**MXW-2446-C**

**CODE:    ●    = ONE ITEM SUPPLIED**

\*USED WITH W12 OPTION (PREAMP MODELS)

### Range 5: 494–512 MHz

● = ONE ITEM SUPPLIED

**MXW-2451-C**

**CODE:    ●    = ONE ITEM SUPPLIED**

\*USED WITH W12 OPTION (PREAMP MODELS)

# **Model Chart for SYNTOR X 9000 Conventional 800-MHz Radio**

**CODE:**

- = ONE ITEM SUPPLIED
- = INDICATES BREAKDOWN IN SEPARATE CHART

MODEL					DESCRIPTION				
					T45KEJ7J04AK				CONVENTIONAL 800-MHz, 35-WATT
●					■	HUF1029C	UNIFIED CHASSIS, PREAMP		
●						HCN1033C	CONTROL UNIT		
●						HKN4241A	POWER CABLE, 17' NEGATIVE-GROUND		
●						HLN4921A	TRUNNION		
●						HLN4111A	INSTALLATION KIT		
●						HLN4243A	BOTTOM COVER		
●						HLN4262A	TUNING TOOL		
●						HLN4263A	TOP COVER		
●						HLN4666A	MOUNTING TRAY		
●						HMN1031A	SYNTOR X 9000 MICROPHONE		
●						HSN4018A	SYNTOR X 9000 SPEAKER		
●						HLN4978A	NAMEPLATE		
●						HBN4002A	PACKING		
●						HLN4952A	FUSE KIT FOR GREEN AND ORANGE LEADS		
●						HLN5066A	CHANNEL SCAN PUSHBUTTON		
●						HLN5027A	SYNTOR X 9000 SOFTWARE		
●						HLN5028A	SYNTOR X 9000 EEPROM		
●						TAF6041A	ONE-QUARTER WAVE ANTENNA		
●						HKN4051A	CABLE AND FUSE		
●						HLN4983A	SYNTOR X 9000 BASIC PUSHBUTTONS		
●						HLN5064A	SYNTOR X 9000 TOOLS		
●						HLN5095A	BLANK PUSHBUTTON		
●						HLN5096A	BLANK PLUG		
●						HLN5105A	HANDLE AND SHIELD		

# **Model Chart for SYNTOR X 9000 Conventional 800-MHz Radio Unified Chassis**

**CODE:**

● = ONE ITEM SUPPLIED

MODEL					DESCRIPTION				
HUF1029C					UNIFIED CHASSIS, 800-MHz				
●					ITEM	DESCRIPTION			
●					HLN1253A	INTERNAL CASTING			
●					HLN5356A	800 VCO TALKAROUND			
●					TRN8868A	HYBRID PREAMP			
●					TRN8869A	VCO BUFFER			
●					TRN8871D	HYBRID MIXER			
●					TRN8872A	VCO INTERCONNECT			
●					TRN8873B	INTERNAL CASTING HARDWARE			
●					HLN4246A	CHASSIS HARDWARE			
●					HLN4925D	PERSONALITY BOARD			
●					HKN4155A	35-WATT INTERCONNECT CABLE			
●					HLN4217A	PA FEEDTHRU PLATE			
●					HRN4000B	RF BOARD			
●					HLN4971C	COMMON CIRCUITS BOARD			
●					TRN4734A	ANTENNA SWITCH			
●					TRN8856A	HYBRID DIRECTIONAL COUPLER			
●					TRN8858A	PA HARDWARE			
●					TRN8857B	BUSS WIRES			
●					HLN4259A	FRONT HARDWARE			
●					TRN8853A	HYBRID DRIVER SUBSTRATE			
●					TRN8852A	HYBRID PREDRIVER SUBSTRATE			
●					TRN8851A	HYBRID IPA			
●					TRN8854A	FINAL POWER AMPLIFIER			
●					TRN8850A	HYBRID HARMONIC FILTER			
●					TRN8855B	METERING BOARD			
●					HLN4994A	TRANSFORMER BRACKET KIT			

parts list

HLN4906B SYNTOR X 9000  
VHF Common Circuits Board

MXW-2485-A


REFERENCE SYMBOL	MOTOROLA PART NO.	DESCRIPTION
<b>capacitor, fixed uF, ±5%, 63V</b> (unless otherwise stated)		
C900	08-11051A07	.01
C901,902	21-11015B05	220 pF ±10% 100V
C903	08-11051A07	.01
C904	08-11051A09	.022
C905	23-11013D05	4.7 ±20% 20V, tantalum
C906,907	21-11015B05	220 pF ±10% 100V
C908	08-11044A34	.018
C909	08-11051A05	.0047
C910	23-11013F59	2.2 ±20% 35V, tantalum
C1000	08-11051A13	.1
C1001,1002	21-11015B05	220 pF ±10% 100V
C1003	23-11019A39	47 ±20% 16V, electrolytic
C1004	08-11051A10	.033
C1005	21-11014B47	82 pF 100V
C1006	21-11015B05	220 pF ±10% 100V
C1007	23-84538G29	47 ±20% 10V, tantalum
C1008	23-11048C11	47 ±20% 35V, electrolytic
C1009	23-84538G29	47 ±20% 10V, tantalum
C1010	21-11015B05	220 pF ±10% 100V
<b>diode</b> (see note)		
CR900,901	48-83654H01	silicon
CR1000-1007	48-83654H01	silicon
<b>hybrid</b> (see note)		
HY1000	01-80715D03	regulator
<b>connector receptacle</b>		
J950	28-84324M02	3 contact
J951	28-84647L05	7 pin
J952	09-84207B01	7 contact
<b>RF coil</b>		
L900	24-82835G08	2.6 uH, red blue gold
<b>transistor</b> (see note)		
Q900	48-00869642	NPN
Q902,903	48-00869643	PNP
Q904,905	48-00869642	NPN
Q906	48-00869649	PNP
Q1000	48-84413L05	PNP
Q1001	48-00869640	NPN
Q1002	48-00869649	PNP
Q1003,1004	48-00869643	PNP
Q1005	48-00869642	NPN
Q1006	48-84413L10	NPN, Darlington
<b>resistor, fixed ohm, ±5%, 1/4 watt</b> (unless otherwise stated)		
R900	06-11009A67	5.6k
R901	06-11009A66	5.1k
R902	06-11009A81	22k
R903	06-11009A35	270
R904	06-11009A89	47k
R905	06-11009A05	15
R906	06-11009A89	47k
R907	06-11009A23	82
R908	18-80087E08	10k potentiometer
R909	06-11009A85	33k

MXW-2485-A (2)


REFERENCE SYMBOL	MOTOROLA PART NO.	DESCRIPTION
R910	06-11009A49	1k
R911	06-11009A85	33k
R912	06-11009A71	8.2k
R913	06-11009A39	390
R914	06-11009A25	100
R915	06-11009A29	150
R916	06-11009A43	560
R917	06-11009A99	120k
R918,919	06-11009A49	1k
R920	06-11009A27	120
R921	06-11009A63	3.9k
R922	06-11009A65	4.7k
R923	06-11009A33	220
R924	06-11009A65	4.7k
R925	06-11009A35	270
R926	06-11009A59	2.7k
R927	06-11009A87	39k
R928	06-11009A33	220
R929	06-11009A71	8.2k
R930	06-11009A81	22k
R931	06-11009A63	3.9k
R932	18-80087E07	5k potentiometer
R933	06-11009A79	18k
R934	06-11009A51	1.2k
R935	06-11009A65	4.7k
R936	06-11009A89	47k
R1000	06-11009B14	470k
R1001	06-11009B06	220k
R1002	06-11009A49	1k
R1003,1004	06-11009A35	270
R1005	06-11045A20	62 1/2W
R1006	06-11009A43	560
R1007	06-11009A66	5.1k
R1008	06-11009A88	43k
R1009	06-11009A65	4.7k
R1010	06-11009A66	5.1k
R1011	06-11009A65	4.7k
R1012	06-11009A55	1.8k
R1013	06-11009A66	5.1k
R1014	06-11009A65	4.7k
R1015	06-11009A35	270
R1016	06-11009A45	680
R1017	06-11009A65	4.7k
R1018,1019	06-11009A59	2.7k
R1020	06-11009A35	270
R1021,1022	06-80037G07	1.8 1/2W
R1023	06-11009A65	4.7k
R1024,1025	06-11009A73	10k
<b>integrated circuit</b> (see note)		
U900	51-80067C03	dual opamp
U1000	51-80067C06	opamp
U1001	51-80068C02	voltage regulator
<b>voltage regulator</b> (see note)		
VR1000	48-82256C53	18V

note: For best performance, order diodes, transistors, and integrated-circuit devices by Motorola part number.

01/06/88

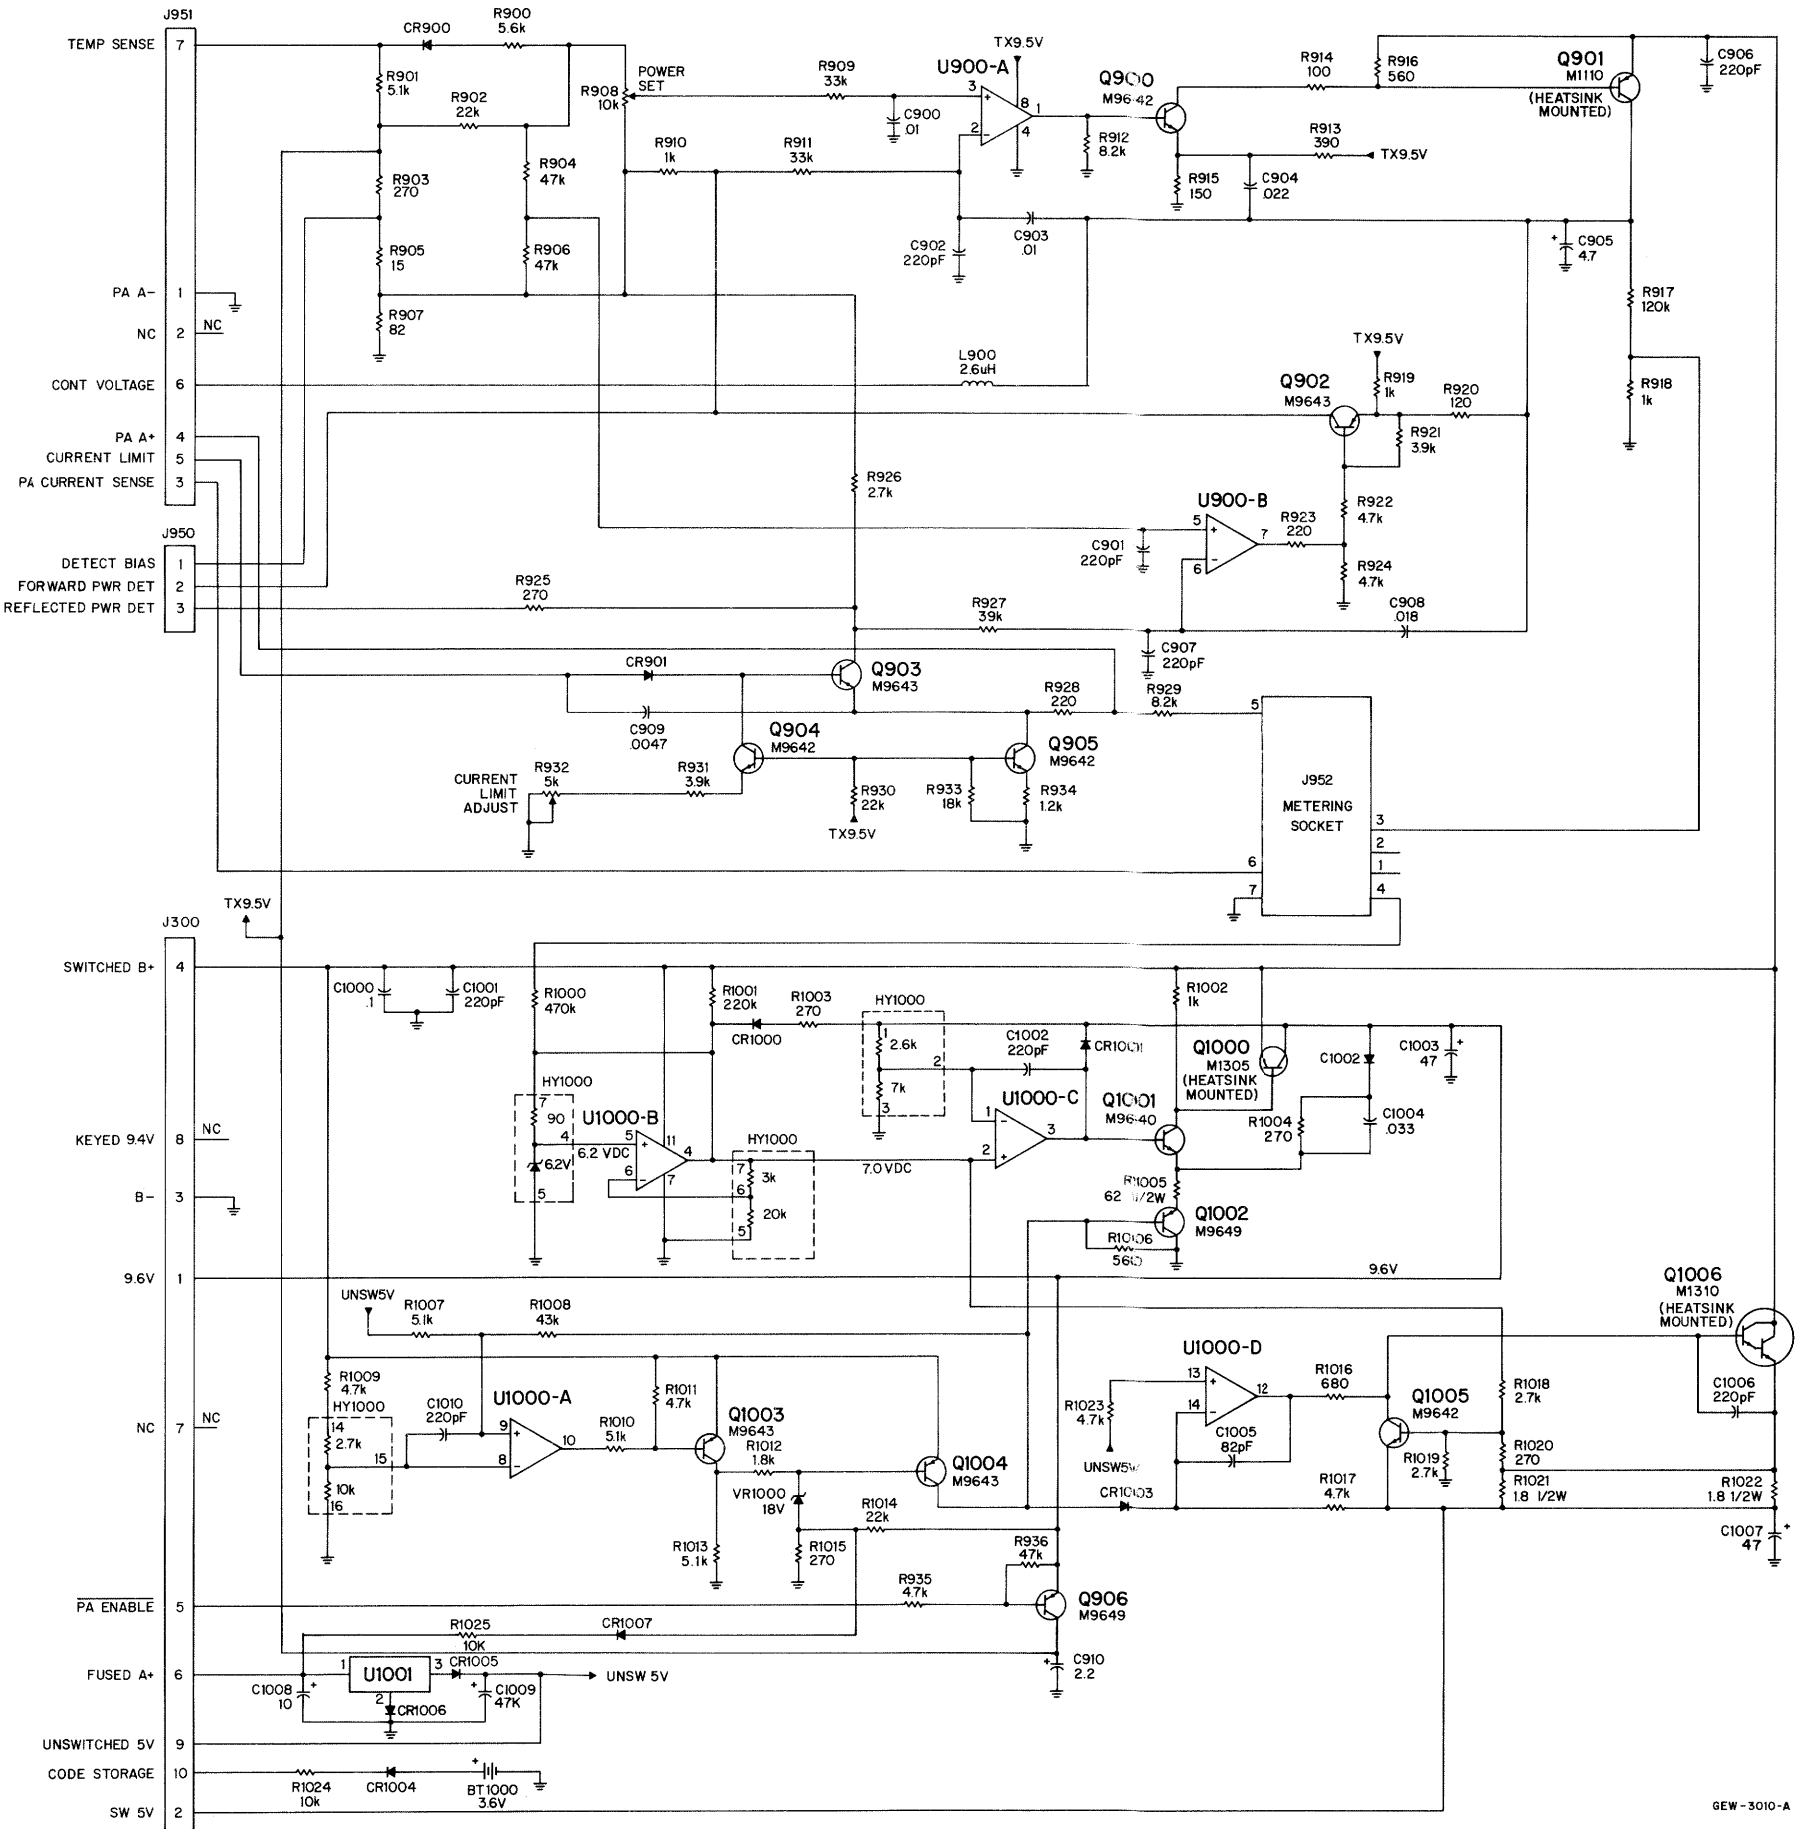


VHF COMMON CIRCUIT BOARD

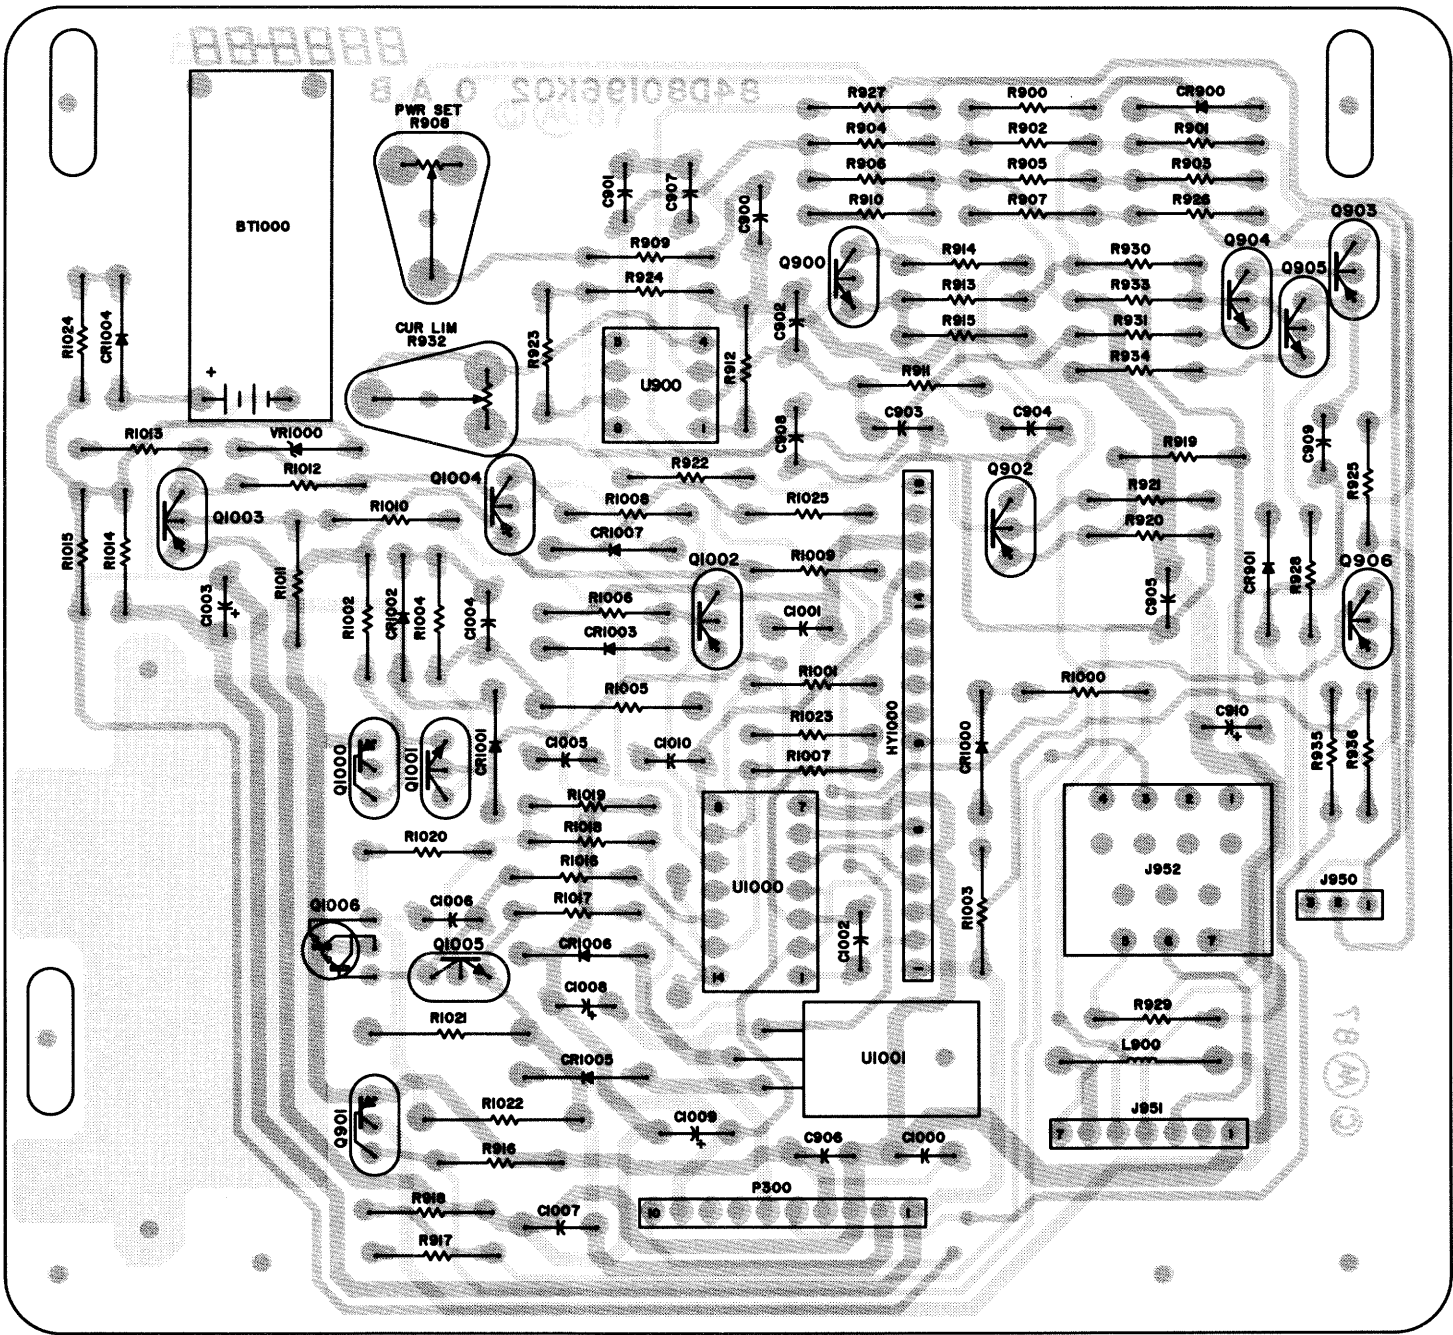


SOLDER SIDE  
COMPONENT SIDE  
OVERLAY

6AW-2504-0  
6AW-2505-0  
6XW-2507-0

# UHF COMMON CIRCUIT BOARD

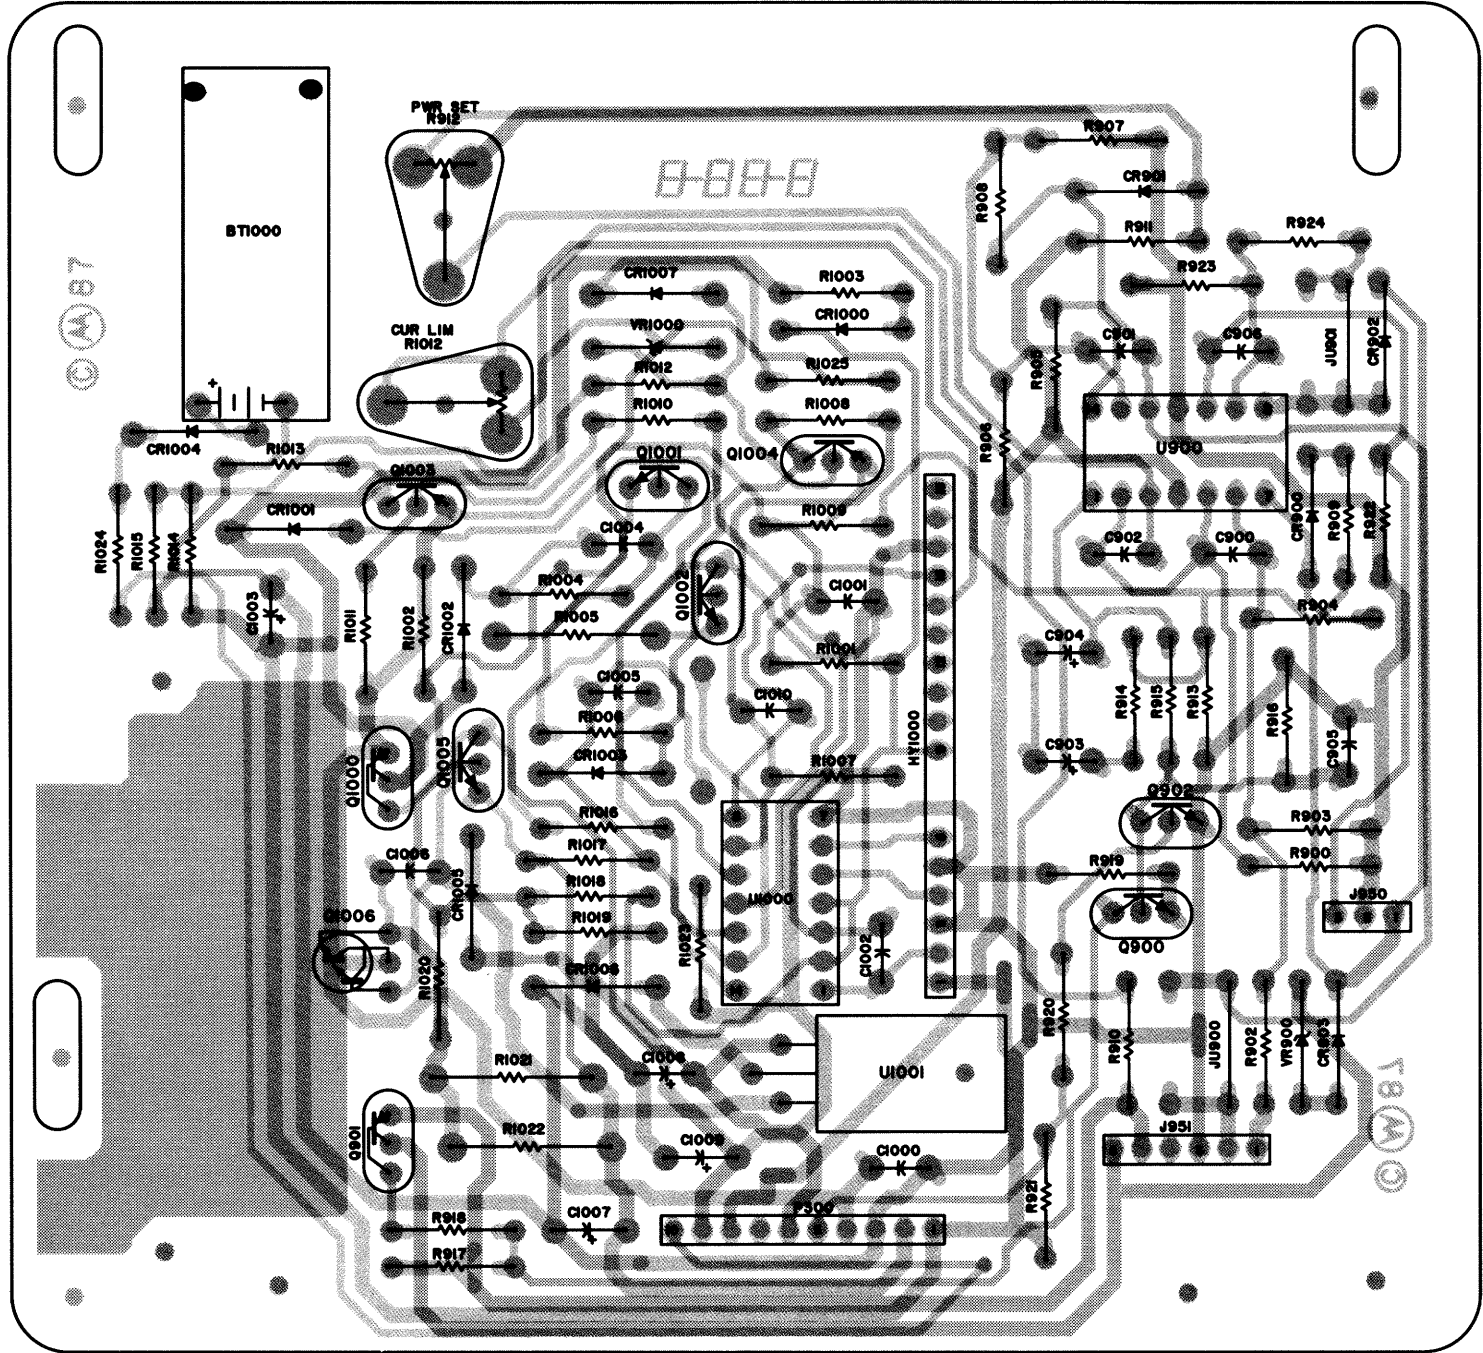

SOLDER SIDE 6AW-2508-0  
COMPONENT SIDE 6AW-2509-0  
OVERLAY 6XW-25HWO1-0

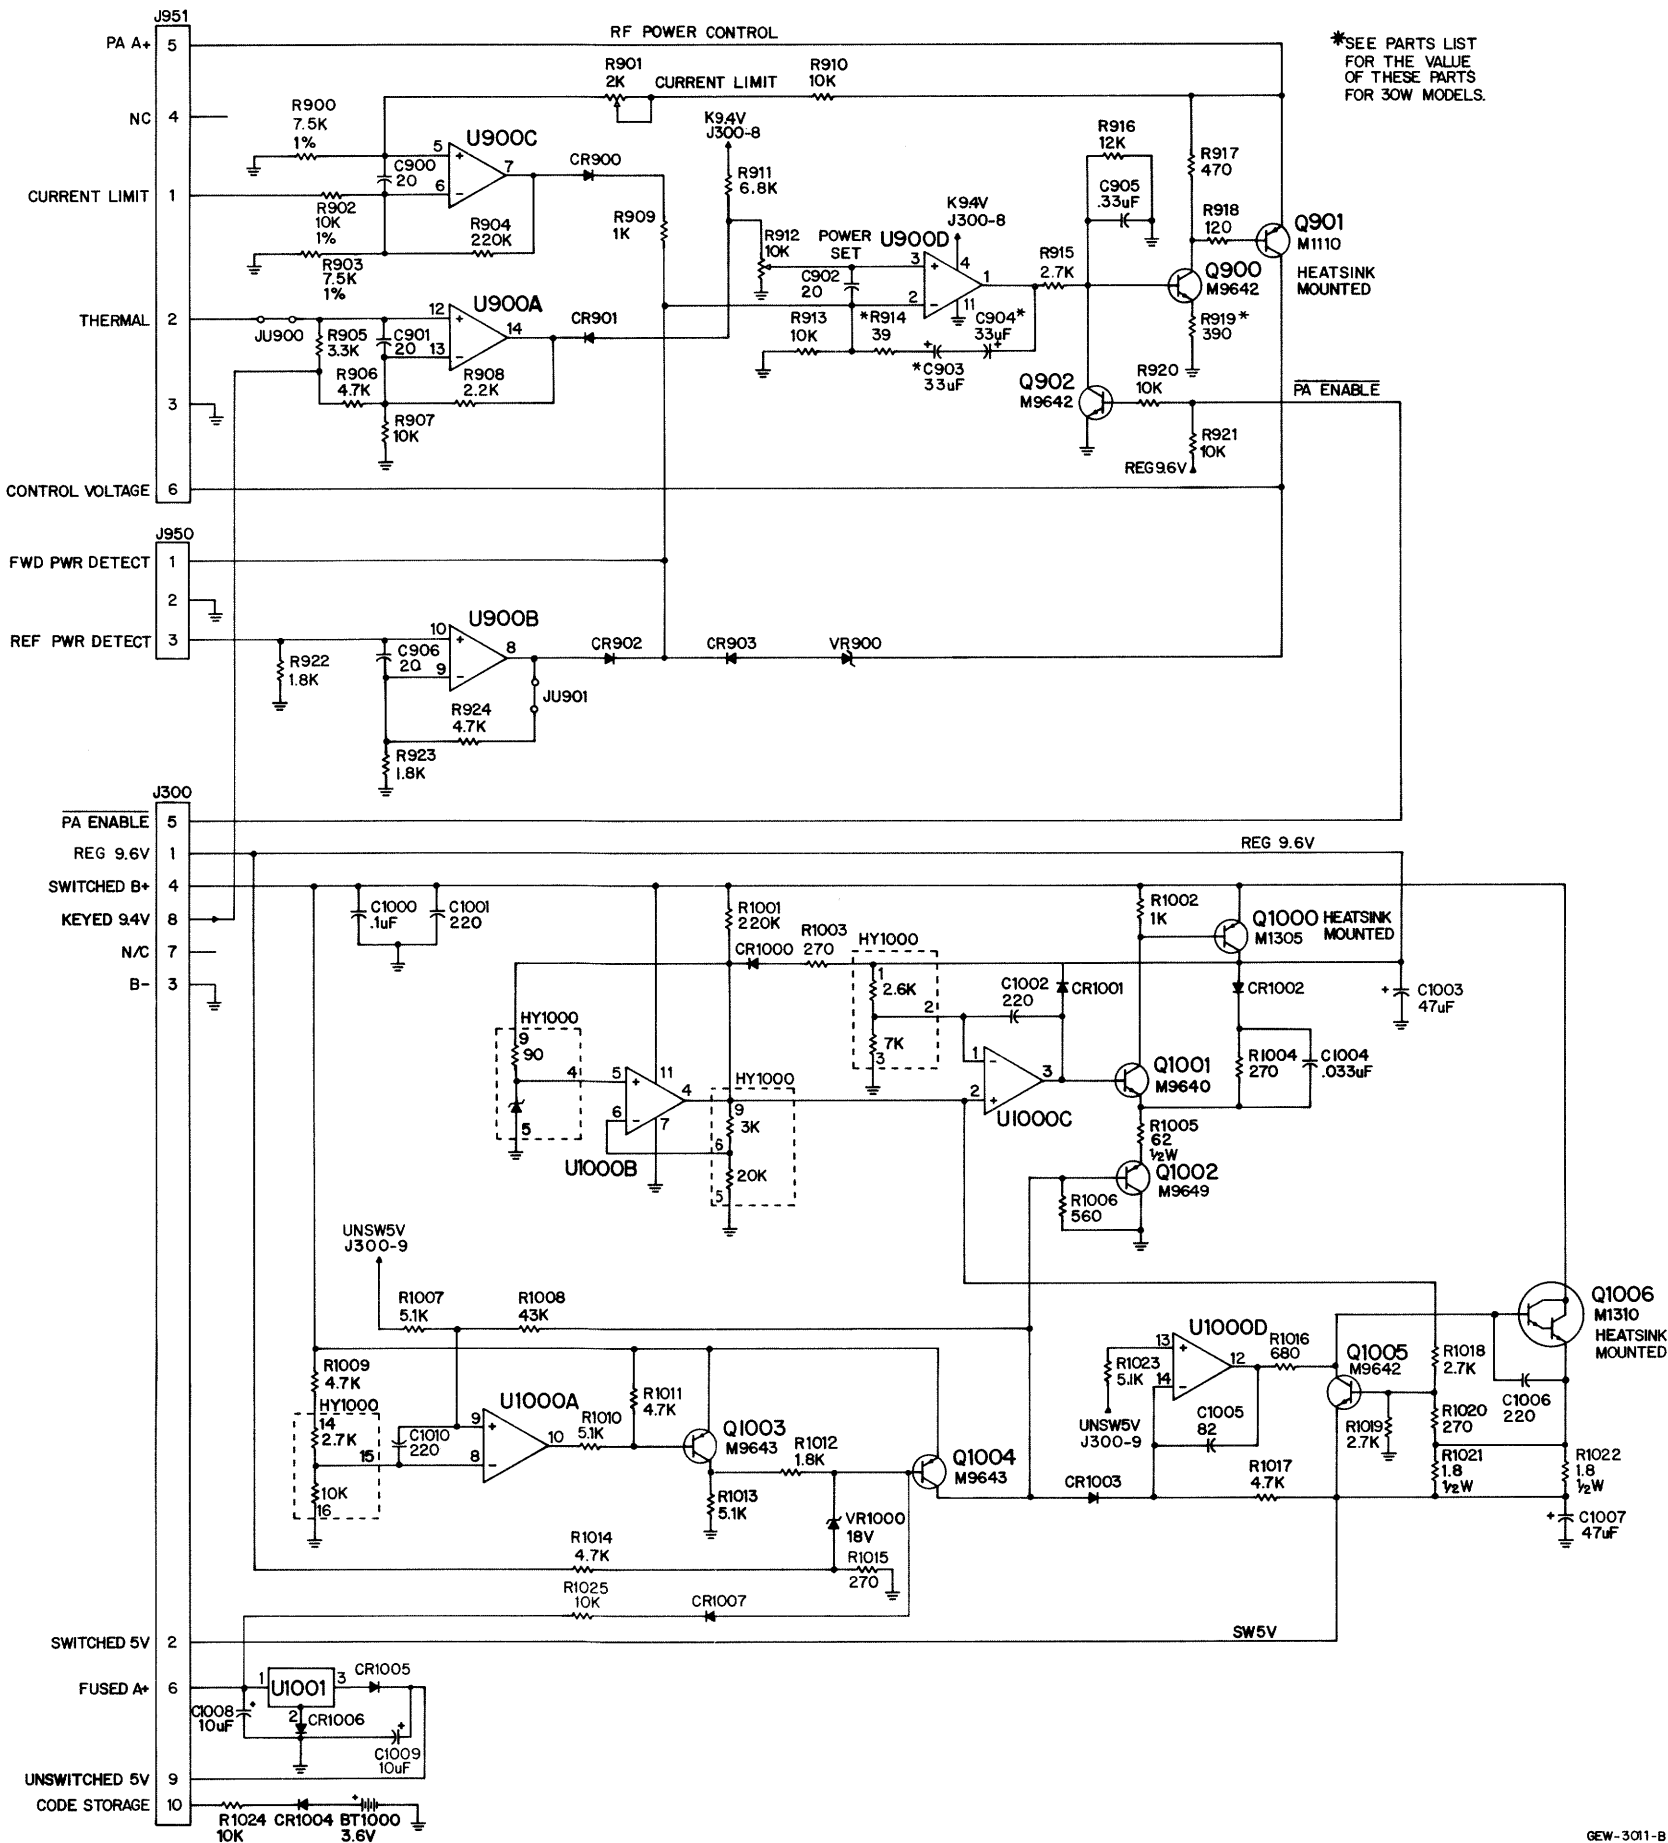

## parts list

### HLN4905B SYNTOR X 9000 UHF Common Circuits Board

REFERENCE SYMBOL	MOTOROLA PART NO.	DESCRIPTION
<b>capacitor, fixed uF, ±5%, 100V</b> (unless otherwise stated)		
C900-902	21-11014H32	20 pF
C903,904	23-11013B11	33 ±10% 10V, tantalum
C905	08-11051A16	33 63V
C906	21-11014H32	20 pF
C1000	08-11051A13	.1 63V
C1001,1002	21-11015B05	220 pF ±10%
C1003	23-11019A39	47 ±20% 16V, electrolytic
C1004	08-11051A10	.033 63V
C1005	21-11014B47	82 pF
C1006	21-11015B05	220 pF ±10%
C1007	23-84538G29	47 ±20% 10V, tantalum
C1008	23-11048C11	10 ±20% 35V, electrolytic
C1009	23-84538G29	47 ±20% 10V, tantalum
C1010	21-11015B05	220 pF ±10%

**diode** (see note)  
CR900-903 48-83654H01 silicon  
CR1000-1007 48-83654H01 silicon

**hybrid** (see note)  
HY1000 01-80715D03 regulator

**connector receptacle**  
J950 28-84324M02 3 contact  
J951 28-84647L04 6 pin

**jumper**  
JU900,901 06-11009B23 0 ohm

**transistor** (see note)  
Q900 48-00869642 NPN  
Q902 48-00869642 NPN  
Q1000 48-84413L05 PNP  
Q1001 48-00869640 NPN  
Q1002 48-00869649 NPN  
Q1003,1004 48-00869643 PNP  
Q1005 48-00869642 NPN  
Q1006 48-84413L10 NPN, Darlington

**resistor, fixed ohm, ±5%, 1/4 watt** (unless otherwise stated)  
R900 06-11049C79 7.5k ±1%  
R901 18-80087E05 2k potentiometer  
R902 06-11049C91 10k ±1%  
R903 06-11049C79 7.5k ±1%  
R904 06-11009B06 220k  
R905 06-11009A61 3.3k  
R906 06-11009A65 4.7k

MXW-2484-A (2)

REFERENCE SYMBOL	MOTOROLA PART NO.	DESCRIPTION
R907	06-11009A73	10k
R908	06-11009A57	2.2k
R909	06-11009A49	1k
R910	06-11049C91	10k ±1%
R911	06-11009A69	6.8k
R912	18-80087E08	10k potentiometer
R913	06-11009A73	10k
R914	06-11009A15	39
R915	06-11009A59	2.7k
R916	06-11009A75	12k
R917	06-11009A41	470
R918	06-11009A27	120
R919	06-11009A39	390
R920,921	06-11009A73	10k
R922,923	06-11009A55	1.8k
R924	06-11009A65	4.7k
R1001	06-11009B06	220k
R1002	06-11009A49	1k
R1003,1004	06-11009A35	270
R1005	06-11045A20	62 1/2W
R1006	06-11009A43	560
R1007	06-11009A66	5.1k
R1008	06-11009A88	43k
R1009	06-11009A65	4.7k
R1010	06-11009A66	5.1k
R1011	06-11009A65	4.7k
R1012	06-11009A55	1.8k
R1013	06-11009A66	5.1k
R1014	06-11009A65	4.7k
R1015	06-11009A35	270
R1016	06-11009A45	680
R1017	06-11009A65	4.7k
R1018,1019	06-11009A59	2.7k
R1020	06-11009A35	270
R1021,1022	06-80037G07	1.8 1/2W
R1023	06-11009A66	5.1k
R1024,1025	06-11009A73	10k

**integrated circuit** (see note)  
U900 51-80067C01 opamp  
U1000 51-80067C06 opamp  
U1001 51-80068C02 voltage regulator

**voltage regulator** (see note)  
VR900 48-82256C12 5.6V  
VR1000 48-82256C53 18V

note: For best performance, order diodes, transistors, and integrated-circuit devices by Motorola part number.

## INSUFFICIENT POWER OUTPUT (SEE NOTE)

(SEE POWER CONTROL  
SECTION OF COMMON  
CIRCUITS BOARD)

START

BRIEFLY KEY  
TRANSMITTER  
SEE CAUTION

IS  
U950-4 = 9.4V  
?

NO  
NO KEYED 9.4V.  
CHECK PERSONALITY  
BOARD.

YES  
IS  
MS2/MS1  
> 0.46V  
?

YES  
VSWR SHUTBACK. CHECK  
ANTENNA CONNECTORS,  
CABLES, HARMONIC  
FILTER, AND DIRECTIONAL  
COUPLER FOR RF  
DISCONTINUITY. READ  
TRANSMITTER POWER  
MEASURING SECTION OF  
SYSTEM MAINTENANCE.

NO  
IS  
MS3 ≤ 0 μA  
?

YES  
IS  
MS1 = 0 μA  
?

NO  
CHECK U901  
AND U950.

REPLACE  
DEFECTIVE  
COMPONENTS.

YES  
IS  
P401-10 < 1V  
OR > 9V  
?

(HIGH)  
> 9V  
NO PA ENABLE.  
CHECK PERSONALITY  
BOARD.

< 1V (LOW)  
IS  
U950-14 ≥ 4V  
?

NO  
IS  
U950-12 ≥ 0.1V  
?

REPLACE  
U950.

YES  
IS  
U950-8 ≥ 0.6V  
?

NO  
IS  
Q951  
BASE ≥ 8.8V  
?

NO  
REPLACE  
Q951.

YES  
IS  
Q950  
COLLECTOR ≥ 9.0V  
?

NO  
Q950 NOT CONDUCTING  
PROPERLY OR Q951  
SHORTED. CHECK Q950,  
R963, R962, AND Q951.

REPLACE  
DEFECTIVE  
COMPONENTS.

YES  
Q957 NOT CONDUCTING  
PROPERLY. CHECK Q950  
AND Q962.

REPLACE  
DEFECTIVE  
COMPONENTS.

IS  
MS3 ≥ 39 μA  
?

NO  
IS  
P401-10 < 1V  
?

NO  
IMPROPER PA ENABLE  
VOLTAGE. CHECK  
PERSONALITY BOARD.

YES  
UNPLUG J951.

IS  
U951-13 > 0.2V  
?

NO  
RECONNECT  
R951.

YES  
REPLACE U951.  
IF CONDITION  
PERSISTS, REPLACE  
U950.

IS  
U950-8 ≥ 0.6V  
?

NO  
IS  
U950-7 ≥ 0.6V  
?

NO  
IS  
Q952  
COLLECTOR ≥ 0.3V  
?

REPLACE  
Q952.

YES  
IS  
Q952  
COLLECTOR ≥ 0.3V  
?

NO  
CHECK PA OUTPUT  
SUBSTRATE FOR HIGH  
TEMPERATURE. IF LOW  
REPLACE THERMISTOR  
(RT850).

YES  
IS  
J951-3 ≥ 2.4V  
?

TO A

IS  
U950-8 ≥ 0.6V  
?

NO  
OVERDRIVE SHUTBACK  
MODE. TURN POWER SET  
POT FULLY CLOCKWISE.  
KEY TRANSMITTER AND  
ADVANCE SLOWLY.

YES  
CAN  
POWER OUTPUT BE  
SET TO PROPER  
LEVEL?

NO  
REPLACE  
DEFECTIVE  
COMPONENTS.

YES  
POWER CONTROL  
OPERATING  
CORRECTLY.

IS  
U950-8 < 0.6V  
?

NO  
IS  
U950-9  
APPROXIMATELY  
4.3V  
?

NO  
POWER CONTROL  
INCORRECTLY IN HIGH  
DRIVE CUTBACK MODE.  
CHECK RESISTIVE  
DIVIDER R972, R971,  
AND U960.

REPLACE  
DEFECTIVE  
COMPONENTS.

YES  
IS  
U950-9  
APPROXIMATELY  
4.3V  
?

NO  
POWER CONTROL  
INCORRECTLY IN HIGH  
DRIVE CUTBACK MODE.  
CHECK R973, R974,  
R975, CR950, U901.

REPLACE  
DEFECTIVE  
COMPONENTS.

YES  
IS  
U950-10 =  
(J951-1)/2  
?

NO  
POWER CONTROL  
INCORRECTLY IN HIGH  
DRIVE CUTBACK MODE.  
CHECK R973, R974,  
R975, CR950, U901.

REPLACE  
DEFECTIVE  
COMPONENTS.

YES  
POWER CONTROL  
OPERATING CORRECTLY  
(HIGH DRIVE  
CUTBACK MODE). GO  
TO PA TROUBLE-  
SHOOTING CHART.

IS  
U950-1 > 8V  
?

NO  
IS  
U950-2 = U950-3  
?

NO  
REPLACE  
U950.

YES  
IS  
U950-1 > 8V  
?

YES  
Q953 NOT CONDUCTING  
PROPERLY, OR FAULTY  
DIVIDER NETWORK FOR  
POWER SET VOLTAGE.  
CHECK Q953, R980, R981  
FOR OPEN. CHECK POWER  
POT R979 FOR SHORT.  
CHECK RT950 AND RT850.  
(NOTE: RT850 IS ON  
FINAL PA.)

REPLACE  
DEFECTIVE  
COMPONENTS.

NO  
IS  
U950-1 > 8V  
?

NO  
IS  
U950-2 = U950-3  
?

NO  
REPLACE  
U950.

YES  
IS  
U950-1 > 8V  
?

YES  
IS  
U950-2 = U950-3  
?

NO  
REPLACE  
U950.

YES  
IS  
U950-1 > 8V  
?

YES  
IS  
U950-2 = U950-3  
?

NO  
REPLACE  
U950.

YES  
IS  
U950-1 > 8V  
?

YES  
IS  
U950-2 = U950-3  
?

NO  
REPLACE  
U950.

YES  
IS  
U950-1 > 8V  
?

YES  
IS  
U950-2 = U950-3  
?

NO  
REPLACE  
U950.

YES  
IS  
U950-1 > 8V  
?

YES  
IS  
U950-2 = U950-3  
?

NO  
REPLACE  
U950.

YES  
IS  
U950-1 > 8V  
?

YES  
IS  
U950-2 = U950-3  
?

NO  
REPLACE  
U950.

YES  
IS  
U950-1 > 8V  
?

YES  
IS  
U950-2 = U950-3  
?

NO  
REPLACE  
U950.

YES  
IS  
U950-1 > 8V  
?

YES  
IS  
U950-2 = U950-3  
?

NO  
REPLACE  
U950.

YES  
IS  
U950-1 > 8V  
?

YES  
IS  
U950-2 = U950-3  
?

NO  
REPLACE  
U950.

YES  
IS  
U950-1 > 8V  
?

YES  
IS  
U950-2 = U950-3  
?

NO  
REPLACE  
U950.

YES  
IS  
U950-1 > 8V  
?

YES  
IS  
U950-2 = U950-3  
?

NO  
REPLACE  
U950.

YES  
IS  
U950-1 > 8V  
?

YES  
IS  
U950-2 = U950-3  
?

NO  
REPLACE  
U950.

YES  
IS  
U950-1 > 8V  
?

YES  
IS  
U950-2 = U950-3  
?

NO  
REPLACE  
U950.

YES  
IS  
U950-1 > 8V  
?

YES  
IS  
U950-2 = U950-3  
?

NO  
REPLACE  
U950.

YES  
IS  
U950-1 > 8V  
?

YES  
IS  
U950-2 = U950-3  
?

NO  
REPLACE  
U950.

YES  
IS  
U950-1 > 8V  
?

YES  
IS  
U950-2 = U950-3  
?

NO  
REPLACE  
U950.

YES  
IS  
U950-1 > 8V  
?

YES  
IS  
U950-2 = U950-3  
?

NO  
REPLACE  
U950.

YES  
IS  
U950-1 > 8V  
?

YES  
IS  
U950-2 = U950-3  
?

NO  
REPLACE  
U950.

YES  
IS  
U950-1 > 8V  
?

YES  
IS  
U950-2 = U950-3  
?

NO  
REPLACE  
U950.

YES  
IS  
U950-1 > 8V  
?

YES  
IS  
U950-2 = U950-3  
?

NO  
REPLACE  
U950.

YES  
IS  
U950-1 > 8V  
?

YES  
IS  
U950-2 = U950-3  
?

NO  
REPLACE  
U950.

YES  
IS  
U950-1 > 8V  
?

YES  
IS  
U950-2 = U950-3  
?

NO  
REPLACE  
U950.

YES  
IS  
U950-1 > 8V  
?

YES  
IS  
U950-2 = U950-3  
?

NO  
REPLACE  
U950.

YES  
IS  
U950-1 > 8V  
?

YES  
IS  
U950-2 = U950-3  
?

NO  
REPLACE  
U950.

YES  
IS  
U950-1 > 8V  
?

YES  
IS  
U950-2 = U950-3  
?

NO  
REPLACE  
U950.

YES  
IS  
U950-1 > 8V  
?

YES  
IS  
U950-2 = U950-3  
?

NO  
REPLACE  
U950.

YES  
IS  
U950-1 > 8V  
?

YES  
IS  
U950-2 = U950-3  
?

NO  
REPLACE  
U950.

YES  
IS  
U950-1 > 8V  
?

YES  
IS  
U950-2 = U950-3  
?

NO  
REPLACE  
U950.

YES  
IS  
U950-1 > 8V  
?

YES  
IS  
U950-2 = U950-3  
?

NO  
REPLACE  
U950.

YES  
IS  
U950-1 > 8V  
?

YES  
IS  
U950-2 = U950-3  
?

NO  
REPLACE  
U950.

YES  
IS  
U950-1 > 8V  
?

YES  
IS  
U950-2 = U950-3  
?

NO  
REPLACE  
U950.

YES  
IS  
U950-1 > 8V  
?

YES  
IS  
U950-2 = U950-3  
?

NO  
REPLACE  
U950.

YES  
IS  
U950-1 > 8V  
?

YES  
IS  
U950-2 = U950-3  
?

NO  
REPLACE  
U950.

YES  
IS  
U950-1 > 8V  
?

YES  
IS  
U950-2 = U950-3  
?

NO  
REPLACE  
U950.

YES  
IS  
U950-1 > 8V  
?

YES  
IS  
U950-2 = U950-3  
?

NO  
REPLACE  
U950.

YES  
IS  
U950-1 > 8V  
?

YES  
IS  
U950-2 = U950-3  
?

NO  
REPLACE  
U950.

YES  
IS  
U950-1 > 8V  
?

YES  
IS  
U950-2 = U950-3  
?

NO  
REPLACE  
U950.

YES  
IS  
U950-1 > 8V  
?

YES  
IS  
U950-2 = U950-3  
?

NO  
REPLACE  
U950.

YES  
IS  
U950-1 > 8V  
?

YES  
IS  
U950-2 = U950-3  
?

NO  
REPLACE  
U950.

YES  
IS  
U950-1 > 8V  
?

YES  
IS  
U950-2 = U950-3  
?

NO  
REPLACE  
U950.

YES  
IS  
U950-1 > 8V  
?

YES  
IS  
U950-2 = U950-3  
?

NO  
REPLACE  
U950.

YES  
IS  
U950-1 > 8V  
?

YES  
IS  
U950-2 = U950-3  
?

NO  
REPLACE  
U950.

YES  
IS  
U950-1 > 8V  
?

YES  
IS  
U950-2 = U950-3  
?

NO  
REPLACE  
U950.

YES  
IS  
U950-1 > 8V  
?

YES  
IS  
U950-2 = U950-3  
?

NO  
REPLACE  
U950.

YES  
IS  
U950-1 > 8V  
?

YES  
IS  
U950-2 = U950-3  
?

NO  
REPLACE  
U950.

YES  
IS  
U950-1 > 8V  
?

YES  
IS  
U950-2 = U950-3  
?

NO  
REPLACE  
U950.

YES  
IS  
U950-1 > 8V  
?

YES  
IS  
U950-2 = U950-3  
?

NO  
REPLACE  
U950.

YES  
IS  
U950-1 > 8V  
?

YES  
IS  
U950-2 = U950-3  
?

NO  
REPLACE  
U950.

YES  
IS  
U950-1 > 8V  
?

YES  
IS  
U950-2 = U950-3  
?

NO  
REPLACE  
U950.

YES  
IS  
U950-1 > 8V  
?

YES  
IS  
U950-2 = U950-3  
?

NO  
REPLACE  
U950.

YES  
IS  
U950-1 > 8V  
?

YES  
IS  
U950-2 = U950-3  
?

NO  
REPLACE  
U950.


YES  
IS  
U950-1 > 8V  
?

YES  
IS  
U950-2 = U950-3  
?

NO  
REPLACE  
U950.


YES  
IS  
U950-1 > 8V  
?

# 800MHz COMMON CIRCUIT BOARD

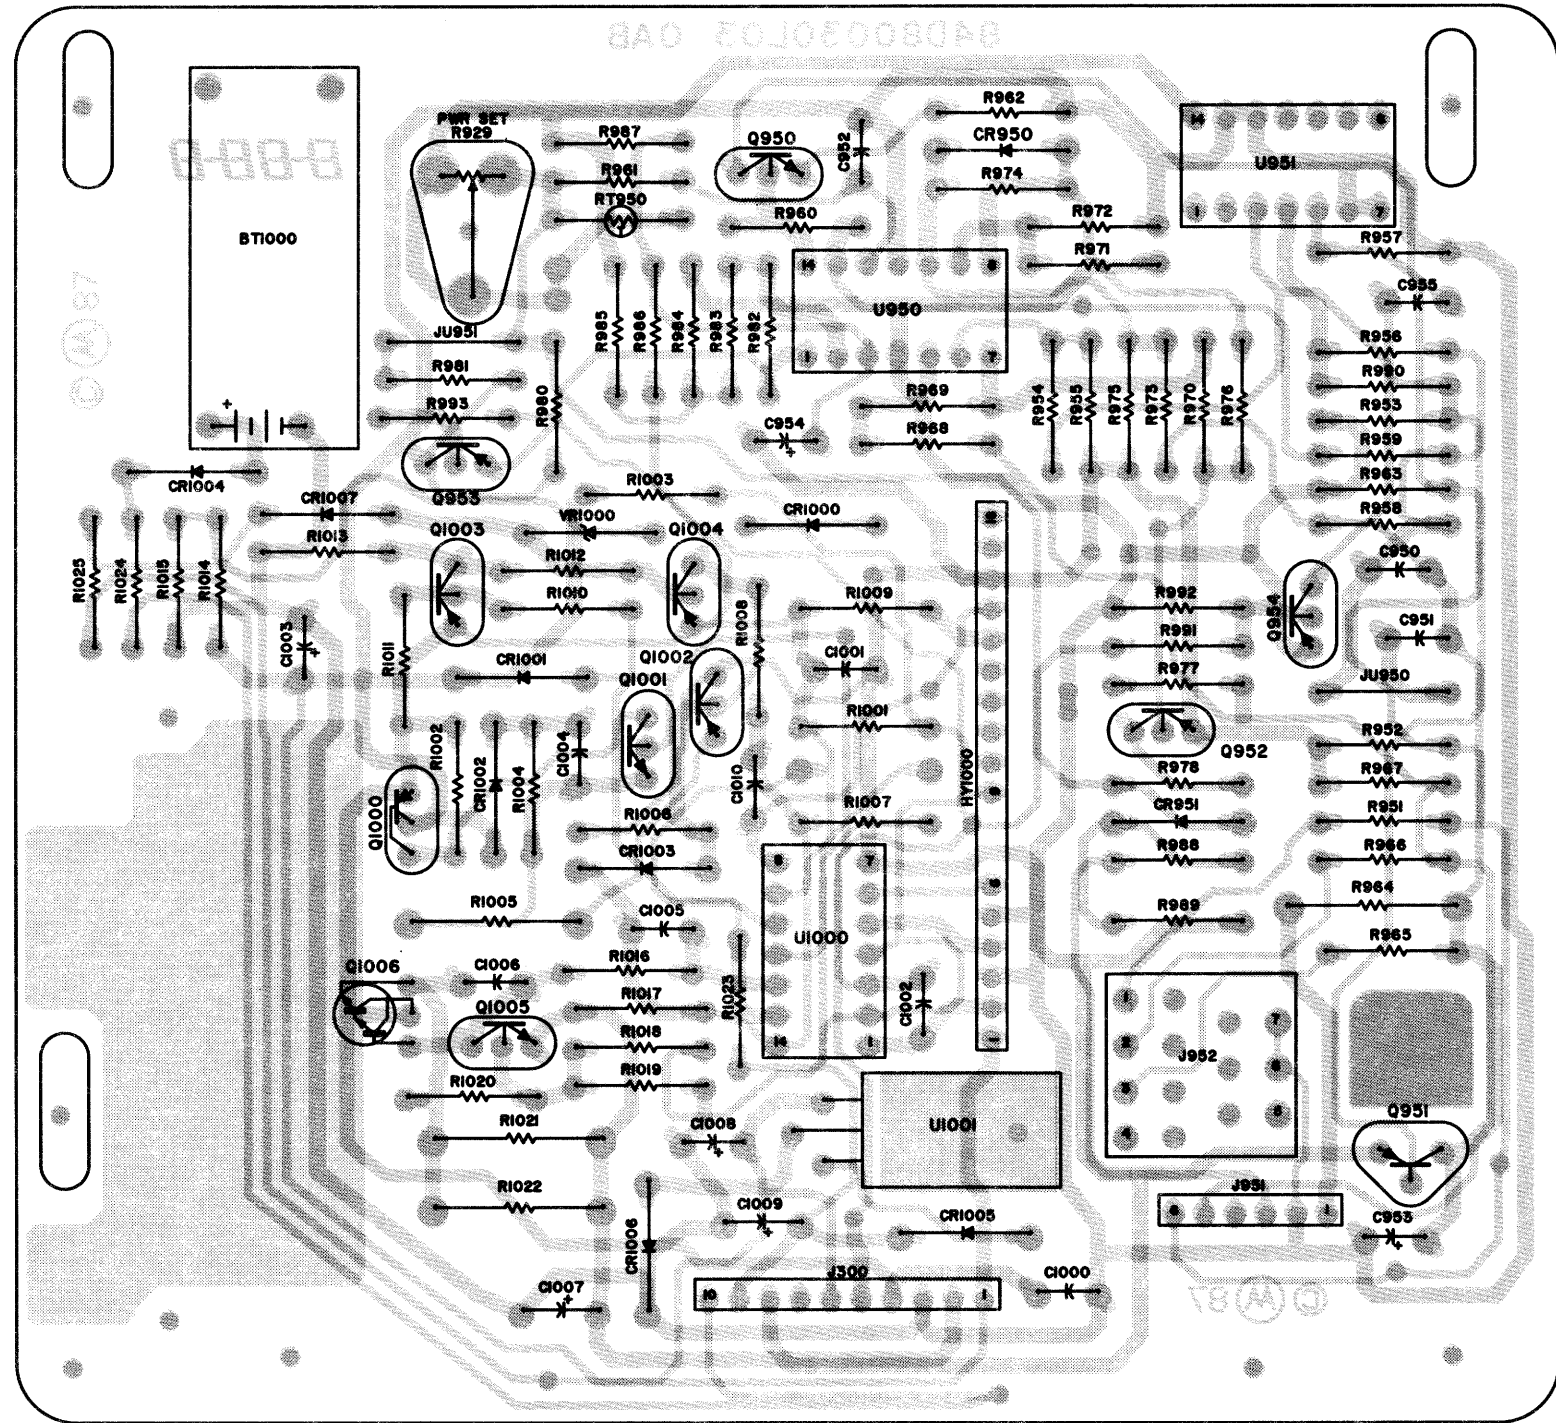

SOLDER SIDE  
COMPONENT SIDE  
OVERLAY

Schematics, Circuit Board Diagram, and  
Parts List for HLN4971C  
Common Circuits Board (800 MHz)  
PW-2766-B  
1/25/88

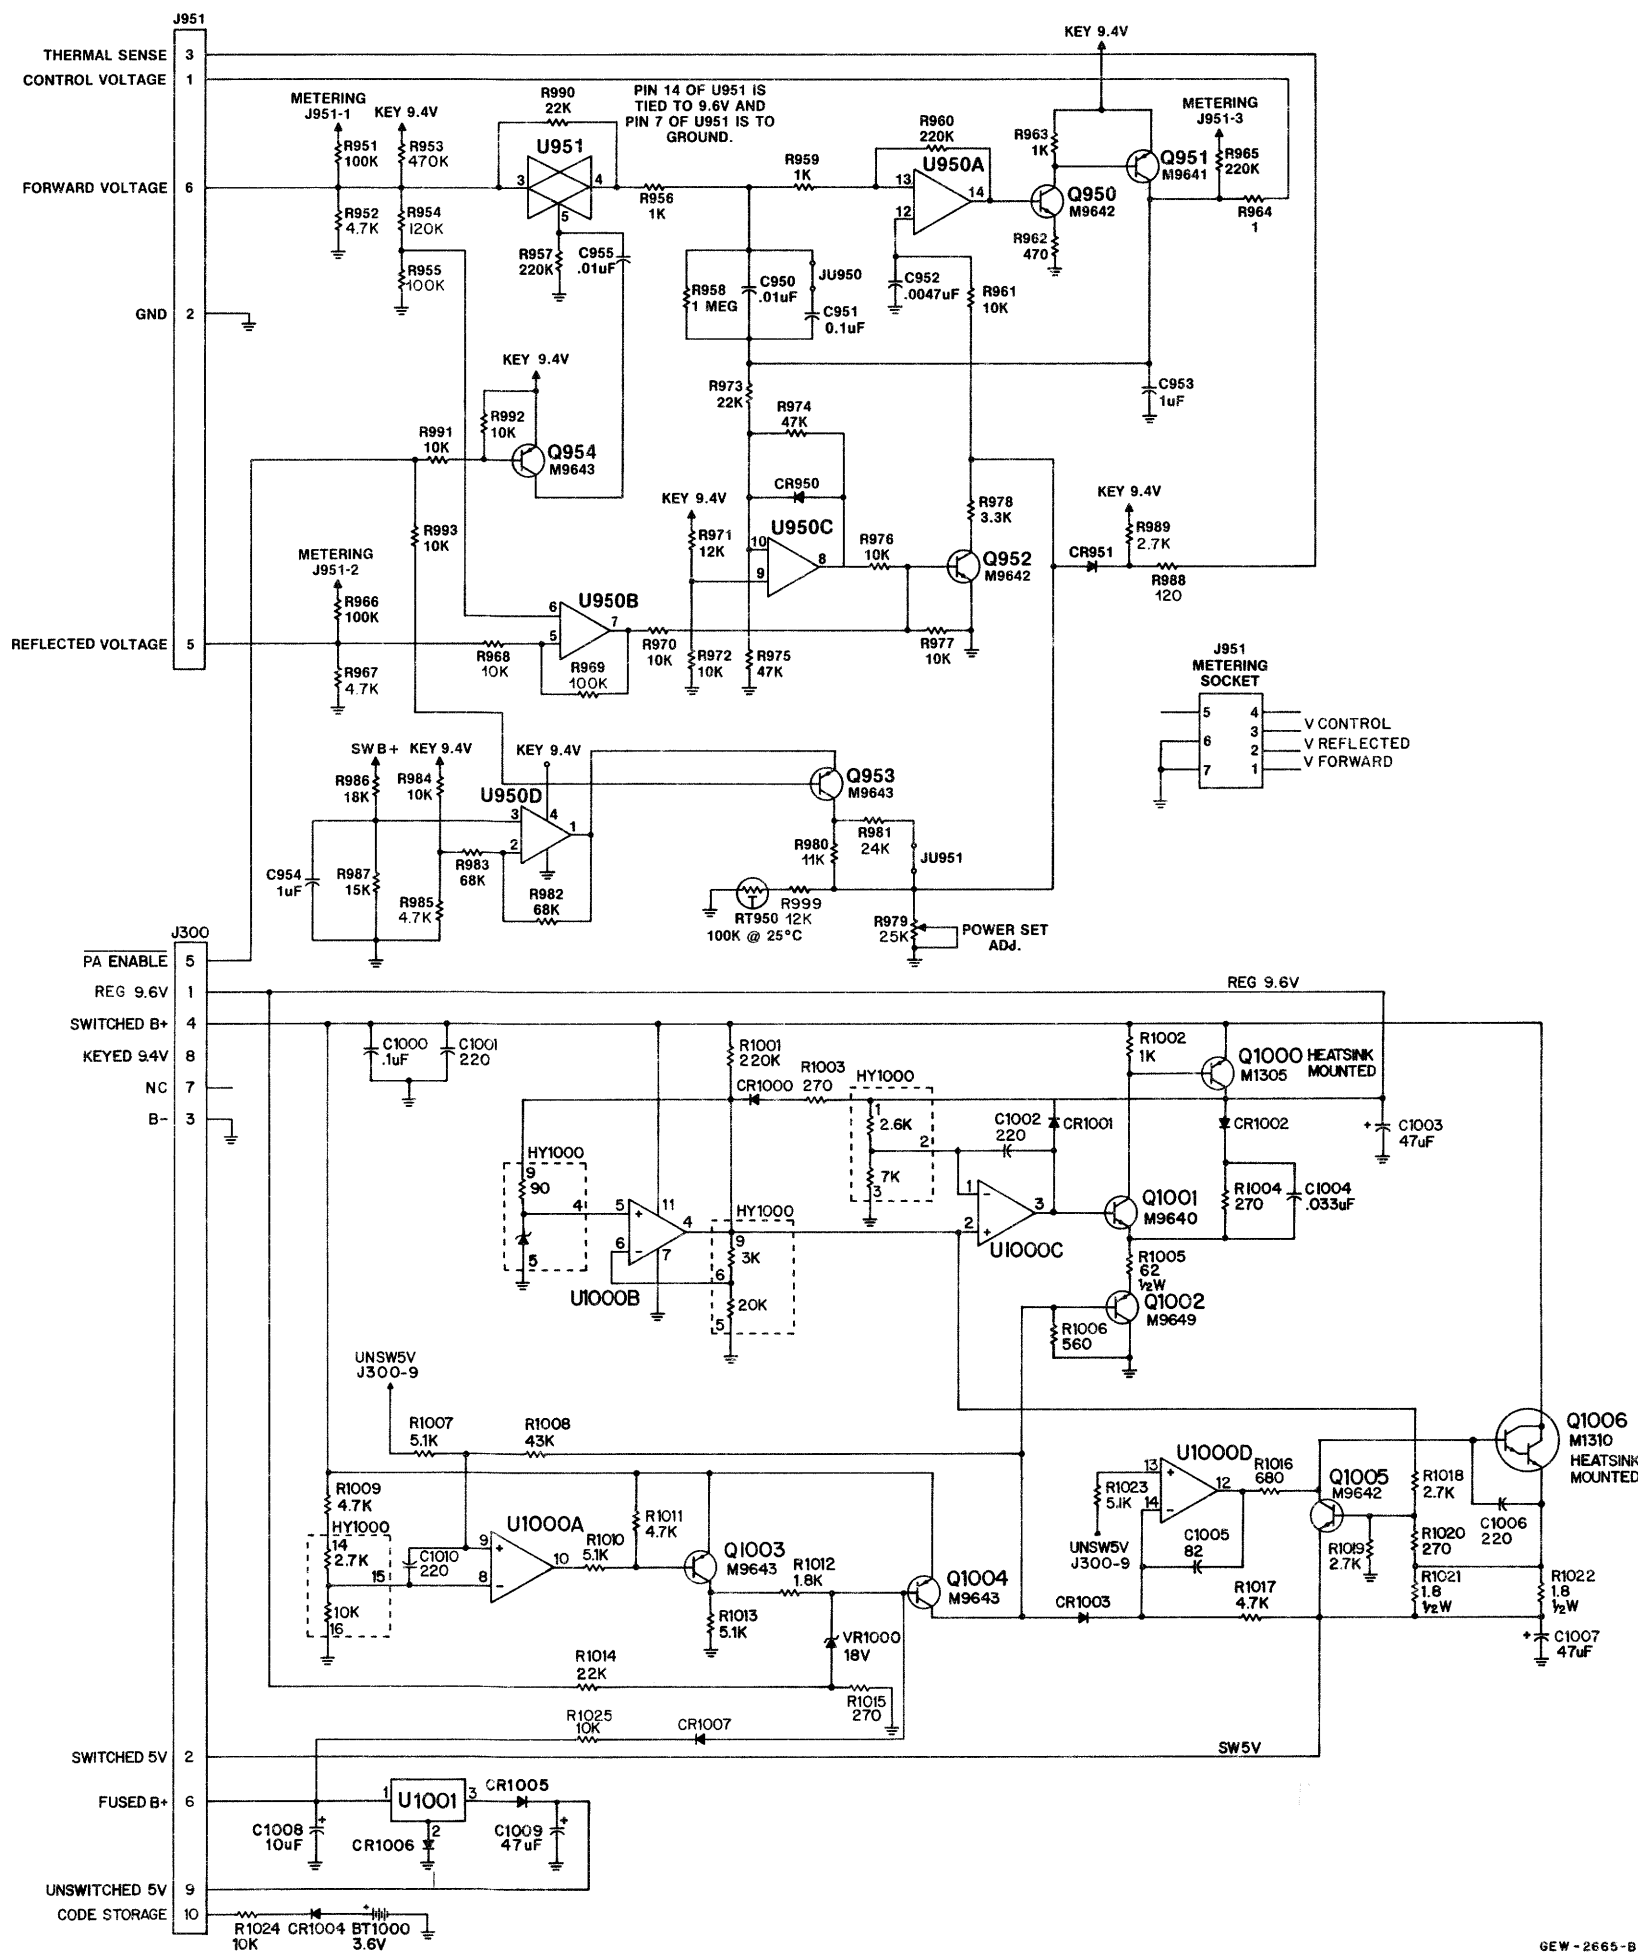

## parts list

HLN4971C SYNTOR X 9000 800MHz  
Common Circuits Board

REFERENCE SYMBOL	MOTOROLA PART NO.	DESCRIPTION
<b>capacitor, fixed uF, ±5%, 63V</b> (unless otherwise stated)		
C950	06-11051A07	.01
C951	06-11051A13	.1
C952	06-11051A05	.0047
C953,954	23-11013F13	1 ±10% 35V, tantalum
C955	06-11051A07	.01
C1000	06-11051A13	.1
C1001,1002	21-11015B05	220 pF ±10% 100V
C1003	23-11013A38	47 ±20% 16V, electrolytic
C1004	06-11051A17	.033
C1005	21-11014B47	82 pF 100V
C1006	21-11015B05	220 pF ±10% 100V
C1007	23-84538G25	47 ±20% 10V, tantalum
C1008	23-84538G25	10 ±20% 35V, electrolytic
C1009	23-84538G25	47 ±20% 10V, tantalum
C1010	21-11015B05	220 pF ±10% 100V
<b>diode</b> (see note)		
CR950,951	48-83654H01	silicon
CR1000-1007	48-83654H01	silicon
<b>hybrid</b> (see note)		
HY1000	01-80715D003	regulator
<b>connector receptacle</b>		
J951	28-84647L04	6 pin
J952	09-84207B01	7 contact
<b>jumper</b>		
JU950,951	06-11009B23	0 ohm
<b>transistor</b> (see note)		
Q950	48-00869648	NPN
Q951	48-00869641	PNP
Q952	48-00869642	PNP
Q953,954	48-00869643	PNP
Q1000	48-84413L05	PNP
Q1001	48-00869640	NPN
Q1002	48-11043C08	PNP
Q1003,1004	48-00869643	PNP
Q1005	48-00869642	PNP
Q1006	48-84413L10	NPN, Darlington
<b>thermistor</b>		
RT950	06-80286D01	100k ±10%
<b>resistor, fixed ohm, ±5%, 1/4 watt</b> (unless otherwise stated)		
R951	06-11009A97	100k
R952	06-11009A85	4.7k
R953	06-11009B14	470k
R954	06-11009A95	120k
R955	06-11009A97	100k
R956	06-11009A45	1k
R957	06-11009B06	220k
R958	06-11009B22	1 M
R959	06-11009A49	1k
R960	06-11009B06	220k
R961	06-11009A73	10k
R962	06-11009A41	470
R963	06-11009A43	1k

REFERENCE SYMBOL	MOTOROLA PART NO.	DESCRIPTION
R964	06-80037G01	1 1/2W
R965	06-11009B06	220k
R966	06-11009A97	100k
R967	06-11009A65	4.7k
R968	06-11009A73	10k
R969	06-11009A97	100k
R970	06-11009A73	10k
R971	06-11009A75	12k
R972	06-11009A73	10k
R973	06-11009A81	22k
R974,975	06-11009A89	47k
R976,977	06-11009A73	10k
R978	06-11009A61	3.3k
R979	18-80087E01	25k potentiometer
R980	06-11009A74	11k
R981	06-11009A82	24k
R982,983	06-11009A93	68k
R984	06-11009A73	10k
R985	06-11009A65	4.7k
R986	06-11009A79	18k
R987	06-11009A77	15k
R988	06-11009A27	120
R989	06-11009A58	2.4k
R990	06-11009A81	22k
R991-993	06-11009A73	10k
R999	06-11009A75	12k
R1001	06-11009B06	220k
R1002	06-11009A49	1k
R1003,1004	06-11009A35	270
R1005	06-11045A20	62 1/2W
R1006	06-11009A43	560
R1007	06-11009A66	5.1k
R1008	06-11009A88	43k
R1009	06-11009A65	4.7k
R1010	06-11009A66	5.1k
R1011	06-11009A65	4.7k
R1012	06-11009A55	1.8k
R1013	06-11009A66	5.1k
R1014	06-11009A65	4.7k
R1015	06-11009A35	270
R1016	06-11009A45	680
R1017	06-11009A65	4.7k
R1018	06-11009A59	2.7k
R1019	06-11009A59	2.7k
R1020	06-11009A35	270
R1021,1022	06-80037G07	1.8 1/2W
R1023	06-11009A66	5.1k
R1024,1025	06-11009A73	10k
<b>integrated circuit</b> (see note)		
U850	51-83629M18	quad opamp
U851	51-84887K04	quad switch
U1000	51-80067C06	opamp
U1001	51-80068C02	voltage regulator

**voltage regulator** (see note)  
VR1000 48-82256C53 18V

note: For best performance, order diodes, transistors, and integrated-circuit devices by Motorola part number.

01/06/88

GEW-2665-B




**MOTOROLA**  
*Mobile Products Division*

# Common Circuits Board

## SECTION CONTENTS


Common Circuits Board Text .....	W10001S42
Schematic, Circuit Board Diagram, and Parts List for Common Circuits Board (800 MHz) .....	PW-2766

# 800MHz COMMON CIRCUIT BOARD

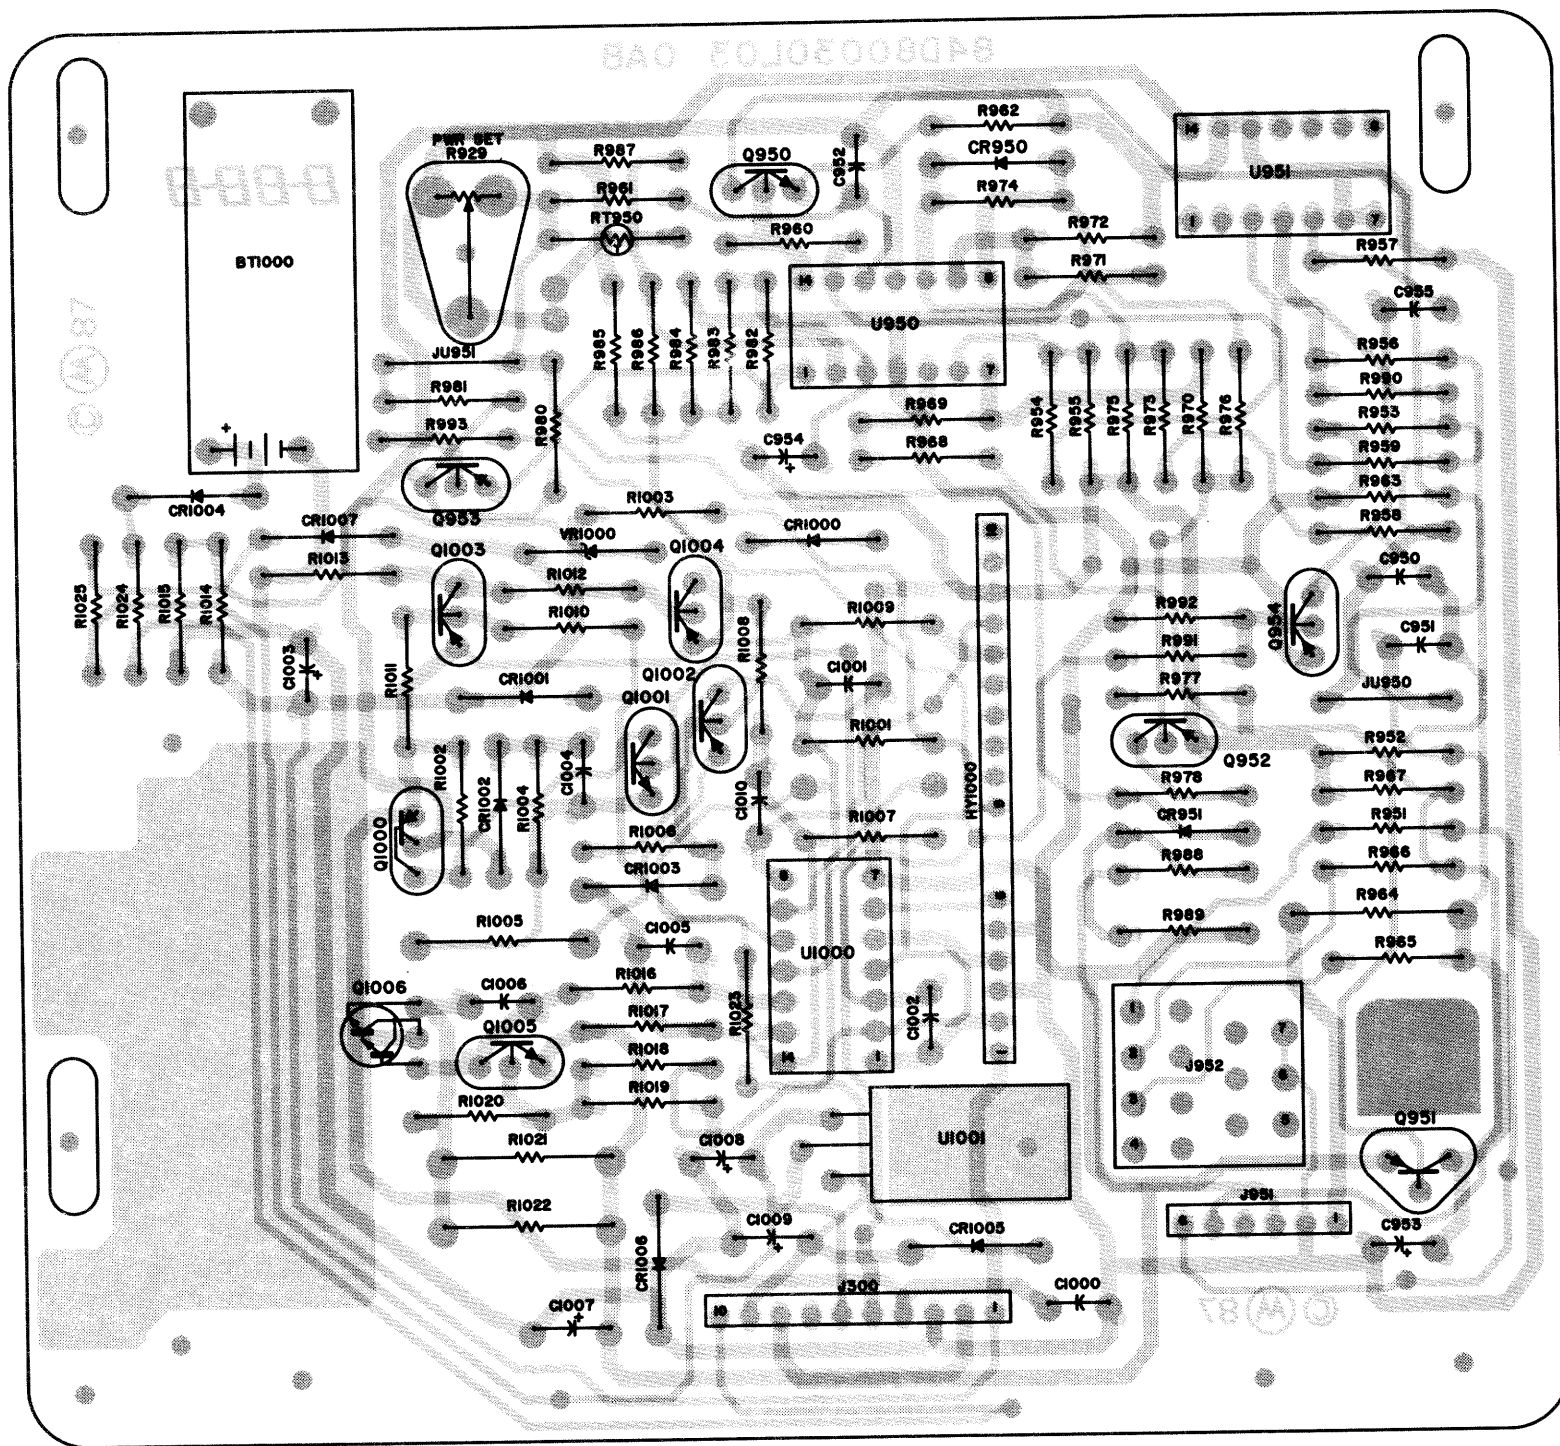

SOLDER SIDE 6AW-2667-B  
COMPONENT SIDE 6AW-2666-B  
OVERLAY 6XW-2668-B

Schematics, Circuit Board Diagram, and  
Parts List for HLN4971C  
Common Circuits Board (800 MHz)  
PW-2766-B  
1/25/88

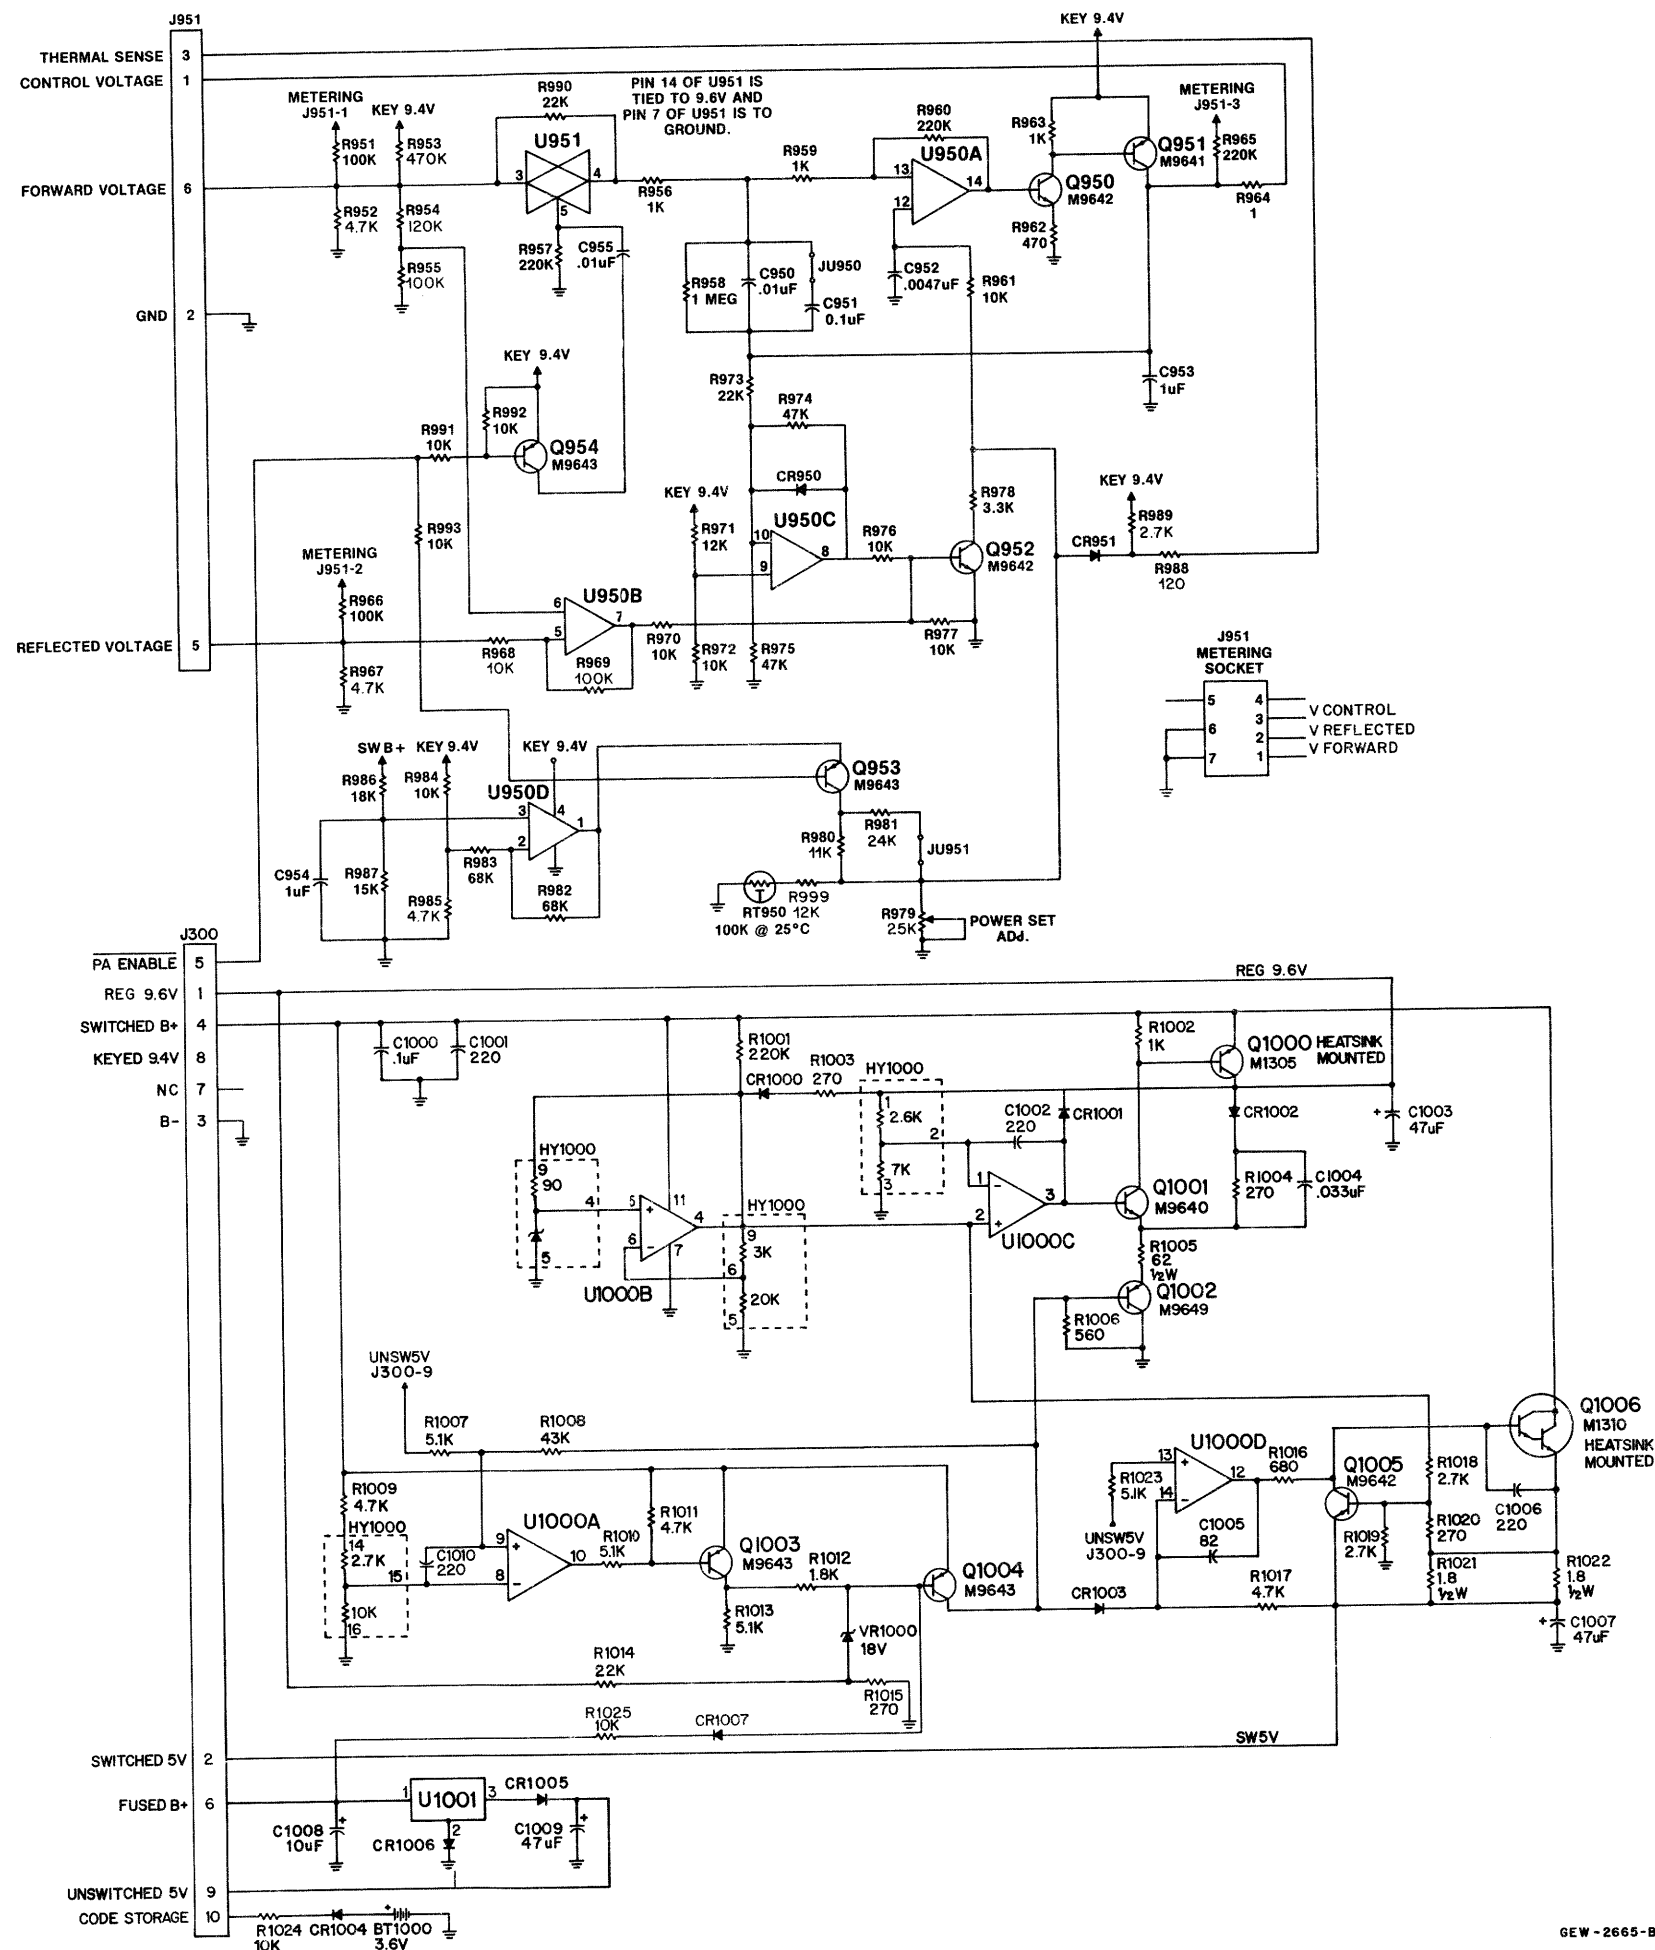

## parts list

HLN4971C SYNTOR X 9000 800MHz  
Common Circuits Board MXW-2669-C

REFERENCE SYMBOL	MOTOROLA PART NO.	DESCRIPTION
<b>capacitor, fixed uF, <math>\pm 5\%</math>, 63V</b> (unless otherwise stated)		
C950	06-11051A07	.01
C951	06-11051A13	.1
C952	06-11051A05	.0047
C953,954	23-11013F13	1 $\pm 10\%$ 35V, tantalum
C955	06-11051A07	.01
C1000	06-11051A13	1
C1001,1002	21-11015B05	220 pF $\pm 10\%$ 100V
C1003	23-11019A39	47 $\pm 20\%$ 16V, electrolytic
C1004	06-11051A10	.033
C1005	21-11014B47	82 pF 100V
C1006	21-11015B05	220 pF $\pm 10\%$ 100V
C1007	23-84538G29	47 $\pm 20\%$ 10V, tantalum
C1008	23-11048C11	10 $\pm 20\%$ 35V, electrolytic
C1009	23-84538G29	47 $\pm 20\%$ 10V, tantalum
C1010	21-11015B05	220 pF $\pm 10\%$ 100V
<b>diode</b> (see note)		
CR950,951	48-83654H01	silicon
CR1000-1007	48-83654H01	silicon
<b>hybrid</b> (see note)		
HY1000	01-80715D03	regulator
<b>connector receptacle</b>		
J951	28-84647L04	6 pin
J952	09-84207B01	7 contact
<b>jumper</b>		
JU950,951	06-11009B23	0 ohm
<b>transistor</b> (see note)		
Q950	48-00869648	NPN
Q951	48-00869641	PNP
Q952	48-00869642	NPN
Q953,954	48-00869643	PNP
Q1000	48-84413L05	PNP
Q1001	48-00869640	NPN
Q1002	48-11043C08	PNP
Q1003,1004	48-00869643	PNP
Q1005	48-00869642	NPN
Q1006	48-84413L10	NPN, Darlington
<b>thermistor</b>		
RT950	06-80286D01	100k $\pm 10\%$
<b>resistor, fixed ohm, <math>\pm 5\%</math>, 1/4 watt</b> (unless otherwise stated)		
R951	06-11009A97	100k
R952	06-11009A65	4.7k
R953	06-11009B31	470k
R954	06-11009A98	120k
R955	06-11009A97	100k
R956	06-11009A45	1k
R957	06-11009B06	220k
R958	06-11009B22	1M
R959	06-11009A45	1k
R960	06-11009B06	220k
R961	06-11009A73	10k
R962	06-11009A41	470
R963	06-11009A45	1k

REFERENCE SYMBOL	MOTOROLA PART NO.	DESCRIPTION
R964	06-80037G01	1 1/2W
R965	06-11009B06	220k
R966	06-11009A97	100k
R967	06-11009A65	4.7k
R968	06-11009A73	10k
R969	06-11009A97	100k
R970	06-11009A73	10k
R971	06-11009A75	12k
R972	06-11009A73	10k
R973	06-11009A81	22k
R974,975	06-11009A98	47k
R976,977	06-11009A73	10k
R978	06-11009A74	3.3k
R979	18-80087E01	25k potentiometer
R980	06-11009A74	11k
R981	06-11009A82	24k
R982,983	06-11009A93	56k
R984	06-11009A73	10k
R985	06-11009A65	4.7k
R986	06-11009A79	18k
R987	06-11009A77	15k
R988	06-11009A27	120
R989	06-11009A58	2.4k
R990	06-11009A81	22k
R991-993	06-11009A73	10k
R999	06-11009A75	12k
R1001	06-11009B06	220k
R1002	06-11009A49	1k
R1003,1004	06-11009A35	270
R1005	06-11045A20	62 1/2W
R1006	06-11009A43	560
R1007	06-11009A66	5.1k
R1008	06-11009A88	43k
R1009	06-11009A65	4.7k
R1010	06-11009A66	5.1k
R1011	06-11009A65	4.7k
R1012	06-11009A55	1.8k
R1013	06-11009A66	5.1k
R1014	06-11009A65	4.7k
R1015	06-11009A35	270
R1016	06-11009A45	680
R1017	06-11009A65	4.7k
R1018	06-11009A59	2.7k
R1019	06-11009A59	2.7k
R1020	06-11009A35	270
R1021,1022	06-80037G07	1.8 1/2W
R1023	06-11009A66	5.1k
R1024,1025	06-11009A73	10k
<b>integrated circuit</b> (see note)		
U950	51-83629M18	quad opamp
U951	51-84887K04	quad switch
U1000	51-80067C06	opamp
U1001	51-80068C02	voltage regulator
<b>voltage regulator</b> (see note)		
VR1000	48-82256C53	18V

note: For best performance, order diodes, transistors, and integrated-circuit devices by Motorola part number.

01/06/88

6EW-2665-B



**MOTOROLA**  
Mobile Products Division

# instruction manual revision

## GENERAL

This revision consists of changes that have occurred since your manual was printed. Please correct your manual accordingly.

## INSTRUCTION MANUAL AFFECTED

68P80100W94-O

*SYNTOR X 9000*  
High Band and UHF Radios

## REVISIONS

1. Perform WMR-0224 before this one.
2. In the Microcomputer section, turn to fold-out page PW-2586-C (Sheet 2 of 4) then mark the following changes near the middle of schematic GEW-3012-A, below U504.

Locate Q516 and change its number to read 41L03.

2. In the Microcomputer section, turn to fold-out page PW-2586-C (Sheet 3 of 4) then mark the following changes to parts list MXW-2486-C.

Q516	48-80141L03	PNP
R543	06-11024A97	100k



## GENERAL

This revision consists of changes that have occurred since your manual was printed. Please correct your manual accordingly.

## INSTRUCTION MANUALS AFFECTED

68P80100W51-A  
68P80101W95-O  
68P81060E05-B  
68P80100W45-B  
68P81044E40-B  
68P81066E80-A  
68P80101W62-O  
68P81043E55-B  
68P80100W94-O  
68P80100W89-O  
68P80101W10-A  
68P81102E27-E  
68P81106E46-C  
  
68P81045E65-O  
68P81045E70-O  
68P81045E75-A  
  
68P81045E80-A

*SYNTOR X* Low Band, 31-50 MHz, 100 Watts  
*SYNTOR X 9000* Low Band Radio System, 100 Watts, 31-50 MHz  
*SYNTOR X* High Band Radio, 150-174 MHz  
*SYNTOR X* UHF Radio  
*SYNTOR X* FM Two-Way Radio, 806-970 MHz, 35 Watts  
Trunked *SYNTOR X Smartnet* Dual Operation FM Two-Way Radio  
*Systems 9000E* Dual Operation Radio System  
Trunked *SYNTOR X* FM Radio Control Station, 806-870 MHz, 10W  
*SYNTOR X 9000* High Band, UHF, and 800 MHz Radio Supplement  
*SYNTOR X 9000* Trunked *Smartnet* Dual Operation Supplement  
*Systems 9000* Siren/Public Address Option for *SYNTOR X 9000* Radios  
*Micor/Systems 90 "Quik-Call II"* Mobile Paging Decoder  
*Mitrek/Micor Systems 90, SYNTOR Systems 90'S "Touch-Code"*  
Mobile Selective Signalling Decoder  
*Mitrek* Two-Way FM Radio, 29.7-50 MHz, 60/110 Watts  
*Mitrek* Two-Way FM Radio, 135-164 MHz, 40/60/75/110 Watts  
*Mitrek* Two-Way FM Radio, 406-420 MHz and  
450-512 MHz, 30 and 50; 75 and 100 Watts  
*Mitrek* Two-Way FM Radio, 806-816 MHz Transmit  
851-861 MHz Receive, 12 and 35 Watts

## REVISION

Change all occurrences of the following part numbers as follows. Most occurrences are in the Transmitter and/or Common Circuits Board sections of your manuals.

OLD NUMBER	NEW NUMBER	DESCRIPTION
51-80073C01	51-84857K04	quad switch
51-80073C01	51-84857K04	quad switch
48-84616A01	48-84616A11	hot carrier
48-11034A12	48-84616A25	hot carrier



## GENERAL

This revision consists of changes that have occurred since your manual was printed. Please correct your manual accordingly.

## INSTRUCTION MANUALS AFFECTED

68P80100W94-O  
68P80101W62-O  
68P80101W95-O

*SYNTOR X 9000 High Band and UHF Radios Supplement  
Systems 9000E Dual Operation Radio System  
SYNTOR X 9000 Low Band Radio*

## REVISIONS

In the 68P80100W94-O and the 68P80101W62-O manuals:

1. Perform all other WMR's before completing the following steps.
2. In the Microcomputer section of the manual, turn to fold-out page PW-2586-C (Sheet 3 of 4). Be sure parts list MXW-2486-C has the following values;

REFERENCE SYMBOL	MOTOROLA PART NO.	DESCRIPTION
R303	06-11024A66	4.7k
R304	06-11024A73	10k
U400	51-84821K14	audio driver

3. In the Microcomputer section, on PW-2586-C (Sheet 4 of 4), locate R303 and R304 in the lower center section of schematic diagram GEW-3012-A and change the values as shown in step 2.

In the 68P80101W95-O manual:

4. Perform all other WMR's before completing the following steps.
5. In the Microcomputer section of the manual, turn to fold-out page PW-4553-O (Sheet 3 of 3). Be sure parts list MXW-4559-O has the following values;

REFERENCE SYMBOL	MOTOROLA PART NO.	DESCRIPTION
R303	06-11024A66	4.7k
R304	06-11024A73	10k
U400	51-84821K14	audio driver

6. In the Microcomputer section, on PW-4553-O (Sheet 3 of 3), locate R303 and R304 in the lower center section of schematic diagram GEW-4560-O and change the values as shown in step 5.



## GENERAL

This revision consists of changes that have occurred since your manual was printed. Please correct your manual accordingly.

## INSTRUCTION MANUAL AFFECTED

68P81060E05-B  
68P81066E80-A  
68P80100W45-B  
68P80100W51-A  
68P80100W94-O  
68P80101W62-O  
68P80101W95-O  
68P06907T09-O  
68P06907T10-O

SYNTRON X High Band Radios  
Trunked SYNTRON X SMARTNET Dual Operation  
SYNTRON X UHF Radios, Ranges 1-5  
SYNTRON X Low Band, 31-50 MHz, 100 Watts  
SYNTRON X 9000 High Band and UHF Radios  
Systems 9000E Dual Operation  
SYNTRON X 9000 Low Band Radio System  
Advanced Trunked SYNTRON X Control Station  
Advanced Trunked SYNTRON X Control Station

## REVISIONS

1. Revise your manual per WMRs dated prior to 3/19/88.
2. Locate each and every occurrence of part number, **23-83210A08**. Change each to **23-84669A08**.



**MOTOROLA**  
Mobile Products Division

# instruction manual revision

## GENERAL

This revision consists of changes that have occurred since your manual was printed. Please correct your manual accordingly.

## INSTRUCTION MANUAL AFFECTED

68P80100W89-O

68P80100W94-O

68P80101W95-O

*SYNTRON X 9000 Trunked SMARTNET*  
Dual Operation Supplement  
*SYNTRON X 9000*  
High Band and UHF Radios  
*SYNTRON X 9000*  
Low Band Radio System

## REVISIONS

1. Perform WMR's dated prior to 4/20/88.
2. Turn to the Control Unit, Cable Kits, and Accessories section of your manual. Remove and discard foldout page **PW-2048**.
3. Insert the attached foldout page, **PW-2048-C**. This updates microphone and microphone hang-up clip information.

parts list

HLN4384B Microphone Circuit Board MXW-2051-C

REFERENCE SYMBOL	MOTOROLA PART NO.	DESCRIPTION
capacitor, fixed uF, ±5%, 50V (unless otherwise stated)		
C1301	21-11038H35	24 pF
C1302	21-11039B13	.001 ±10%
C1304	23-11019A20	10 ±20% 25V, electrolytic
C1305	08-11017A14	.047
C1306	21-11038P50	220 pF
C1307	21-11039B13	.001 ±10%
C1308	08-11051A14	.15 63V
diode (see note)		
CR1301	48082256C25	12V zener ±5% 400mW
connector receptacle		
JU1301,1302	06-11009B23	0 ohm jumper
microphone		
MK1301	50-80258E04	electret cartridge
transistor (see note)		
Q1302	48-80182D08	NPN
resistor, fixed ohm, ±5%, 1/4 watt (unless otherwise stated)		
R1302	06-11009C57	2.2k
R1303	06-11009C49	1k
R1305	06-11009C97	100k
R1306	06-11009C19	56
switch		
S1301	40-80652E02	momentary switch

mechanical part	
14-80652E01	switch insulator

note: For best performance, order diodes, transistors, and integrated circuits by Motorola part number.

HLN5389A Microphone Hardware MXW-5475-O


REFERENCE SYMBOL	MOTOROLA PART NO.	DESCRIPTION
1	15-80137D05	front housing
2	38-80144D03	mic button
3	30-80223J01	6-conductor cable
4	05-80221K01	PTT switch grommet
8	32-80058H03	housing gasket
10	15-80137D03	rear housing (p/o rear housing assembly)
11	03-80076E04	hi-lo metric screw, 3 used
14	35-80089D01	felt baffle
15	05-80148D01	mic cartridge grommet (p/o HLN4384B)
16	39-10184A10	contact plug, 5 used

non referenced items	
03-10943M09	tapping screw (3 X 0.5 X 6)
54-84962K01	safety tag
33-80095E54	nameplate
04-80093E01	flat washer (p/o rear housing assembly)
46-80297N01	hang-up stud (p/o rear housing assembly)
46-80281G01	mic weight (p/o rear housing assembly)

HSN4018A Speaker MXW-2053-C


REFERENCE SYMBOL	MOTOROLA PART NO.	DESCRIPTION
1	03-00136756	tapping screw (10-16x 5/8)
2	15-10183A18	connector housing plug, 2-contact
3	39-10184A45	contact plug, 2 used
4	42-82018H05	cable retainer
5	42-84081A03	wire clamp with S-hook
6	03-00140001	tapping screw (6-19 x 7/8), 4 used
7	03-84244C03	black shadow wing screw, 2 used
8	50-80135E01	speaker
9	07-80200E01	black speaker trunnion bracket
10	13-82671M04	bezel
11	15-84981B07	speaker base cover
12	32-84564B01	speaker gasket

HLN4384B MICROPHONE BOARD

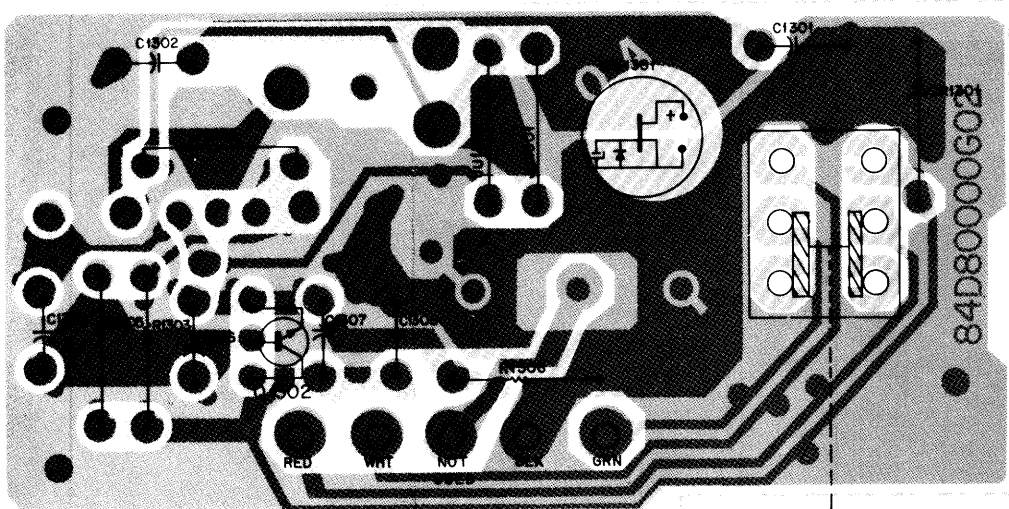


SHOWN FROM SOLDER SIDE

COMPONENT SIDE ⊕ GBW-3447-A  
SOLDER SIDE ⊕ GBW-3448-A  
OVERLAY ⊕ GBW-3449-A

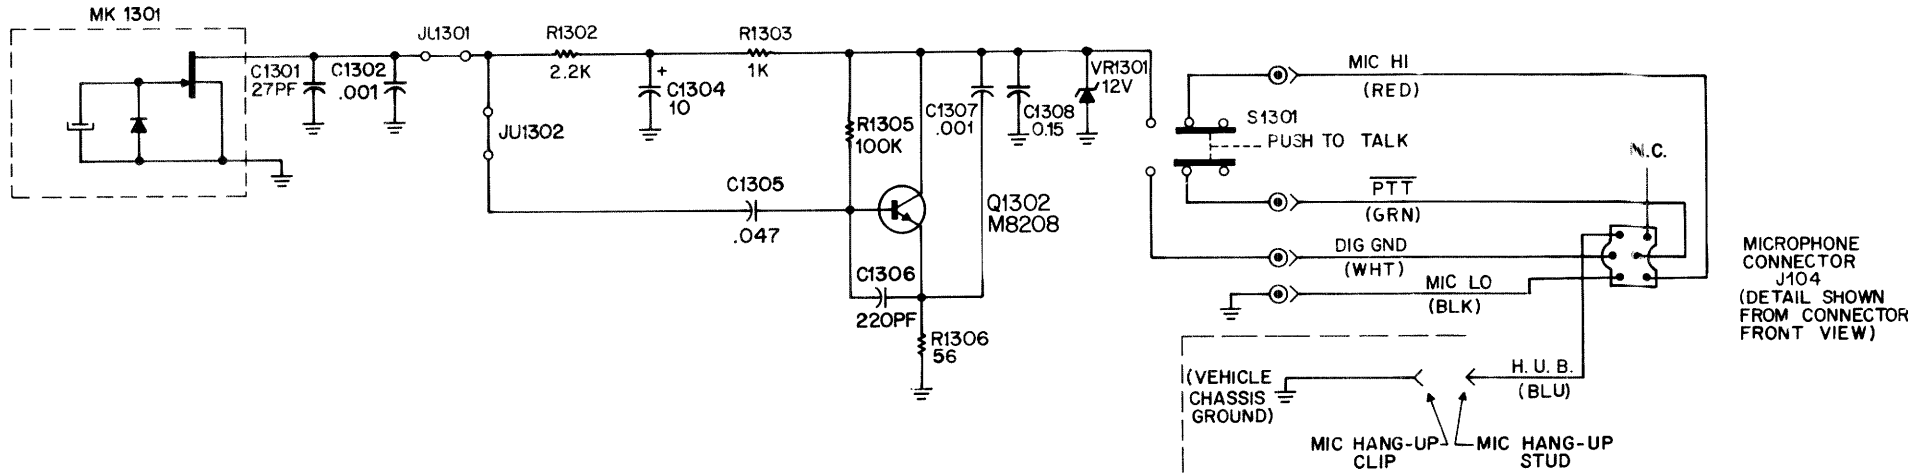


GCW-2050-A

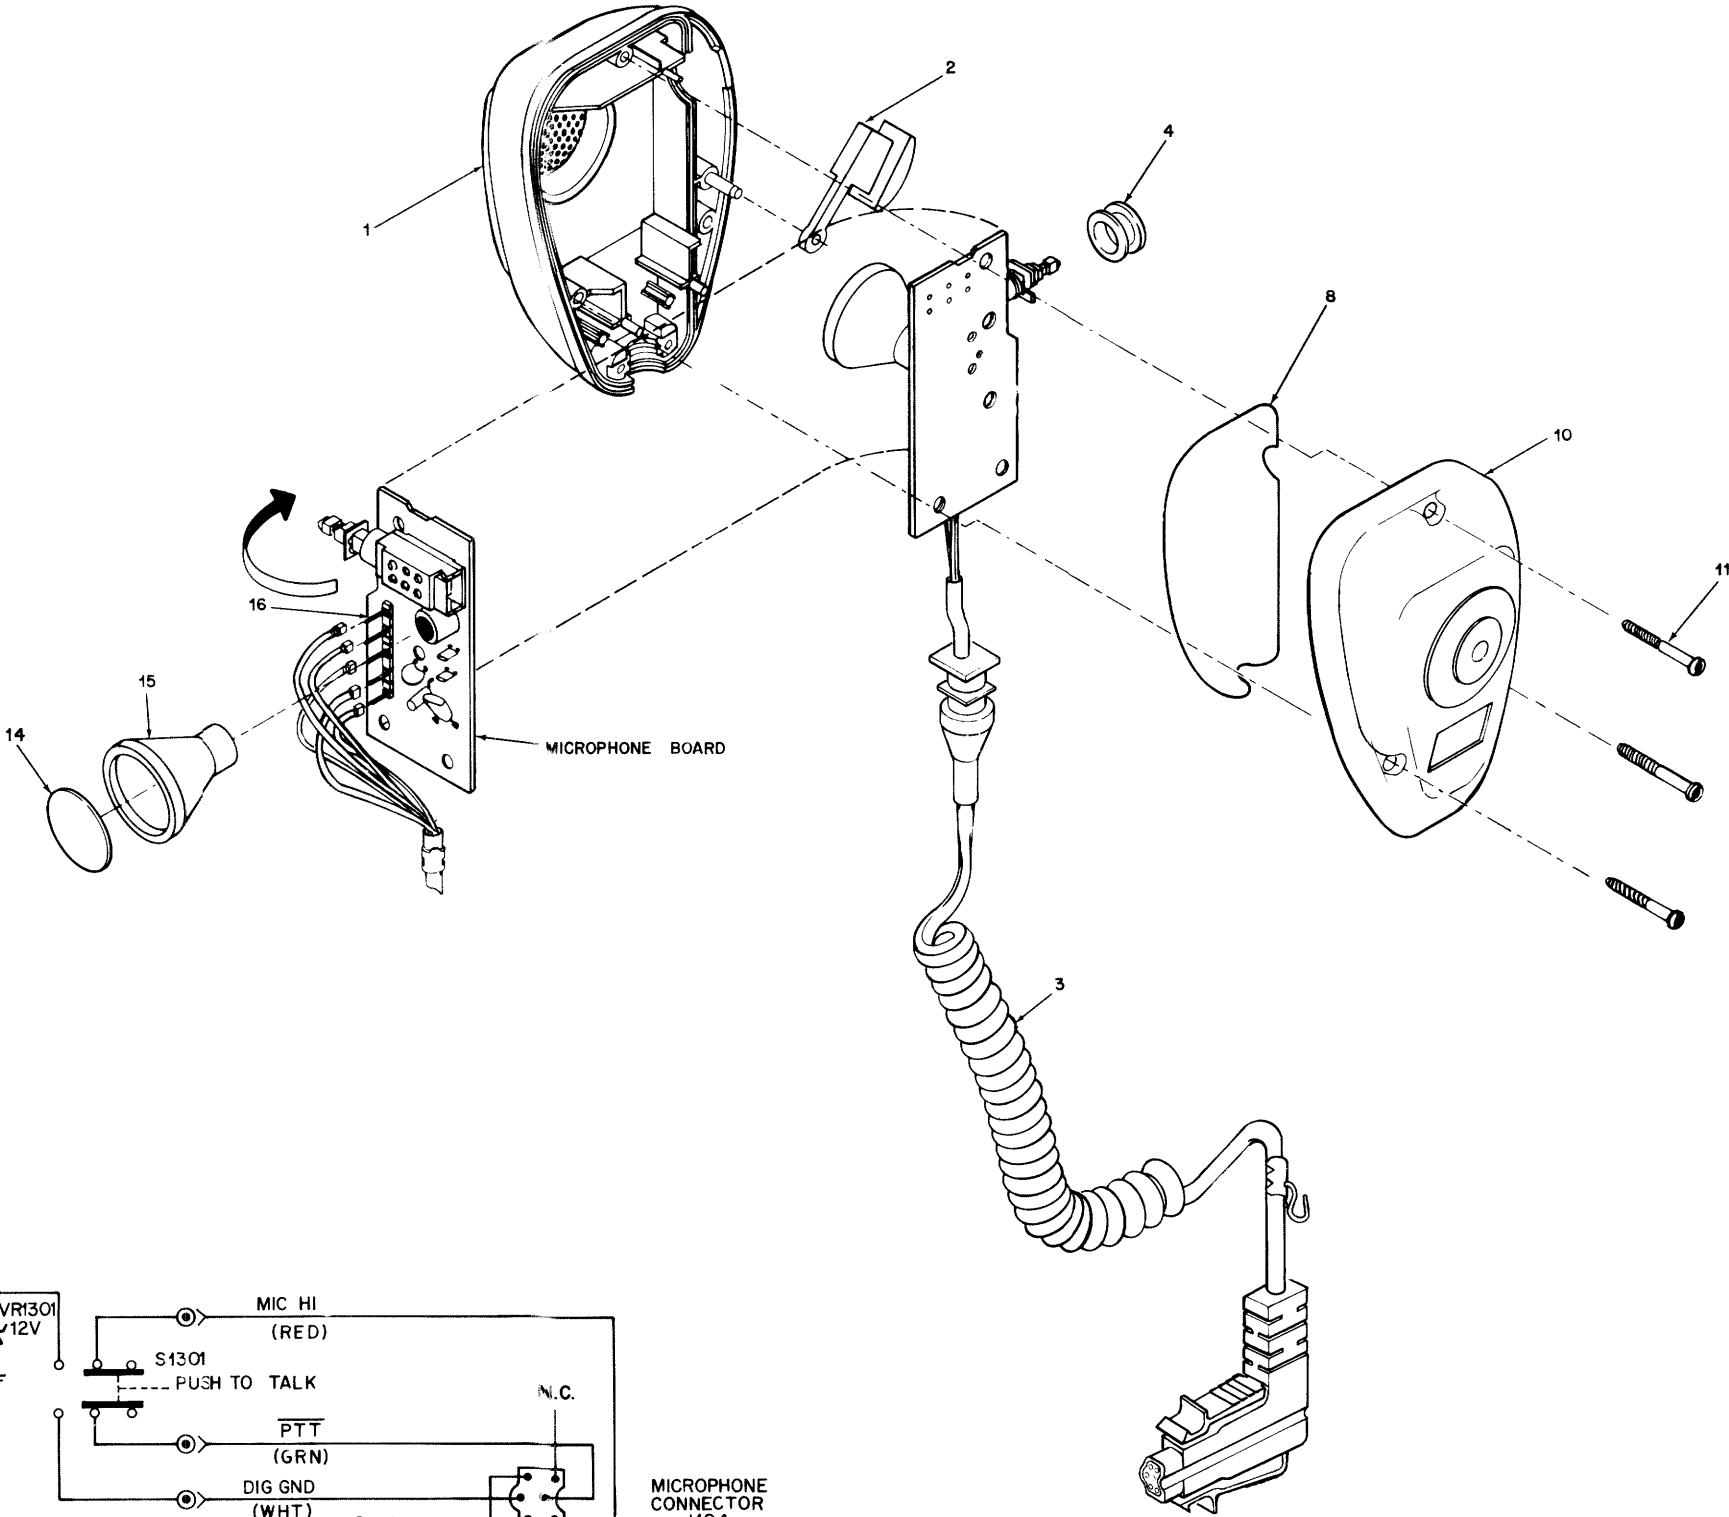

GDW-2049-A

FUNCTION

The palm microphone contains an amplifier to provide the radio with a high-level, noise-free audio input. The microphone also provides push-to-talk transmit control for the radio as well as off-hook channel monitoring (PL/DPL squelch disable) capability.

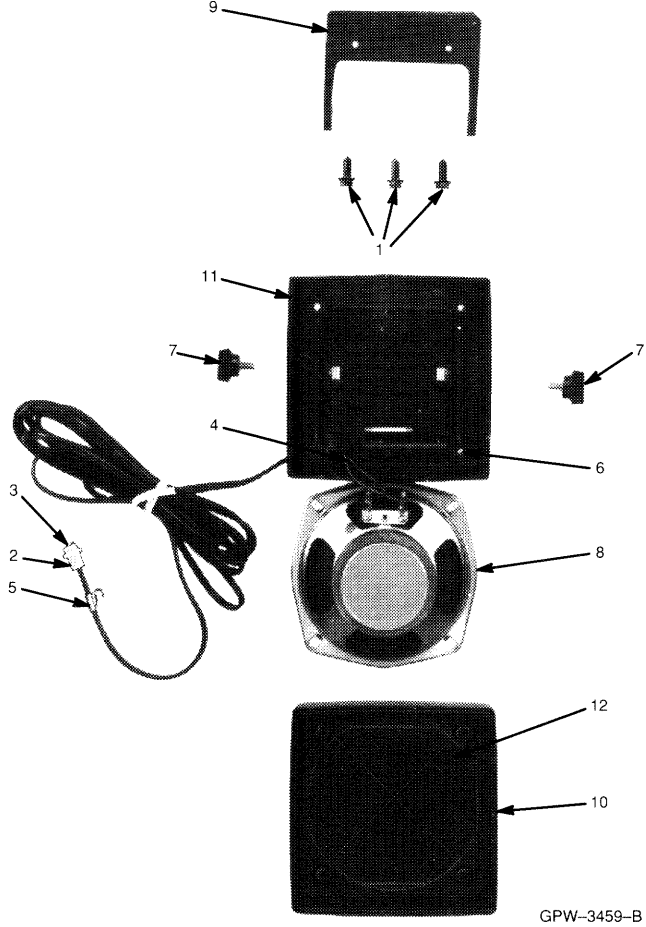

GPW-3459-B